

Section I – Installation Preparation

Part Number: PTR43-00083

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Performance Air Filter
2	1	Warning Label

General Applicability

4Runner - 4.0L V6 → 2010-
FJ Cruiser - 4.0L V6 → 2010-

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		

Conflicts

PPO Code	Description
None	N/A

Color Applicability/Trim Level

Accessory Color	Vehicle/Trim Color									
	N/A									
Vehicle/Trim Color	N/A									
N/A										

Recommended Tools







Safety Tools	
Safety Glasses	or Goggles
Special Tools	
Vehicle Protection	Blankets
Installation Tools	
None	
Special Chemicals	
Toyota Approved Cleaner	Prep Solvent 70 or similar

Recommended Sequence of Application

Item #	PPO Code	Accessory
	None	N/A

*Mandatory


Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.


A. Check Box Contents


1. Check box for contents and/or damage.

B. Vehicle Preparation






-  1. Use blankets to protect the front grille and passenger-side front fender area.

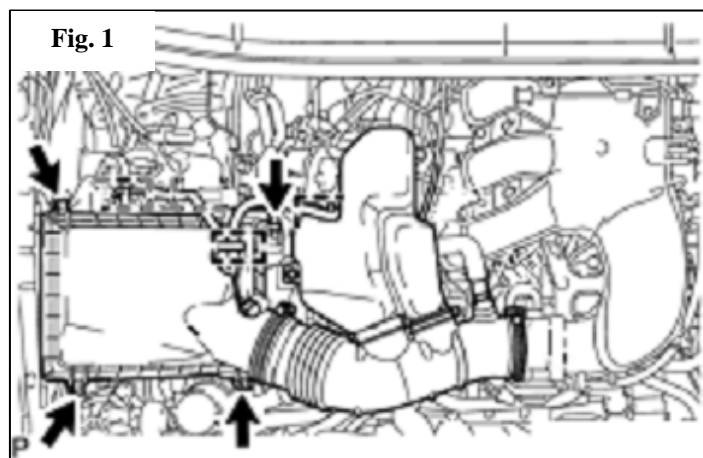
C. Removal Procedure: OE Air Filter

1. Remove the original equipment (OE) air filter.
 - i. Unlatch the four air filter housing clips. (Fig. 1)
 -  ii. Move the air filter housing lid upward to expose air filter.
 - iii. Remove OE air filter from air filter housing lid and discard the filter.



D. Installation Procedure: TRD Air Filter

1. Install the TRD air filter.
 -  i. Insert the TRD air filter into the air filter housing lid with the deep side of the filter into the housing base.
 -  ii. Engage the four clips to secure the housing assembly. (Fig. 2)
-  2. Use a lint free cloth and a Toyota approved cleaner such as 3M Prep Solvent 70 or similar to clean the air filter housing.
-  3. Use a lint free cloth and water to clean the same area as in Step 2 above.
-  4. Apply TRD air filter warning label to area pre-cleaned from the steps above. (Fig. 2)

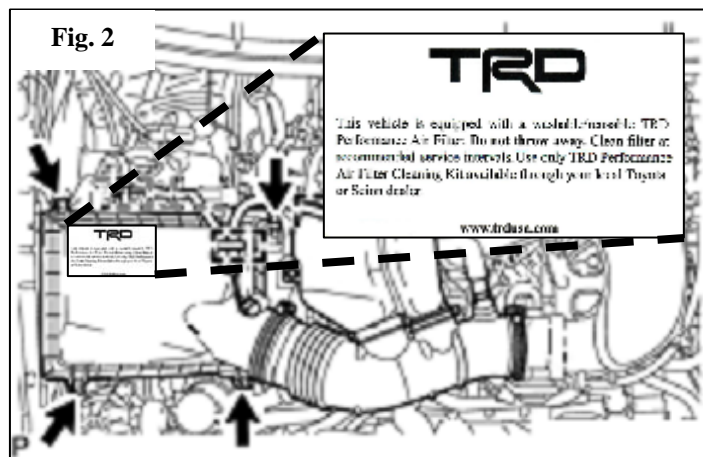

E. Post Installation

1. Remove blankets from front fender and grille area.



Section III – Functional Verifications

Check: _____

Look For: _____



Air filter housing lid

- Re-usable air filter warning label
- Air leaks/gaps