

Section I – Installation Preparation

Part Number: PTR43-00070

Kit Contents

Item #	Qty Reqd.	Description
1	1	Performance Air Filter
2	1	Warning Label

Additional Items Required For Installation

Item #	Qty Reqd.	Description
1		

Conflicts

PPO Code	Description
None	N/A

Recommended Tools

Safety Tools	
Safety Glasses	or Goggles
Special Tools	
Vehicle Protection	Blankets
Installation Tools	
None	
Special Chemicals	
Toyota Approved Cleaner	Prep Solvent 70 or similar

General Applicability

Tacoma - 4.0L V6 → 2005-2012
FJ Cruiser - 4.0L V6 → 2007-2009
4Runner - 4.0L V6 → 2003-2009
Tundra - 4.0L V6 → 2005-2010

Color Applicability/Trim Level







Accessory Color	Vehicle/Trim Color														
N/A	N/A														
N/A	N/A														

Recommended Sequence of Application

Item #	PPO Code	Accessory
	None	N/A

*Mandatory

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.

A. Check Box Contents

1. Check box for contents and/or damage.

 
 
B. Vehicle Preparation



1. Use blankets to protect the front grille and passenger-side front fender area.


C. Removal Procedure: OE Air Filter

1. Remove the original equipment (OE) air filter.
 - i. Unlatch two front air filter housing clips. (Fig. C1)
 - ii. Move front of air filter housing lid about 1-inch away from intake manifold to expose air filter. (Block arrow, Fig. C1)
 - ➔ iii. Move air filter housing lid towards front of vehicle to disengage rear locating tabs.
 - iv. Move air filter housing lid away from assembly to expose entire air filter. (Fig. C2)
 - v. Remove OE air filter from air filter housing lid and discard filter. (Fig. C2)

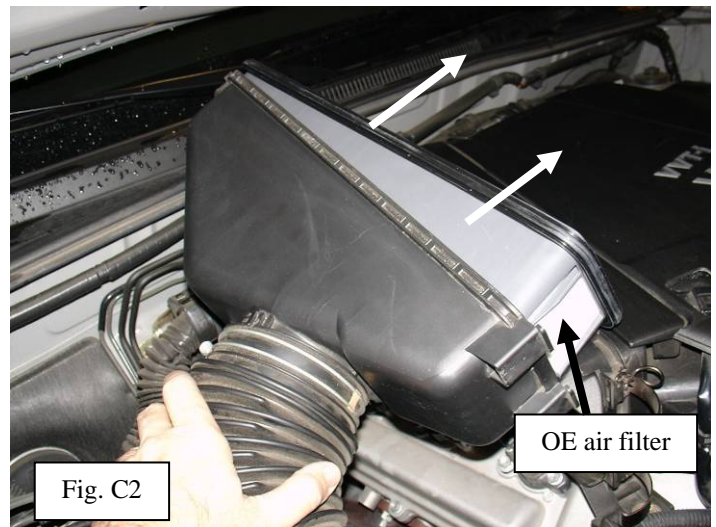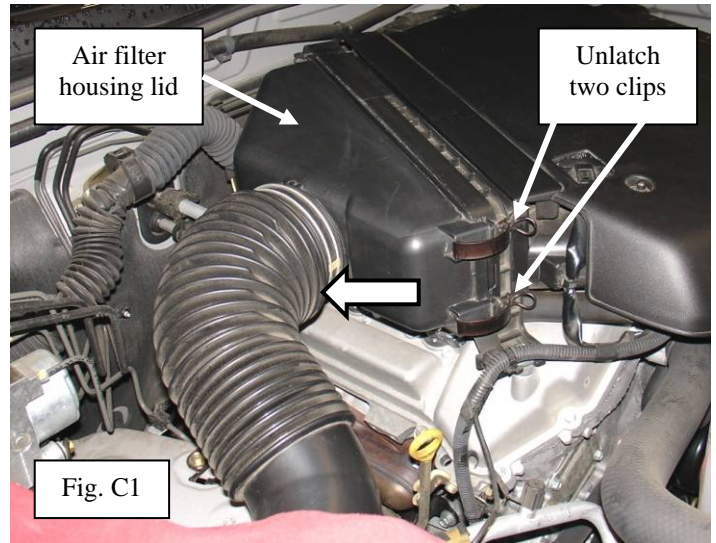

D. Installation Procedure: TRD Air Filter

 1. Install the TRD air filter.
 - ➔ i. Insert the TRD air filter into the air filter housing lid with the deep side of the filter into the lid. (Fig D1)
 - ➔ ii. Engage the rear locating tabs first from the lid into the housing assembly.

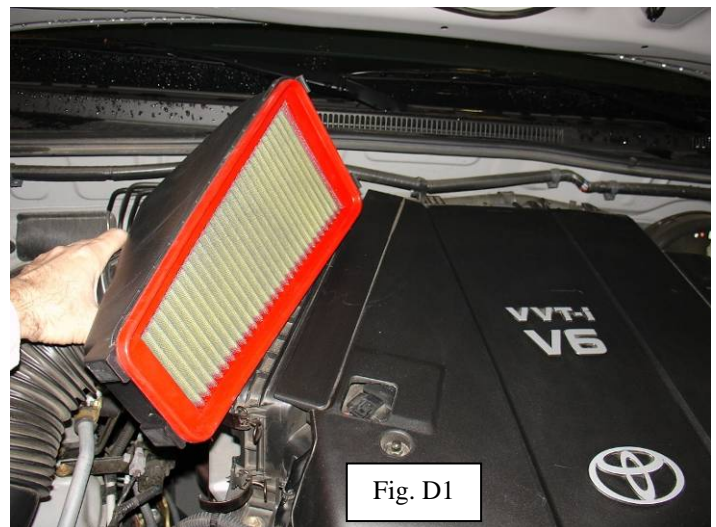

iii. Move front of air filter housing lid into place and re-latch two front air filter housing clips. (Fig. D2)

➔ 2. Use a lint free cloth and a Toyota approved cleaner such as 3M Prep Solvent 70 or similar to clean the air filter housing lid adjacent to the intake duct. (Fig. D2)

➔ 3. Use a lint free cloth and water to clean the same area as in Step 2 above. (Fig. D2)

⚠ 4. Apply TRD air filter warning label to area pre-cleaned from the steps above. (Fig. D3)

E. Post Installation

1. Remove blankets from front fender and grille area.





Section III – Functional Verifications

Check: _____

Look For: _____



Air Filter Housing Lid

- Re-usable air filter warning label

- Air leaks/gaps