 
Part #: PT398-03150

Conflicts:

 
Do not install into Vehicles without Factory Alarm System.

Kit Contents

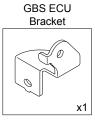 






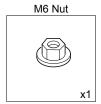



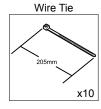









Service Part #'s

Additional Items

(may be required)

Item#	Description

Recommended Sequence of Application

Item#	Description

Recommended Tools

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Vehicle Protection	Blankets, Parts Boxes
Special Tools	
Striker Tool	CAD-E IADS P/N ALL 02-016-01
Installation Tools	
Screwdriver	#2 Phillips, Flat Blade Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01
Side Cutters	
Torque Wrench	Battery: 48 in•lbf (5.4 N•m),
	Passenger's Knee Airbag: 88.5 in•lbf (10 N•m)
Tape	Clear, Electrical
Socket	10mm, extension
Special Chemicals	
Cleaner	VDC Approved Cleaner
Glass Cleaner	Household Glass Cleaner

Table of Contents

I.	Preparation	1 – 3
	1. Table of Contents	
	2. Wire Routing Overview	
II.	Procedure	
	1. Vehicle Disassembly	
	2. GBS ECU Preparation and Installation.	
	3. V2 Harness Installation.	9
	4. Microphone Installation	
	5. Complete the Installation.	16
III.	l. Checklist	18–20
	Accessory Function Checks	18
	Vehicle Appearance Checks	18
	3. Vehicle Function Checks	19

 
Legend



Do not proceed until process has been completed.





Follow steps carefully to avoid damaging the Vehicle or Accessory

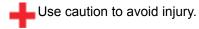



  
Used in Figures to call attention to specific tools recommended for the process.

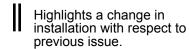

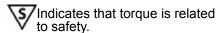



Video available; click to play.

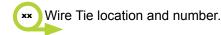 

Accessory Installation Practice (read before installation)

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your TOYOTA dealer for a copy of this document.

*Color of Harness on Overview corresponds with Colored Tape near Connectors on Harness.

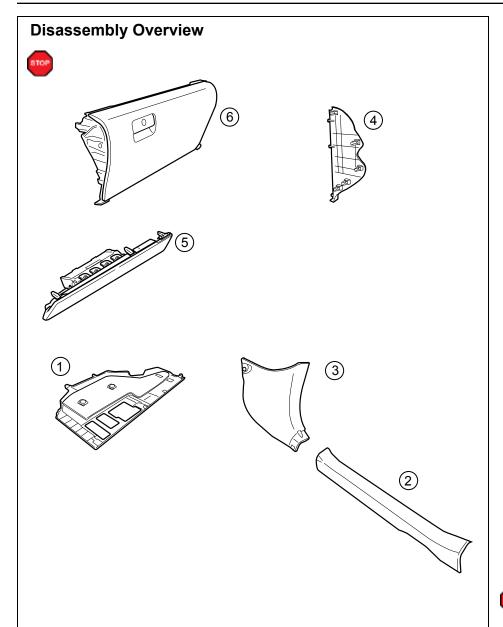

1	Glove Box Under Cover		
2	PS Step Cover		
3	PS Cowl Cover		
4	PS Dash Side Cover		
5	Knee Airbag (Do not disconnect connectors)		
6	Glove Box		
Disconnect all Corresponding Connectors.			

1. Vehicle Disassembly.

- a. Place the Vehicle in Park with the Parking Brake set.
- b. Disconnect the Negative Battery Terminal.
 - Note the Battery Cable Position as it will be re-installed in the same position.
- **CAUTION:** Do not touch the Positive Terminal.

c. Dislodge the Glove Box Under Cover.

d. Disconnect the Vehicle's Connector from the Glove Box Under Cover.

e. Remove the Passenger's Side Step Cover.

1

Issue: A 05/02/14 Page 5 of 20

GLASS BREAKAGE SENSOR (GBS)

- Side Cowl Cover.
 Remove 1 Nut.
- STOP

NOTE: If the clips stays in the vehicle, make sure to remove and re-attach to the Cowl Cover.

Remove the Passenger's

g. Remove the Passenger's Side Dash Cover.

- h. Dislodge the Passenger's Knee Airbag carefully.
 - · Remove 3 Bolts

 \triangle

CAUTION: Do not disconnect the Vehicle's Connector.

Issue: A 05/02/14 Page 6 of 20

- **GLASS BREAKAGE SENSOR (GBS)**
 - Place the Airbag on top of the TVIP box.

Wrap the Airbag in a Blanket



CAUTION: Prevent stress on the Airbag Wire.


or the like as shown.

k. Remove 2 Screws from the bottom of the Glove Box.

- Open the Glove Box.
- m. Dislodge the Glove Box.
 - · Remove 3 Screws.


Issue: A 05/02/14 Page 7 of 20

- n. Remove the Vehicle's clamp on the top left side of the Glove Box.
- o. Disconnect the Vehicle's Connector.
- p. Remove the Glove Box Light.

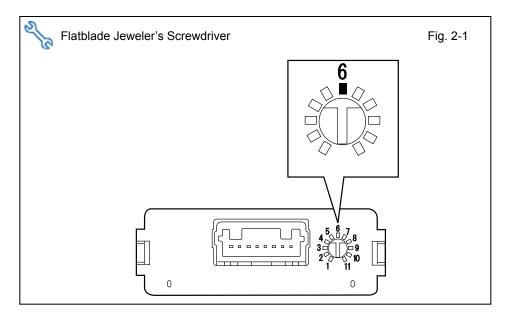

2. GBS ECU Preparation and Installation.

a. Set the GBS Sensitivity Value to "6."

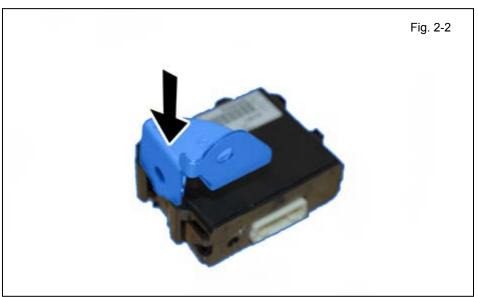

b. Attach the GBS ECU Bracket to the GBS ECU.

Issue: A 05/02/14 Page 8 of 20

c. Install the GBS ECU using the supplied Nut.



NOTE: Make sure the Guide Pin is seated correctly and verify that the Nut is tightened securely.

3. V2 Harness Installation.

a. Connect the V2 White 8P Connector to the GBS ECU.

b. Use the V2 Harness Clip to secure it to the hole on the Vehicle's Reinforcement.

Issue: A 05/02/14 Page 9 of 20

c. Use the V2 Harness Clamp to secure it to the Vehicle Harness.



NOTE: Place the V2 Harness parallel to the Vehicle Harness.



NOTE: Make sure to follow steps above to avoid interference with the Glove Box.

d. Remove the Tape securing the Vehicle's 8P Pre-connector.

e. Connect the V2 White 8P Connector to the Vehicle's 8P Pre-Connector.

Issue: A 05/02/14 Page 10 of 20



NOTE: Place the V2 Harness parallel to the Vehicle Harness.

Clamp to secure it to the Vehicle's Harness.



 
NOTE: Make sure to follow steps above to avoid interference with the Glove Box.

g. Route the V2 Ground Wire across the Glove Box area.

- h. Secure the V2 Ground Wire to the Vehicle Harness using 1 Wire Tie.
- i. Attach the V2 Ground Wire to the HVAC Wire Clamps along with the Vehicle Harness.

Issue: A 05/02/14 Page 11 of 20

k. Remove the Bolt from the Vehicle's Ground Terminal.

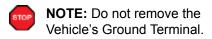

 Secure the V2 Ground Terminal to the Vehicle's Ground Terminal using the same Bolt.

Issue: A 05/02/14 Page 12 of 20

Vehicles With Smart Key

- m. Route the V2 Harness toward the Passenger's Side Cowl area.
- n. Secure the V2 Harness to the Vehicle Harness using 3 Wire Ties.

Vehicles Without Smart Key

- o. Route the V2 Harness toward the Passenger's Side Cowl area.
- p. Secure the V2 Harness to the Vehicle Harness using 2 Wire Ties.

q. Disconnect the Vehicle's White 18P Connector from the Passenger's Side Cowl Connector Block.

Issue: A 05/02/14 Page 13 of 20

s. Plug in the V2 White 18P Connector to the Vehicle's Connector Block.

t. Secure the 18P Connectors to the Vehicle Harness using 1 Wire Tie.


(For Vehicles without Smart Key, Wire Tie #6 will be #5 instead)

u. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.

(For Vehicles without Smart Key, Wire Tie #7 will be #6 instead)

Issue: A 05/02/14 Page 14 of 20

PROCEDURE

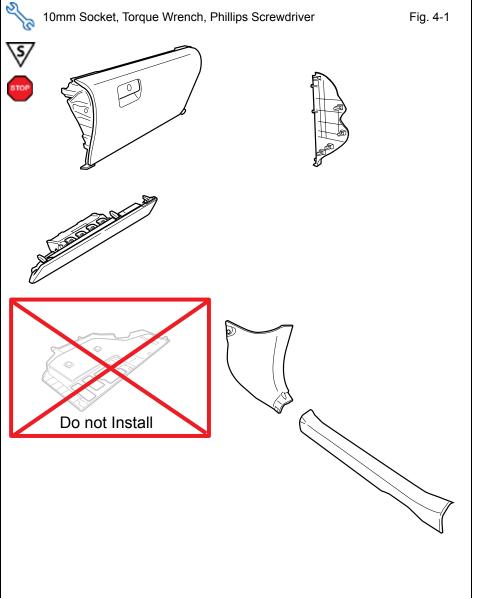

4. Microphone Installation.

 Reassemble the Vehicle except for the Glove Box Under Cover.



 
NOTE: When reinstalling Knee Airbag, make sure to tighten the Bolts to 88.5 in•lbf (10 N•m).




VERIFY: That all Connectors are plugged in.



VERIFY: That panels fit together properly, with no uneven gaps.

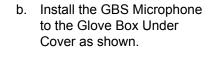

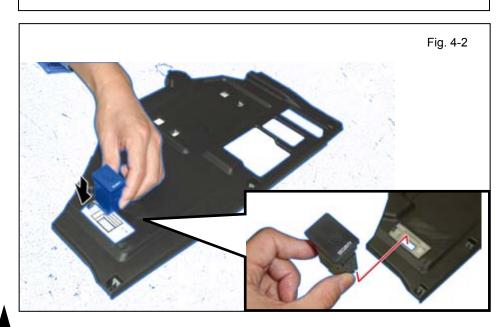

Issue: A 05/02/14 Page 15 of 20

- c. Connect the V2 White4P Connector to theMicrophone's Connector.
- d. Reconnect the Vehicle's Connector.
- e. Reinstall the Glove Box Under Cover.

 
5. Complete the Installation.

- a. Verify that the Short Pin is Installed.
 - · If not Install now.

For US Vehicles use the English Tags and Labels, and discard the Spanish Tags and Labels.

For Mexico Vehicles use the Spanish Tags and Labels, and discard the English Tags and Labels.

- Use Household Glass
 Cleaner to clean the inside of the Front Door Windows.
- Use a piece of Clear Tape to lift the Label off its protective backing.

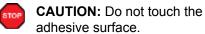

d. Attach the Label as shown.



NOTE: Make sure to Align the Label according to Etching or Other Label.

REPEAT: steps b-d with the other Window.

Issue: A 05/02/14 Page 16 of 20

e. Position the Negative Battery Cable at the original factory position.



Torque: Tighten Nut to 48 in•lbf (5.4 N•m)



CAUTION: Do not touch the Positive terminal.

- f. Clean up and Remove trash.
- g. Sealed in its protective bag, place the Owner's Manual in the Glove Box.

Issue: A 05/02/14 Page 17 of 20

CHECKLIST - these points MUST be checked to ensure a quality installation.

Accessory Function Checks

Roll up all windows, and exit the vehicle with the remote.



For Smart Vehicles: Take out the Smart Key and the Smart Card Key from the Vehicle. Place them 15 ft. (4.5 meters) or more away from the Vehicle.

Perform		Look For	
1	Lock the doors to start the system's arming process.	The turn signal lights flash once. All doors lock. The Security LED lights up.	
2	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	

Perform the following check in a temperature controlled environment (50°- 90°F)

3	With the tip of a key, or Striker Tool pulled all the way out (PPO only), tap the center of the driver's door windows to trigger the alarm.	The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.	
4	Insert the key into the driver's door key cylinder and turn it toward the back of the vehicle to stop the alarm.	The horn stops sounding. All the lights stop flashing and/ or turn off. The Security LED turns off.	



For Smart Vehicles: If the alarm does not trigger during functional verifications the Smart Key and Smart Card Key might be too close. Move them farther from the vehicle and test the system again.

NOTE: If the alarm still does not trigger during the section test, increase the GBS sensitivity to the next setting and test again.

NOTE: If you do not disarm the system, the alarm will last 20 seconds. It is not necessary to check the alarm duration.

Vehicle Appearance Check

	Perform	Look For
	After accessory installation and removal of protective cover(s), perform a visual inspection of the vehicle.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

Vehicle Function Checks

	Function			Function
En	ter the	Vehicle		
		Dome/Courtesy Lights		Steering Wheel Column Adjusts Without Interference
		Horn		
Sta	art the \	/ehicle		
		Panel/Switch Illumination		Gauges
		Check Engine Light If the warning light remains on, it may indicate a system malfunction.		ABS Light (if equipped) If the warning light remains on, it may indicate a system malfunction.
		Lamp Failure Sensor If the warning light remains on, it may indicate a system malfunction.		Track/Skid Control Light (if equipped) If the warning light remains on, it may indicate a system malfunction.
		Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction.		Tire Pressure Monitoring System (TPMS) Prior to TPMS activation and Pre-delivery
		Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction.		Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on. After TPMS activation and PDS of the Ve-
		Cruise Control Light (if equipped)		hicle the TPMS light will illuminate for a few seconds and go off when IG is turned on.
Us	sing a N	lirror or Assistant check the following.		
		Trunk/Tailgate/Bed Lights (if equipped)		Tail Lights
		Brake Lights		Daytime Running Lights (if equipped)
		Backup Lights		Marker Lights
		Clearance Sonar (if equipped)		
Stop the Engine, Place the Vehicle's IG in the ON position.				
		Hazard Lights		Turn Signal Lights
		Head Lights		Fog Lights (if equipped)
		High Beams		Accessory Controls/Illumination (if equipped)
		Power Side Mirrors (if equipped)		Convenience Memory Settings (if equipped)
		Power Sliding Door (if equipped)		Rear Sunshade (if equipped)

 $CHECKLIST-these\ points\ \textbf{MUST}\ be\ checked\ to\ ensure\ a\ quality\ installation.$

Function			Function	
	Front Wiper/Washer		Rear Wiper/Washer (if equipped)	
	Power Sun/Moon Roof (if equipped)		Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)	
	Clock (if equipped)		Navigation System (if equipped)	
	Audio/Video (if equipped)		USB Connections (if equipped)	
	Steering Wheel Audio Control (if equipped)		HVAC	
	Front Windshield Defogger (if equipped)		Rear Window Defogger (if equipped)	
	Side Mirror Defogger (if equipped)		Accessory Power Socket (if equipped)	
	Massage Seats (if equipped)		Heated/Vented Seats (if equipped)	
	Glove Box Light (if equipped)		Passenger Air Bag Switch (if equipped)	
	Power Locks (if equipped)		Power Windows (if equipped)	
	Power Seats (if equipped)		Key Sensor Buzzer	

Issue: A 05/02/14 Page 20 of 20