# Part Number: PT278-89100

#### **Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Front Crossbar Assembly
2	1	Rear Crossbar Assembly
3	1	Hardware Bag

#### Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	2	Rubber Stoppers
2		
3		

#### **Additional Items Required For Installation**

Quantity Reqd.	Description
-	

#### Conflicts

#### **Recommended Tools**

Personal & Vehicle	Notes	
Protection		
Safety Goggles		
Blankets		
Wrist & Belt Buckle		
Protectors		
Special Tools	Notes	
<b>Installation Tools</b>	Notes	
Nylon Panel Removal Tool		
T30 Torx Head Screwdriver		
T30 Torx Head Socket		
Torque Wrench		
Torque Wrench	Notes	
Torque Wrench Tape Measure	Notes	
Torque Wrench Tape Measure	Notes	

#### **General Applicability**

All Base and Limited Models with Side Rails

#### **Recommended Sequence of Application**

Item #	Accessory
1	
2	
3	

\*Mandatory

#### Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

#### Legend



Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.







#### 1. Install the Cross Bar.

- (a) Carefully remove the rear rail covers (Fig. 1-1).
  - (1) Use a nylon panel removal tool to pry the cover outward at the tabs.
  - (2) Press down on the inward side and rotate the cover.
  - (3) Keep the covers for reinstallation.
- (b) Loosen the knobs (4x) on each cross bar joint (Fig. 1-2).

- (c) Slide the cross bars into the rails with the tiedown loops toward the center of the vehicle (Fig. 1-3).
- **NOTE:** The cross bar ends are labeled LF (left front), RF (right front), LR (left rear) and RR (right rear) for reference.



# Fig. 3-1



### 2. Position the Cross Bars.

- (a) Position the front and rear cross bars so they are parallel.
- (b) Place the front cross bar 145mm (5.7 inches) from the back of the front cover to the cross bar center (Fig. 2-1).
- (c) Place the rear cross bar 700mm (27.6 inches) from the front cross bar center to the rear cross bar center (Fig. 2-1).
- (d) Securely tighten the knobs.
- (e) Tighten the LH and RH side M6 wafer head screws to 1.7 N-m (15 in-lbf).

## Torque: 1.7 N-m (15 in-lbf)

(f) Remove and discard the front and rear yellow cross bar position labels (Fig. 2-1).

# 3. Install the Rear Covers & Stoppers.

- (a) Replace the rear covers removed in Step 1(a) (Fig. 3-1).
- (1) Align the rear cover clips with the slots on the base rail.
  - (2) Press down until the cover snaps into position.

# NOTE: Confirm the covers are installed securely.

(b) Press the stopper into the groove of the side rail on both sides of the vehicle (Fig. 3-2).

Check:	Look For:
Accessory Function Checks	
Cross bars are secure & in correct position	Knobs are tight, front cross bar center at 145mm (5.7") from front cover & 700mm between cross bar centers
Cross bars are not bound	Cross bars slide freely
<ul> <li>Rear covers securely attached</li> </ul>	Cover clips are fully engaged
Vehicle Function Checks	
Vehicle Appearance Check         After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)