(See 'General Applicability' for Model Listing) Preparation



Part Number: PTR43-00090

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Performance Air Filter
2	1	Warning Label

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		

Conflicts

PPO Code	Description	
None	N/A	

Recommended Tools

Safety Tools	
Safety Glasses	or Goggles
Special Tools	
Vehicle Protection	Blankets
Installation Tools	
None	
Special Chemicals	
Toyota Approved Cleaner	Prep Solvent 70 or similar

General Applicability

Land Cruiser - 5.7L V8 \rightarrow 2008-
Sequoia – 4.6L, 4.7L & 5.7L V8 → 2008-2013
Tundra - 4.6L, 4.7L & 5.7L V8 → 2007-2013

Recommended Sequence of Application

Item #	PPO Code	Accessory
	None	N/A

*Mandatory

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
OPERATOR SAFETY: Use caution to avoid risk of injury.
<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
REVISION MARK: This mark highlights a change in installation with respect to previous issue.
SAFETY TORQUE: This mark indicates that torque is related to safety.



PTR43-00090

Procedure



A. Check Box Contents

1. Check box for contents and/or damage.

B. Vehicle Preparation


1. Use blankets to protect the front grille and passenger-side front fender area.


C. Removal Procedure: OE Air Filter

- 1. Remove the factory air filter.
 - Unlatch four air filter housing clips. (Fig. C1)
 - ii. Lift air filter housing lid up to expose factory air filter. (Fig. C2)
 - iii. Remove factory air filter from air filter housing and discard filter. (Fig. C2)

D. Installation Procedure: TRD Air Filter

- 1. Install the TRD air filter.
- i. Insert the TRD air filter into the air filter housing with the deep side of the filter down in the housing. (Fig D1)

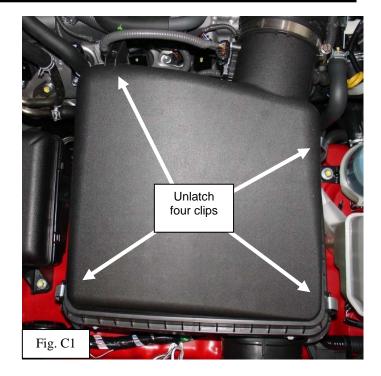

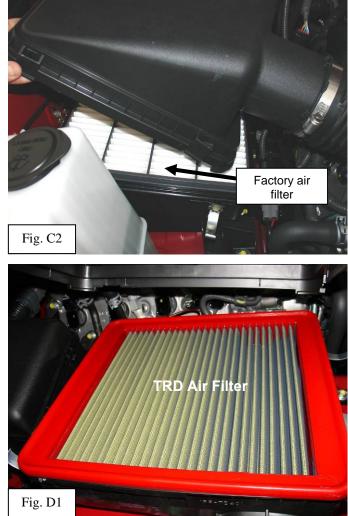




- ii. Move air filter housing lid into place. (Fig. D2)
 - iii. Re-latch all four air filter housing clips. (Fig. C1)



- Use a lint free cloth and a Toyota approved cleaner such as 3M Prep Solvent 70 or similar to clean the air filter housing lid adjacent to the intake duct. (Fig. D3)
- 3. Use a lint free cloth and water to clean the same area as in Step 2 above. (Fig. D3)

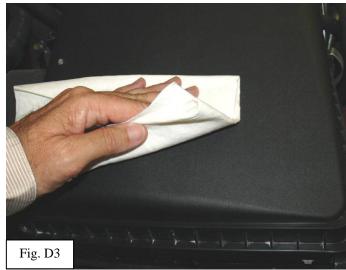




4. Apply TRD air filter warning label to area pre-cleaned from the steps above. (Fig. D4)

E. Post Installation

1. Remove blankets from front fender and grille area.

 Issue: D 8/25/13

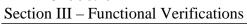



<u>.</u>//

Section III – Functional Verifications

Check:

Air Filter Housing Lid

Look For:

• Re-usable air filter warning label

PERFORMANCE AIR FILTER

• Air leaks/gaps