SEQUOIA/TUNDRA TACOMA





Preparation

Part Number: PTR03-34140

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Performance Air Filter
2	1	Warning Label
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

TRD Performance Air Intake Kit (filter included) TRD Super Charger Kit (filter included)

Recommended Tools

Personal & Vehicle	Notes
Protection	
Safety Glasses or Goggles	
Blankets	
Special Tools	Notes
Installation Tools	Notes
None	
Special Chemicals	Notes
VDC Approved Cleaner	Prep Solvent 70 or similar

General Applicability

Tundra: 4.6L & 5.7L V8 2014 →	
Sequoia: 5.7L V8 2014 \rightarrow	
Tacoma: 3.5L V6 2016 \rightarrow	

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1	1	TRD Filter Cleaning Kit
		(PTR43-00088)
2		
3		

Legend







Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

 
These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

1. Prepare the Vehicle and Parts.




- (b) Open the vehicle hood.
- (c) Familiarize yourself with the installation and components before beginning.

(d) Apply vehicle protection to prevent damage to painted surfaces.

2. Remove the Factory Air Filter.


(a) Unlatch the two (2) air filter housing clips (Fig. 2-1).

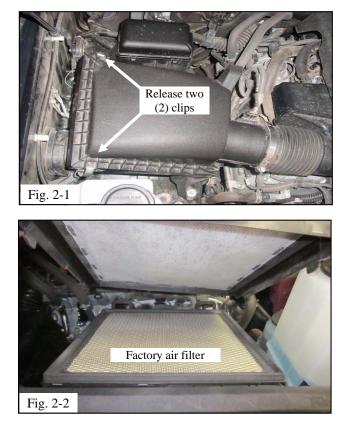

- (b) Lift the filter housing lid up to expose the factory air filter (Fig. 2-2).
- (c) Remove the factory air filter from the filter housing and discard it.

TRD PERFORMANCE AIR FILTER

Procedure

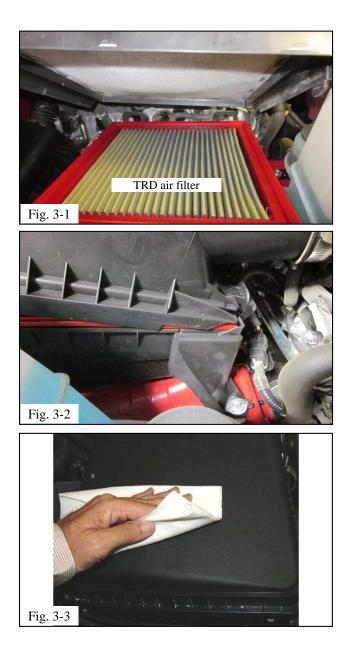

3. Install the TRD Air Filter.

(a) Insert the TRD air filter into the air filter housing with the deep side of the filter down in the housing (Fig. 3-1).

- (b) Move the air filter housing lid into place and engage the two (2) tabs (Fig. 3-2).
- (c) Re-latch the two (2) air filter housing clips (Fig. 2-1).
- (d) Use a lint free cloth and a VDC-approved cleaner such as 3M Prep Solvent 70 or similar to clean the air filter housing lid adjacent to the intake duct (Fig. 3-3).
- (e) Use a lint free cloth and water to clean the same area as in Step 3(d) (Fig. 3-3).



Procedure



(f) Apply the TRD air filter warning label to the pre-cleaned area (Sequoia/Tundra Fig. 3-4, Tacoma Fig. 3-5).

4. Finish the Installation.

(a) Remove the vehicle protection used to prevent damage to painted surfaces.

TOYOTA SEQUOIA/TUNDRA

UOIA/TUNDRA 2014 -TACOMA 2016 - TRD PERFORMANCE AIR FILTER

Checklist - these points MUST be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks	
Air Filter Housing Lid	Reusable air filter warning label
Vehicle Function Checks	
Air Filter Housing Lid	Air leaks/gaps
Vehicle Appearance Check	
After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)