TOYOTA PriusPrime 2017- TVIP V5
PREPARATION Prius 2016- RS3200 PLUS

Part Number: PT398-47160

Conflicts

Recommended Sequence of Application

Item#	Quantity	Description

Kit Contents

Item#	Item# Quantity Description	
1	1	V5 Wire Harness
2	1	GBS ECU Mounting Bracket

Hardware Bag Contents

Item#	Quantity	Description
1	1	GBS ECU 08190-0C820
2	1	GBS ECU Mounting Bracket
3	1	Foam Tape
4 20 Wi		Wire Ties
5 1 Vinyl S		Vinyl Sheet
6	1	M6 Bolt 91651-60618
7	1	GBS Microphone 08192-6C810
8	2	V5 Window Label English 00107-VIPWS
9	2	V5 Window Label Spanish PT398-48142-AA
10	1	V5 Owner's Guide

Additional Items Required For Installation

Item#	Quantity	Description

Recommended Tools

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Blankets, Parts Boxes	
Special Tools	
Techstream	Version 10.30.029 or later
Striker Tool	CAD-E IADS P/N ALL 02-016-01
Wiring Terminal Tool	CAD-E IADS P/N ALL 02-016-03
	P/N 49YA000056
Installation Tools	
Screwdriver	#2 Phillips, Flat Blade Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01
Side Cutters	
Pliers	
Torque Wrench	Battery: 48 in•lbf (5.4 N•m), Bracket Bolt: 71 in•lbf (8 N•m),
Таре	Clear, Electric
Pick Tool	
Utility Knife	
Socket	10mm, extension
Special Chemicals	
Cleaner	VDC Approved Cleaner

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



CAUTION: : A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS AND EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



REVISION MARK: This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.



WIRE TIE LOCATION: Wire Tie location number.



PREVIOUS WIRE TIE LOCATION: This mark indicates a previously installed Wire Tie.

Accessory Installation Practice (read before installation)

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your Toyota dealer for a copy of this document.

Issue H : 11/22/16

TVIP V5



CAUTION: There are two Sensitivity Values for the GBS ECU.





You must first determine which Glass your vehicle has.

Perform the Following.

- a. Roll down the Driver's window partway.b. Look at the edge of the window.



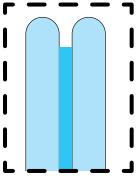

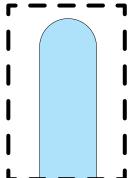


THIS VEHICLE HAS ACOUSTIC WINDOWS


You will need to use sections highlighted in Grey for this Vehicle.


THIS VEHICLE HAS UV WINDOWS

You will need to use sections highlighted in GREEN for this Vehicle.

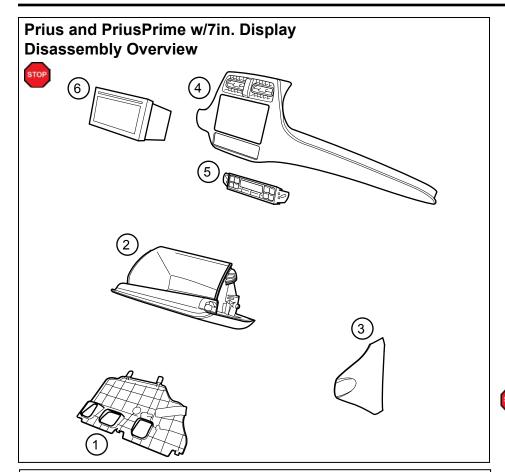

	1	Glove Box Under Cover		
	2	Glove Box		
	3	PS Dash Cover		
	4	Center Cluster Panel		
	5	Center Sub Cluster Panel		
	6	Audio Unit		
STO	Disconnect all Corresponding Connectors.			

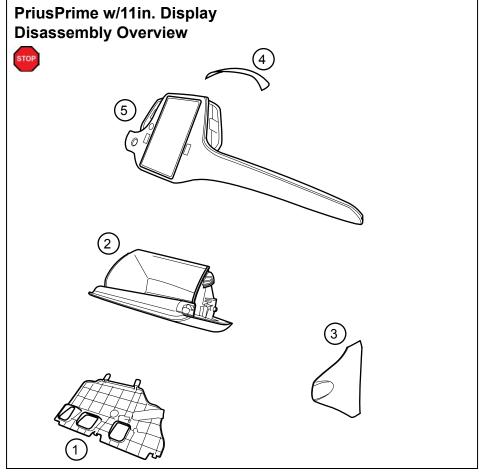

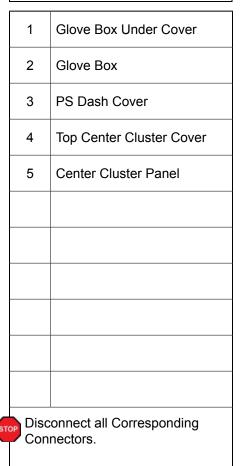

1. Preparation.

- a. Place the Vehicle in Park with the Parking Brake set. (Fig. 1-1)
- b. Disconnect the Negative Battery Terminal. (Fig. 1-1)
 - Note the Battery Cable Position as it will be re-inslalled in the same position.



CAUTION: Do not touch the Positive Terminal. (Fig. 1-1)

NOTE: Ensure all disassembled Vehicle Parts are thoroughly inspected. (Fig. 1-1)

2. Vehicle Disassembly.

- a. Dislodge the Glove Box Under Cover. (Fig. 2-1)
 - · Disconnect all connectors.

- b. Disconnect the Damper from the Glove Box. (Fig. 2-2)
- c. Remove the Glove Box. (Fig. 2-2)

Issue H : 11/22/16 Page 7 of 36

d. Remove the Passenger's Side Dash Cover. (Fig. 2-3)

e. Confirm if the vehicle includes a clip inside the Passenger's Side Dash as shown. (Fig. 2-4)

If the vehicle does not have the clip, proceed to the following step.

f. Tilt and extend the Vehicle's Steering Wheel to the upward position before moving forward with the Vehicle's Disassembly. (Fig. 2-5)

PriusPrime w/ 11in Display ONLY



NOTE: Skip to step v for Prius and PriusPrime w/7in. display.

- g. Apply protective tape to the areas shown in the illustration. (Fig. 2-6)
- h. Using a Nylon Panel Removal Tool, disengage the 4 clips as shown in the illustration. (Fig. 2-6)
- i. Disengage the claw and 2 clips as shown in the illustration. (Fig. 2-7)

j. Disengage the claw, clip and base of the front pillar garnish clip as shown in the illustration. (Fig. 2-8)

Issue H : 11/22/16 Page 9 of 36

- k. While pushing the tabs of the front pillar garnish clip as shown in the illustration, remove the center instrument cluster finish panel upper. (Fig. 2-9)
- NOTE: The front pillar garnish clip is reusable if it is not damaged.
- NOTE: If the front pillar garnish clip is damaged, replace it with a new
 - While pushing the tab of the front pillar garnish clip shown in the illustration with your finger, move the front pillar garnish clip in the direction shown in the illustration. (Fig. 2-9)
 - m. While pulling the front pillar garnish clip as shown in the illustration, push the tab of the front pillar garnish clip shown in the illustration with a screwdriver and disengage the front pillar garnish clip. (Fig. 2-9)
 - n. Remove the Top Center Cluster Cover. (Fig. 2-9)

- o. Remove the 2 Bolts from inside of the Center Cluster Panel as shown. (Fig. 2-10)
 - Remove 2 Bolts.

Issue H : 11/22/16 Page 10 of 36

PROCEDURE

- p. Wrap the Center Cluster Panel in a Protective Blanket. (Fig. 2-11)
 - · Apply Protection tape to the corner of the Center Cluster Panel and don't remove until it is re-installed.
- q. Slowly Dislodge and place the Center Cluster Panel on the Vehicle Bracket as shown. (Fig. 2-11)
 - Avoid excessive force to avoid damage to the rear side connectors.
 - Remove the Center Cluster Panel. (Fig. 2-11)
- **NOTE:** Use caution when removing the Center Cluster Panel due to its weight. (Fig. 2-11)
 - s. Remove Clip by reaching inside the Center Cluster Panel as shown. (Fig. 2-12)
 - · Remove 1 Clip.
- NOTE: Disconnect all connectors, except the connectors shown. (Fig. 2-12)
 - Remove the Center Cluster Panel. (Fig. 2-12)

Continue to Section 3



- Remove Clip by reaching inside the Passenger's Side Dash as shown. (Fig. 2-13)
 - · Remove 1 Clip.
- Remove the Center Cluster Panel. (Fig. 2-13)
- **NOTE:** Use caution when removing the Center Cluster Panel due to it's weight. (Fig. 2-13)

Issue H: 11/22/16 Page 11 of 36

- w. Remove the Center Sub Cluster Panel. (Fig. 2-14)
 - · Remove 2 Screws.
- x. Carefully remove the Vehicle Harness Clip as shown. (Fig. 2-14)




NOTE: Ensure all disassembled Panel connectors are carefully disconnected. (Fig. 2-14)

- y. Remove the Audio Unit. (Fig. 2-15)
 - · Remove 4 Bolts.



NOTE: Disconnect all connectors, except the connectors shown. (Fig. 2-15)

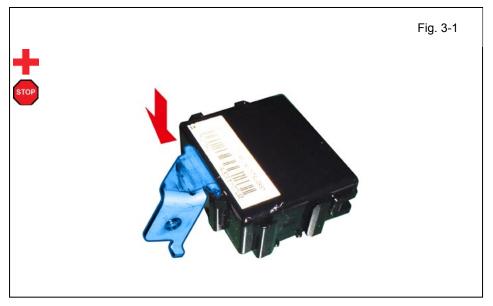

- 3. GBS ECU & V5 Harness Preparation and Installation.
- +


CAUTION: Use gloves during wire tie and ECU installation. (Fig. 3-1)

STOP

NOTE: Ensure all Kit Parts are thoroughly inspected before installation. (Fig. 3-1)

a. Attach GBS ECU Bracket to the GBS ECU as shown. (Fig. 3-1)


Issue H : 11/22/16 Page 12 of 36

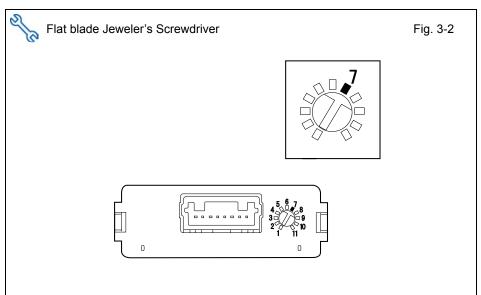

Vehicles with UV windows ONLY

STOP b.

b. Set the GBS Sensitivity Value to 7. (Fig. 3-2)

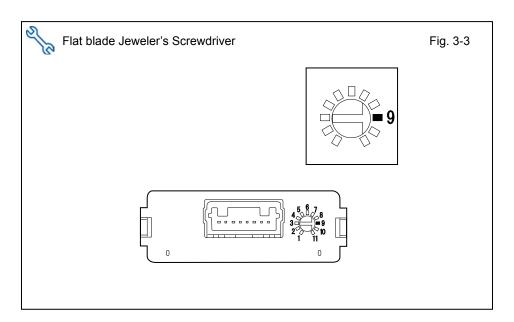

Vehicles with Acoustic windows ONLY

c. Set the GBS Sensitivity Value to "9". (Fig. 3-3)

- d. Cut one Quarter piece from the Vinyl Sheet and save for later use. (Fig. 3-4)
- e. Cut one long Quarter piece from the remaining Vinyl Sheet as shown and save for later use. (Fig. 3-4)
- f. Cut the long quarter piece in half. (Fig. 3-4)



- g. Plug the V5 8P White Connector to the GBS ECU. (Fig. 3-5)
- h. Use the one Short Quarter Piece of Vinyl Sheet and wrap around bare harness, then apply Electrical Tape over the Vinyl Sheet. (Fig. 3-5)



NOTE: When applying Electrical Tape; avoid putting too much strain on the bare 8P White Connector wires. (Fig. 3-5)

- i. Place the GBS ECU on the Vehicle Brace in the Glove Box Area. (Fig. 3-6)
- j. Install the GBS ECU using the supplied Bolt. (Fig. 3-6)

Torque: 8 N·m (71 in·lbf)



NOTE: Ensure all Kit Parts are thoroughly inspected before installation. (Fig. 3-6)

- k. Secure both the V5 Harness branches to the Vehicle Reinforcement using 1 Wire Tie (#1). (Fig. 3-7)
- Secure the V5 Harness to the Vehicle Brace using 1 Wire Tie (#2). (Fig. 3-7)
- m. Secure the V5 Harness to the HVAC Bracket using 1 Wire Tie (#3). (Fig. 3-7)
- n. Route the V5 Harness upward and toward the Audio Unit area. (Fig. 3-7)

Issue H : 11/22/16 Page 14 of 36

PriusPrime w/ 11in Display ONLY



NOTE: Skip to step q for Prius and PriusPrime w/7in. display.

o. Continue to route the V5
Harness upward and toward
the Audio Unit area and behind
the Vehicle Harness. (Fig. 3-8)

p. Plug in the V5 2P Connector to the Vehicle's 2P Connector. (Fig. 3-9)

Continue to Section 3, step s

Prius and PriusPrime w/7in. Display ONLY

q. Continue to route the V5 Harness upward and toward the Audio Unit area and behind the Vehicle Harness. (Fig. 3-10)

Issue H : 11/22/16 Page 15 of 36

TOYOTA

PROCEDURE

r. Plug in the V5 2P Connector to the Vehicle's 2P Connector. (Fig. 3-11)

s. Disconnect the Vehicle's Glove Box Lamp 2P Connector. (Fig. 3-12)



CAUTION: Do not pull the 2P Connector's Harness. (Fig. 3-12)

t. Plug in the V5 2P Connector to the Vehicle's Glove Box Lamp 2P Connector. (Fig. 3-13)

1

 Plug in the V5 2P Connector to the Vehicle's Glove Box Lamp 2P Connector. (Fig. 3-14)

- Wrap the V5 Harness using the Short Quarter Piece of Vinyl Sheet as shown. (Fig. 3-15)
- w. Secure the V5 Harness to the Vehicle Reinforcement using 1 Wire Tie (#4). (Fig. 3-15)
- x. Secure the V5 2P Connector to the Vehicle's Reinforcement using 1 Wire Tie (#5). (Fig. 3-15)



CAUTION: Avoid strain on the 2P Connector's Harness. (Fig. 3-15)



CAUTION: Ensure all bare wire and Connectors are secured within the Vinyl Sheet and Electrical Tape. (Fig. 3-15)

PriusPrime w/ 11in Display ONLY



NOTE: Skip to step ab for Prius and PriusPrime w/7in. display.

y. Secure the V5 Harness in the Audio Unit area to the Vehicle Harness using 2 Wire Ties (#6 & #7) as shown. (Fig. 3-16)

Issue H : 11/22/16 Page 17 of 36

z. Secure the V5 Harness to the air conditioner unit using 2 Wire Ties (#8 & #9) as shown. (Fig. 3-17)



CAUTION: Avoid contact between the V5 Harness and all surrounding Sharp Clip edges. (Fig. 3-17)



NOTE: Do not secure the surrounding 2P Connector wires. (Fig. 3-17)

aa. Secure the V5 Harness to the Vehicle Harness using 1 Wire Tie (#10). (Fig. 3-17)

Continue to Step ag

Prius and PriusPrime w/7in. Display ONLY

ab. Secure the V5 Harness to the Vehicle Harness using 1 Wire Tie (#6). (Fig. 3-18)

ac. Secure the V5 Harness to the Vehicle Harness towards the Driver's Side Using 1 Wire Tie (#7). (Fig. 3-19)



CAUTION: Avoid contact between the V5 Harness and all surrounding Sharp Clip edges. (Fig. 3-19)



NOTE: Do not secure the surrounding 2P Connector wires. (Fig. 3-19)


ad. Secure the V5 Harness to the air conditioner unit using 1 Wire Tie (#8). (Fig. 3-19)

Issue H : 11/22/16 Page 18 of 36

ae. Secure the V5 Harness to the air conditioner unit using 1 Wire Tie (#9). (Fig. 3-20)

TVIP V5

af. Secure the V5 Harness to the Vehicle Harness using 1 Wire Tie (#10). (Fig. 3-20)

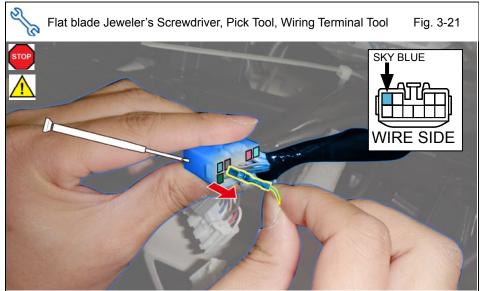


ag. Pull out the Vehicle's Sky Blue Wire Terminal from the indicated location on the 10P Vehicle Connector. (Fig. 3-21)



NOTE: Do not pull out the White and Blue Wire Terminal on the opposite side of the connector. (Fig. 3-21)




CAUTION: Using a pick tool or wiring terminal tool, release and pull out the terminal. (Fig. 3-21)

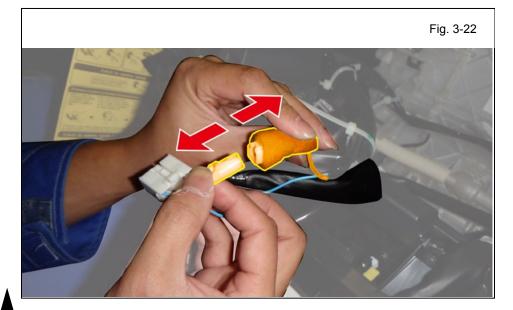

ah. Disconnect the V5 White 1P Connector from the V5 White 1P Connector. (Fig. 3-22)

Issue H: 11/22/16

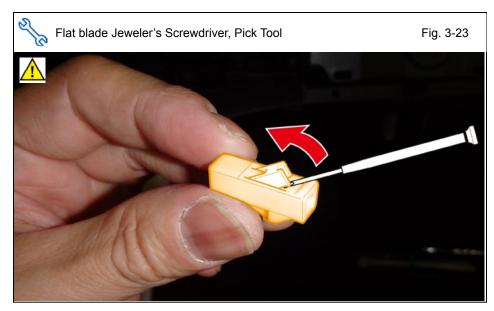

ai. Lift the Terminal Retainer Clip. (Fig. 3-23)

TVIP V5




CAUTION: Do not pull out the Retainer Clip. (Fig. 3-23)

aj. Insert the Vehicle's Sky Blue Wire Terminal into the V5 1P Connector. (Fig. 3-23)

VERIFY: Terminal Pins are properly inserted and do not come out. (Fig. 3-23)

ak. Close the Terminal Retainer Clip. (Fig. 3-23)

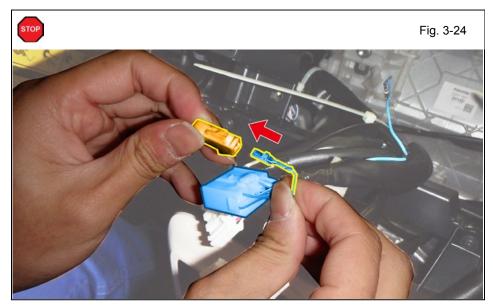


al. Insert the V5 Sky Blue Wire Terminal into the indicated location on the 10P Vehicle Connector. (Fig. 3-24)

CAUTION: Do not insert the V5 Sky Blue Terminal into the White and Blue Wire Terminal on the opposite side of the connector. (Fig. 3-24)




VERIFY: Terminal Pins are properly inserted and do not come out. (Fig. 3-24)

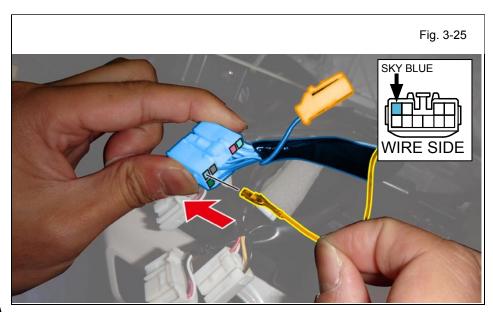

am. Connect the V5 White 1P Connector to the V5 White 1P Connector. (Fig. 3-25)

Issue H: 11/22/16 Page 20 of 36

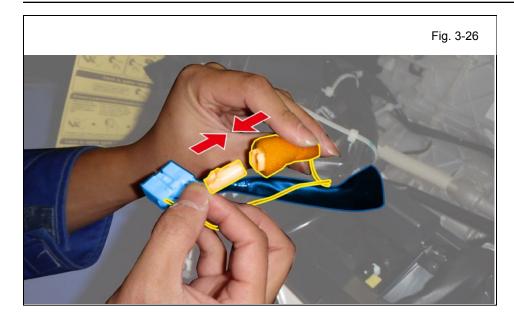

an. Connect the V5 White 1P Connector to the V5 White 1P Connector. (Fig. 3-26)

ao. Wrap the V5 Harness and V5 1P Connectors using the Long Quarter piece of Vinyl Sheet and secure with Electrical Tape as shown. (Fig. 3-27)



CAUTION: Ensure all bare wire and V5 1P Connectors are secured within the Vinyl Sheet and Electrical Tape. (Fig. 3-27)

- ap. Secure the V5 Harness and the Vinyl Sheet wrapped V5 Connectors to the Vehicle Harness using 2 Wire Ties (#11 & #12). (Fig. 3-27)
- aq. Route the V5 Harness behind then over the Vehicle's Dashboard. (Fig. 3-28)

4

- ar. Secure the V5 Harness to the air conditioner unit using 2 Wire Ties (#13 & #14) as shown. (Fig. 3-29)
- as. Secure the V5 Harness to the Vehicle Harness using 1 Wire Tie (#15). (Fig. 3-29)

at. Secure the V5 Harness to the Vehicle Harness using 1 Wire Tie (#16). (Fig. 3-30)



NOTE: Ensure the 2P White Connector points downward. (Fig. 3-30)

au. Partially reassemble the vehicle as shown. (Fig. 3-31)

PriusPrime w/11in Display

•		
	1	Center Sub Cluster Panel
	2	Top Center Cluster Cover

Prius / PriusPrime w/7in Display

1	Audio Unit
2 Center Sub Cluster Panel (Reassemble Center Sub Cluster Panel to Center Cluster Panel on a work bench.)	
3	Center Cluster Panel



 
NOTE: Reconnect all corresponding Connectors. (Fig. 3-31)



NOTE: Verify that panels fit together properly, with no uneven gaps. (Fig. 3-31)

1


av. Temporarily reconnect the Negative Battery Cable. (Fig. 3-32)




- aw. Test the Air Conditioning and Heating, then visually confirm Wire Harness does not interfere with HVAC or any moving parts before glove box is reinstalled. (Fig. 3-33)
- ax. Disconnect the Negative Battery Cable. (Fig. Fig. 3-33)
- **CAUTION:** Do not touch the positive Terminal. (Fig. 3-33)


Issue H : 11/22/16 Page 23 of 36

Fig. 4-1

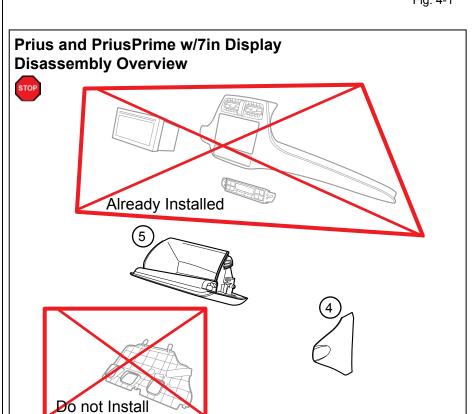

4. Microphone Installation.

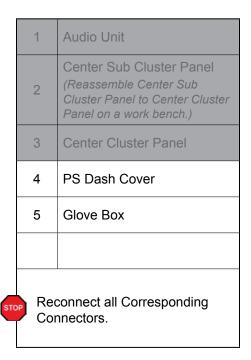


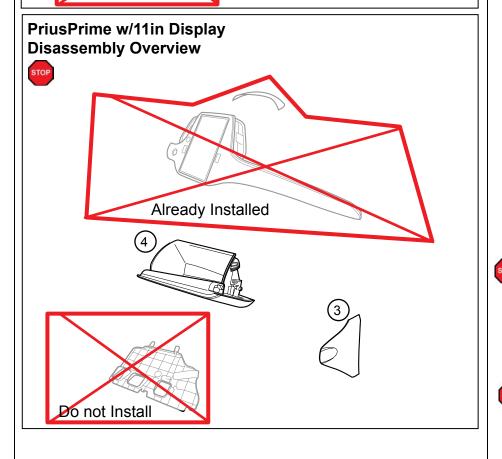

1	1	Center Cluster Panel	
2	2	Top Center Cluster Cover	
3	3	PS Dash Cover	
4	1	Glove Box	
01	Reconnect all Corresponding Connectors.		

 Reassemble the Vehicle except for the Glove Box Under Cover. (Fig. 4-1)

NOTE: Verify that panels fit together properly, with no uneven gaps. (Fig. 4-1)

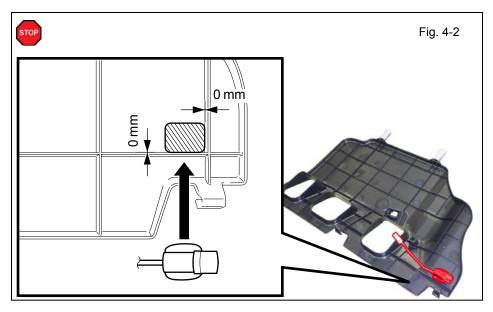



Vehicles with UV windows ONLY

- b. Using the VDC approved cleaner and Cleaning Method, clean the area indicated on the backside of the Glove Box Under Cover. (Fig. 4-2)
- c. Attach the GBS Microphone to the backside of the Glove Box Under Cover as shown. (Fig. 4-2)




 NOTE: Make sure to align GBS Microphone to the Glove Box Under Cover. (Fig. 4-2)



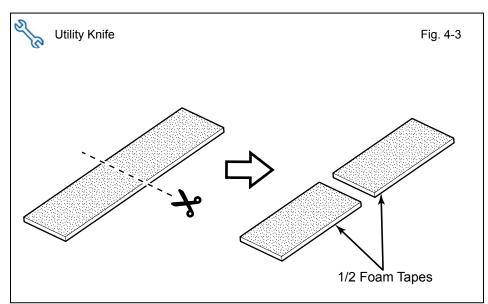


- e. Apply both of the 1/2 Foam Tapes to the GBS Microphone as shown. (Fig. 4-4)
- NOTE: Do not cover the Microphone opening with the Foam Tape. (Fig. 4-4)
 - NOTE: Do not cover the Clip with the Foam Tape. (Fig. 4-4)

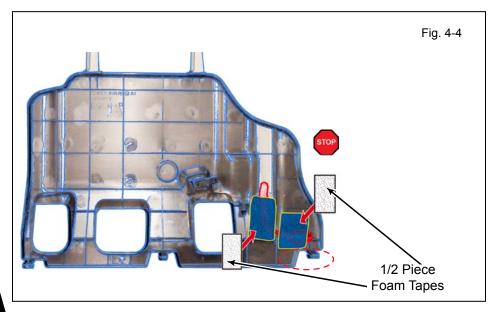

Issue H: 11/22/16 Page 25 of 36

- f. Connect the Microphone's 2P Connector to the V5 2P Connector. (Fig. 4-5)
- g. Reinstall the Glove Box Under Cover. (Fig. 4-5)

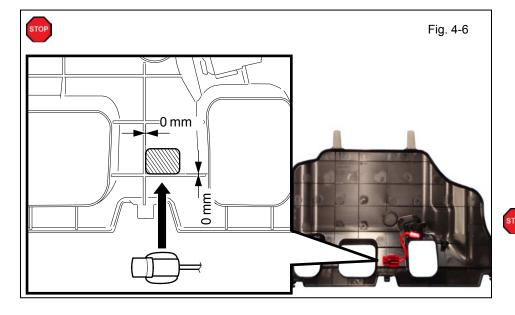


Vehicles with Acoustic windows ONLY

- h. Using the VDC approved cleaner and Cleaning Method, clean the area indicated on the backside of the Glove Box Under Cover.(Fig. 4-6)
- Attach the GBS Microphone to the backside of the Glove Box Under Cover as shown. (Fig. 4-6)
- NOTE: Make sure to align GBS Microphone to the Glove Box Under Cover. (Fig. 4-6)
 - j. Connect the Microphone's 2P Connector to the V5 2P Connector. (Fig. 4-7)

Issue H : 11/22/16 Page 26 of 36

TOYOTA

PROCEDURE

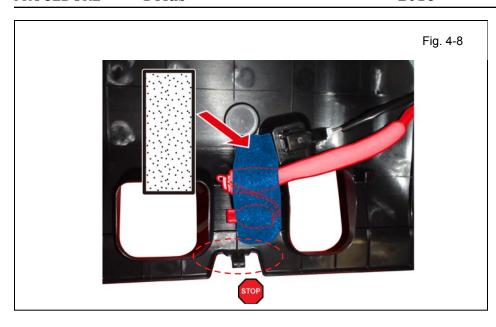

k. Apply 1 Foam Tape to the GBS Microphone as shown. (Fig. 4-8)



NOTE: Do not cover the Microphone opening with the Foam Tape. (Fig. 4-8)



NOTE: Do not cover the Clip with the Foam Tape. (Fig. 4-8)

I. Reinstall the Glove Box Under Cover. (Fig. 4-8)

5. Registration.


- a. Verify that the D/C Cut Fuse is Installed. (Fig. 5-1)
 - · If not Install now

b. Temporarily reconnect the Negative Battery Cable. (Fig. 5-2)




CAUTION: Do not touch the positive Terminal. (Fig. 5-2)

Issue H: 11/22/16 Page 27 of 36

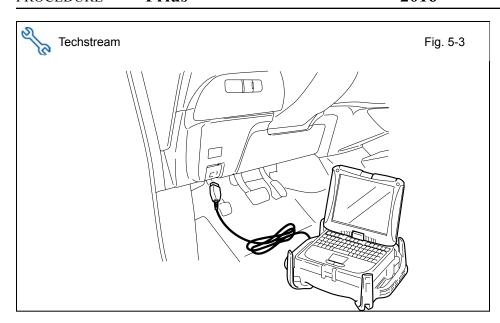

- c. Connect the Techstream Notebook to the Vehicle's Diagnostic Port. (Fig. 5-3)
- d. With the Smart Key in your possession, press the Power Button twice to select the Ignition "ON" position.
 (Fig. 5-3)

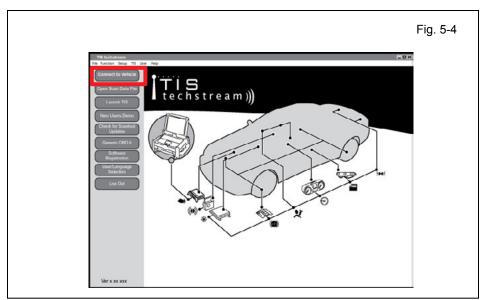


- e. Start the TIS Techstream Application by clicking on the shortcut located on the Desktop. (Fig. 5-4)
- f. Click "Connect to Vehicle". (Fig. 5-4)

- g. Confirm that the information displayed on the Vehicle Connection Wizard is correct for the vehicle. If not, verify that the Techstream is properly connected. (Fig. 5-5)
- h. Select any additional "Option" items that are applicable to the vehicle. (Fig. 5-5)
- i. Click "Next>". (Fig. 5-5)

Issue H : 11/22/16 Page 28 of 36


TOYOTAPriusPrime2017-TVIP V5PROCEDUREPrius2016-RS3200 PLUS

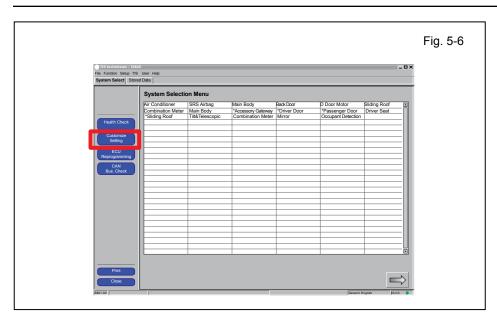

j. Click "Customize Setting". (Fig. 5-6)


			Fig. 5-7
TIS techstream - 1064	is a second		7
File Function Setup TIS			ì
System Select Store			t .
	Select Customize Function		Ī
	Wireless Door Lock	Door Lock	
	Security	Power Window	
	Illuminated Entry	Warning	
	Light Control	Side Roof	
	Air Conditioner	Display	
	Unit Conversion	Smart / Access	
		hers	
	Option Setup		
		I	
		I	
		I	
		I	
Print			
Close			
9601-03		Generic English DLC3	

- k. Make sure that the "Customize" tab is selected. (Fig. 5-7)
- I. Select "Option Setup". (Fig. 5-7)
- m. Click . (Fig. 5-7)

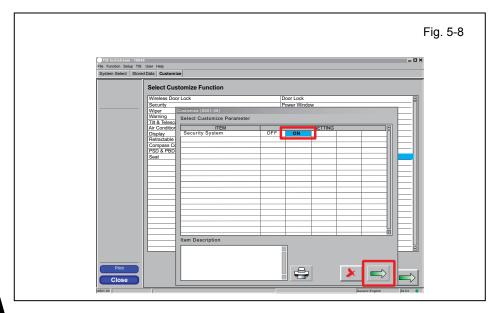

- n. Select "ON". (Fig. 5-8)
- o. Click . (Fig. 5-8)

Issue H : 11/22/16 Page 29 of 36

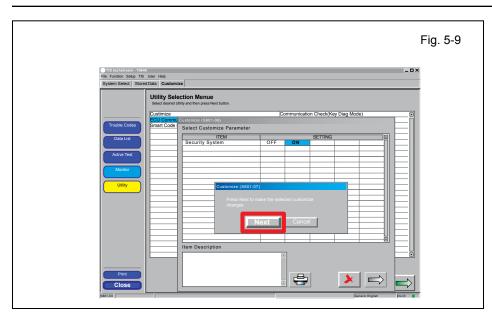

p. Click "Next" to accept the changes to the Vehicle. (Fig. 5-9)

q. Click (Fig. 5-10).


	Fig. 5-1
TIS techstream - 10645	_ = ×
File Function Setup TIS User Help	
System Select Stored Data Customize	
Select Customize Function	
Wireless Door Lock	Door Lock
Security	Power Window
Illuminated Entry	Warning
Light Control	Slide Roof
Air Conditioner	Display
Unit Conversion	Smart / Access
Option Setup	Others
	<u> </u>
	v
Print	
Close	

r. Click "Close". (Fig. 5-11)

Issue H : 11/22/16 Page 30 of 36

6. Window Label Installation.

 - For US Vehicles use the English Tags and Labels, and discard the Spanish Tags and Labels. (Fig. 6-1)
- For Mexico Vehicles use the Spanish Tags and Labels, and discard the English Tags and Labels. (Fig. 6-1)
- Use VDC Approved Cleaner to clean the inside of the Front Door Window. (Fig. 6-1)
- b. Use a piece of Clear Tape to lift the Label off its protective backing. (Fig. 6-1)



c. Attach the Label as shown.



NOTE: Make sure to Align the Label according to Etching or Other Label. (Fig. 6-1)

REPEAT: Steps a-c with the other Window. (Fig. 6-1)

7. Complete the Installation.

 Position the Negative Battery Cable at the original factory position. (Fig. 7-1)



Torque: 5.4 N•m (48 in•lbf)



CAUTION: Do not touch the Positive Terminal. (Fig. 7-1)

- b. Clean up and remove trash.
- Sealed in its protective bag, place the Owner's Guide in the Glove Box.



Accessory Function Checks

Roll up all windows, and exit the vehicle with the remote.

	Perform	Look For	
1	Press and release the remote control lock button to start the system's arming process.	The turn signal lights flash once. All doors lock. The security LED lights up.	
2	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	
3	Press and release the remote control's unlock button to disarm the system.	The turn signal lights flash twice. The driver's door unlocks. The Security LED stops flashing.	

Open the driver's door, with the smart key in your possession, press the power button to "ON." Roll down all the windows, remove the key and exit the vehicle.

	ino trindono, romo to mo koy una okit ino tomolo.				
4	Arm and disarm the system with the remote again, then wait 30 seconds.	The doors automatically relock. The system automatically starts the arming process.			
5	Press and release the remote control's unlock button again to stop the arming process.	Refer to step 3			
6	Press the lock button on the driver's exterior door handle to start the arming process.	All doors lock. The Security LED lights up.			
7	Wait 30 seconds.	Security LED starts flashing; the system is now armed.			
8	Reach inside and manually unlock the driver's door to trigger an alarm.	The driver's door automatically relocks. The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.			
9	Manually unlock the driver's door again and hold it unlocked, open the door, then sit in the driver's seat.	The driver's door lock attempts to lock repeatedly. The horn continues to sound repeatedly. The headlights and turn signal lights continue flashing. The Security LED remains on.			
10	The smart key in your possession, press the power button twice to "START" to stop the alarm.	The horn stops sounding. All the lights stop flashing and/or turn off. The Security LED turns off. The starter cranks and the engine starts.			

Press the power button to turn the vehicle off, and then exit the vehicle.

11	With the door open, press the lock switch on the door to lock the doors, then close the door to start the system's arming process.	All doors lock. The Security LED lights up.	
12	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	
13	Reach inside and manually unlock the front passenger's door to trigger an alarm.	The front passenger's door automatically relocks. The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The SECURITY LED lights up.	

Issue H: 11/22/16 Page 32 of 36

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

14	Press and release the remote control's unlock button to stop the alarm.	The horn stops sounding. All the lights stop flashing. The Security LED stops flashing.
15	Press and release the remote control's lock button to start the system's arming process, then wait 30 seconds until the system is armed.	Refer to steps 1 and 2.
16	Unlock and open one of the rear passenger doors to trigger an alarm. (if available).	Refer to step 13.
17	Press and release the remote control's unlock button to stop the alarm.	Refer to Step 14
18	Repeat the above steps with the other rear passenger door. (if available).	Refer to steps 1, 2, and 13.



For Vehicles with UV Glass. (For Vehicles with Acoustic Glass, Skip to Steps 23 - 26)

Roll up all windows, remove the key and exit the vehicle.

Take the Smart Key from the Vehicle and place them 15 ft. (4.5 meters) or more away from the Vehicle.

19	Press and release the remote control's lock button to start the arming process.	Refer to step 1.
20	Wait 30 seconds.	After 30 seconds, the Security LED starts flashing; the system is now armed.

Perform the following check in a temperature-controlled environment. (50°- 90° F)

21	With the tip of a key, or Striker Tool pulled all the way out (PPO only), tap the center of the driver's door window to trigger the alarm.	The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.		
22	Insert the key into the driver's door key cylinder and turn it toward the back of the vehicle to stop the alarm.	Refer to Step 14		



Skip to Vehicle Function Checks. (See Page 32)



For Vehicles with Acoustic Glass.

This procedure will require an assistant. With the installer inside the vehicle, roll up all windows.



Take out the Smart Key and the Smart Card Key from the Vehicle. Place them 15 feet (4.5 meters) or more away from the Vehicle.

	Perform	Look For	
23	Have assistant lock the doors with installer inside of the Vehicle, then start the system's arming process.	The turn signal lights flash once. All doors lock. The Security LED lights up.	
24	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	

Perform the following check in a temperature controlled environment (50°- 90° F)

TOYOTA PriusPrime 2017-**TVIP V5**

Prius 2016-RS3200 PLUS CHECKLIST – these points MUST be checked to ensure a quality installation.

25	With the tip of a key, or Striker Tool pulled all the way out (PPO only), have installer tap the center of the driver's door window from the inside to trigger the alarm.	The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.	
26	Assistant must insert the key into the driver's door key cylinder and turn it toward the back of the vehicle to stop the alarm.	The horn stops sounding. All the lights stop flashing and/ or turn off. The Security LED lights up.	



NOTE: If the alarm does not trigger during functional verifications the Smart Key and Smart Card Key might be too close. Move them farther from the vehicle and test the system again.

NOTE: If the alarm still does not trigger during the section test, increase the GBS sensitivity to the next setting and test again.

NOTE: If you do not disarm the system, the alarm will last 20 seconds. It is not necessary to check the alarm duration.

Vehicle Function Checks

		Function			Function	
En	nter the Vehicle					
		Dome/Courtesy Lights			Illuminated Door Sills (If Equipped)	
Sta	art the V	/ehicle				
		Panel/Switch Illumination			Gauges	
		Check Engine Light If the warning light remains on, it may indicate a system malfunction.	ECK		ABS Light (if equipped) If the warning light remains on, it may indicate a system malfunction.	(ABS)
		Lamp Failure Sensor If the warning light remains on, it may indicate a system malfunction.			Track/Skid Control Light (if equipped) If the warning light remains on, it may indicate a system malfunction.	ST.
		Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction.			Tire Pressure Monitoring System (TPMS). Prior to TPMS activation and Pre-delivery	(1)
		Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction.			Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on. After TPMS activation and PDS of the Ve-	
		Cruise Control Light (if equipped)	JISE		hicle the TPMS light will illuminate for a few seconds and go off when IG is turned on.	
U	Using a Mirror or Assistant check the following.					
		Trunk/Tailgate/Bed Lights (if equipped)			Tail Lights	
		Brake Lights			Daytime Running Lights (if equipped)	

TOYOTA PriusPrime 2017-TVIP V5 2016-**Prius** CHECKLIST – these points **MUST** be checked to ensure a quality installation. RS3200 PLUS **Backup Lights** Marker Lights Clearance Sonar (if equipped) Stop the Engine, Place the Vehicle's IG in the ON position. Hazard Lights **Turn Signal Lights Head Light** Fog Lights (if equipped) High Beams Accessory Controls/Illumination (if equipped) Power Side Mirrors (if equipped) Convenience Memory Settings (if equipped) П Horn Rear Wiper/Washer (if equipped) Front Wiper/Washer Rollover Side Curtain Air Bag Switch (RSCA) П (if equipped) П Power Sun/Moon Roof (if equipped) Navigation System (if equipped) Clock (if equipped) **HVAC** Audio/Video (if equipped) Air Conditioning/Heating П Steering Wheel Audio Control (if equipped) Rear Window Defogger (if equipped) П Front Windshield Defogger (if equipped) Accessory Power Socket (if equipped) Side Mirror Defogger (if equipped) Heated/Vented Seats (if equipped) Glove Box Light (if equipped) Glove Box Undercover Light Power Locks (if equipped) Power Windows (if equipped) Power Seats (if equipped) Key Sensor Buzzer Vehicle Appearance Check **Perform Look For**

Ensure no damage (including scuffs and scratches) was

(For PPO installations, refer to TMS Accessory Quality

caused during the installation process.

Shipping Standard.)

 
After accessory installation and removal


of protective cover(s), perform a visual

inspection of the vehicle.

TOYOTA PriusPrime 2017-**TVIP V5 Prius** 2016-RS3200 PLUS

 $CHECKLIST-these\ points\ \textbf{MUST}\ be\ checked\ to\ ensure\ a\ quality\ installation.$



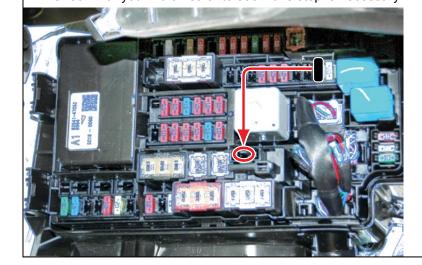

Issue H: 11/22/16 Page 36 of 36