# **TOYOTA Highlander / Highlander HV** PREPARATION

# Part #: PT398-48171

# **Conflict**

Do not install into Vehicles without Smart Key system.

# **Recommended Sequence of Application**

ltem#	Quantity	Description	
1	1	V4 RES	
2	1	V2 GBS or V5 RS3200 Plus	

# Kit Contents

ltem#	Quantity	Description
1	1	V4 Wire Harness
2	1	RES ECU Mounting Bracket

# Hardware Bag Contents

ltem#	Quantity	Description
1	1	RES ECU PT398-60160-AA
2	1	RES ECU Bracket
3	2	M6 Nut
4	10	Wire Tie
5	2	Foam Tape
6	1	Vinyl Sheet
7	2	Key Tag English PT398-4209E
8	2	Key Tag Spanish PT398-4209S
9	2	Window Label English PT398-4209S
10	2	Window Label Spanish PT398-00071-SL
11	1	Engine Room Label English PT398-00070-EL
12	1	Engine Room Label Spanish PT398-00070-SL
13	1	V4 Owner's Guide

# Additional Items Required For Installation

ltem#	Quantity	Description
1		Hood Switch Kit (PT398-03121) NOTE: Req'd for all Vehicles without Factory Alarm (see page 6)

2017 -

# TVIP V4 REMOTE ENGINE STARTER (RES)

# **Recommended Tools**

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Blankets, Parts Boxes	Blankets, Parts Boxes
Special Tools	
Techstream	Use latest version on TIS
1/4" Drive Torque Screwdriver (Req'd for Hood Switch Kit)	Included in the TPMS Tool Kit# 00002-TTPWS Toyota SST# 00002-TTPWS-03, #0 Phillips Hood Switch: 3.1 in-lbf (0.35 N•m)
Installation Tools	
Screwdriver	#2 Phillips, Flat Blade Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota
	SST# 00002-06001-01
Utility Knife	
Pliers	Needle Nose
Side Cutters	
Torque Wrench	Battery: 48 in•lbf (5.4 N•m), Hood Latch: 71 in•lbf (8 N•m), ECU: 71 in•lbf (8 N•m)
Socket	10mm, extension
Special Chemicals	
Cleaner	VDC Approved Cleaner
Glass Cleaner	Household Glass Cleaner

# Legend



# Accessory Installation Practice (read before installation)

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation. These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:


- · Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- · Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your Toyota dealer for a copy of this document.

# **TOYOTA** Highlander / Highlander HV


# PREPARATION

Table	of	Contents	
١.	Pr	eparation	
	1.	Table of Contents	2
	2.	Wire Routing Overview	3
١١.	Pr	ocedure	
	1.	Hood Switch Confirmation	5
	2.	Hood Switch Installation	7
	3.	Vehicle Disassembly	
	4.	RES ECU Preparation and Installation.	14
	5.	V4 Harness Installation.	
	6.	Registration Preparation.	24
	7.	Registration	
	8.	Complete the Installation.	
	9.	Tag and Labels	
	. Cł	necklist	
	1.	Accessory Function Checks	
	2.	Vehicle Appearance Check	
	3.	Vehicle Function Checks	

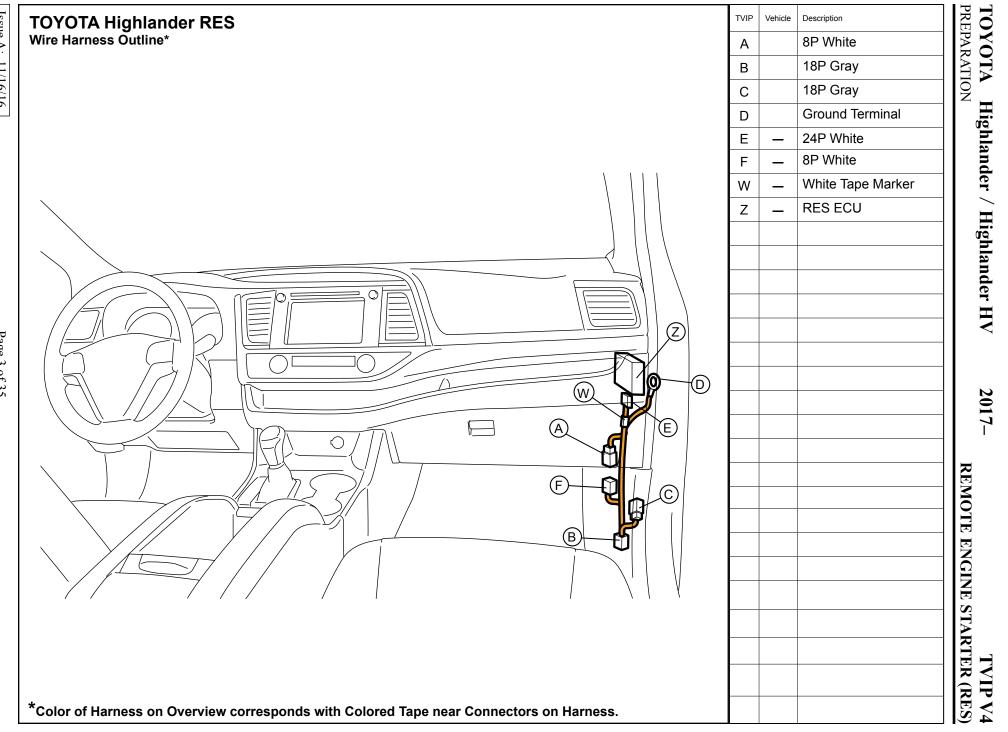

Issue A: 11/16/16

Page 3 of 35

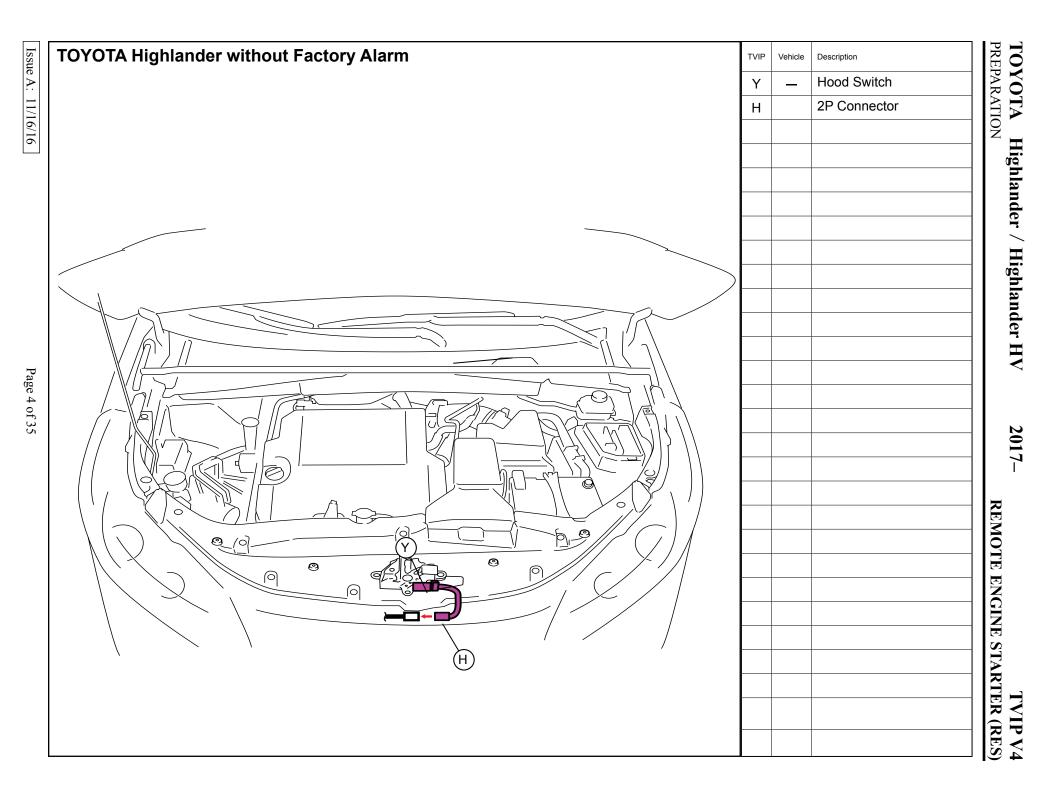


**TOYOTA** Highlander / Highlander HV PROCEDURE


# TVIP V4 REMOTE ENGINE STARTER (RES)

Disassembly Overview	1	DS Luggage Side Cover (for HV ONLY)
STOP	2	Engine Cover
	3	PS Step Cover
	4	PS Cowl Cover
	5	PS Dash Side Cover
ENGINE ROOM COMPARTMENT	6	Glove Box Under Cover
ENGINE ROOM CC	7	Glove Box
-D'S SIDE)		
VEHICLE INTERIOR (PASSENGER'S SIDE) LUGGAGE COMPARTMENT(FOR HV ONLY)		
I UGGAGE COMPARTMENT		
		connect all Corresponding nnectors.


# 1. Hood Switch Confirmation

- a. Verify if the Short Pin is installed.
  - If not, install now.

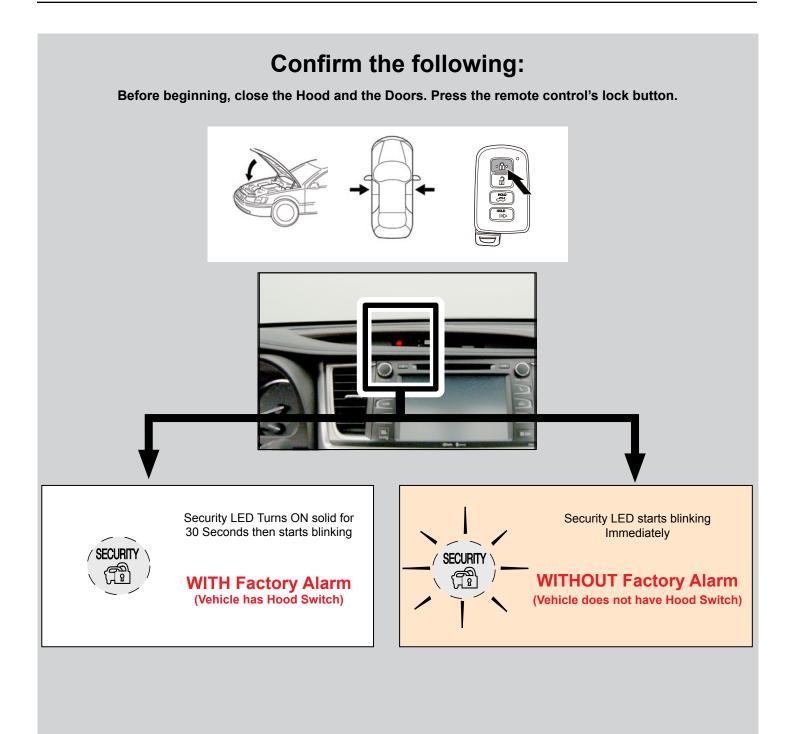

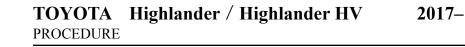

TVIP V4 REMOTE ENGINE STARTER (RES)

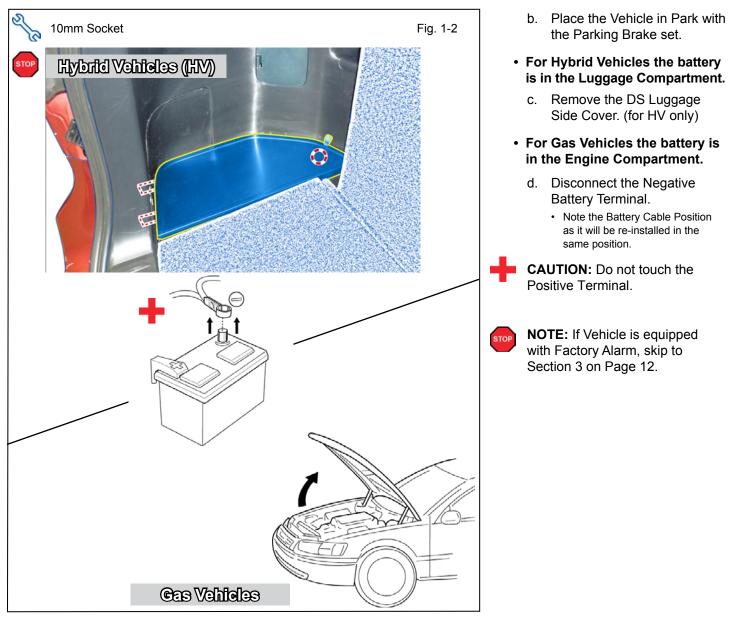

# Vehicles Without Factory Alarm ONLY

# 2. Hood Switch Installation.

a. Remove 1 Clip and rotate the passenger side Engine Cover.


# Vehicles Without Factory Alarm ONLY


b. Remove 1 Clip and rotate the driver side Engine Cover.


- c. Remove the Engine Cover.
  - Remove 7 Clips.

- d. Dislodge the Hood Lock Assembly.
  - Remove Bolt Cover.
  - Remove 3 Bolts.

<b>TOYOTA Highlander / Highlander HV</b> PROCEDURE	2017–	REM	TVIP V4 OTE ENGINE STARTER (RES)
			Vehicles Without Factory Alarm ONLY
			<ul><li>e. Remove the Hood Lock Cable from the Hood Lock Assembly.</li><li>f. Remove the Hood Lock Assembly.</li></ul>
Needle Nose Pliers	Fig. 2-6		g. Release the Spring from the Hood Lock.
			Maka awa ta bald tha Ulaad
	Fig. 2-7		<ul> <li>Make sure to hold the Hood</li> <li>Switch by its sides.</li> <li>Make sure the Hood Switch Lever</li> </ul>
			is positioned properly.
			If the Hood Switch is Broken RES will not function.

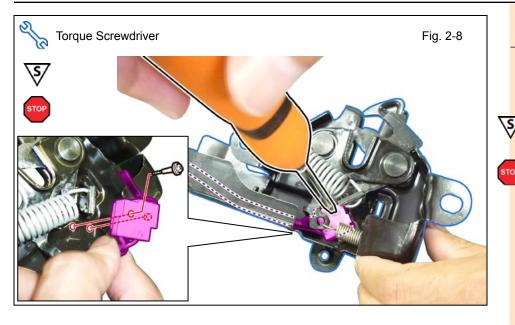

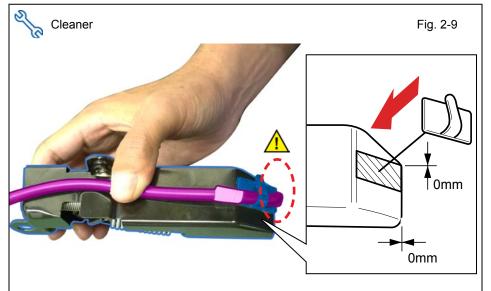

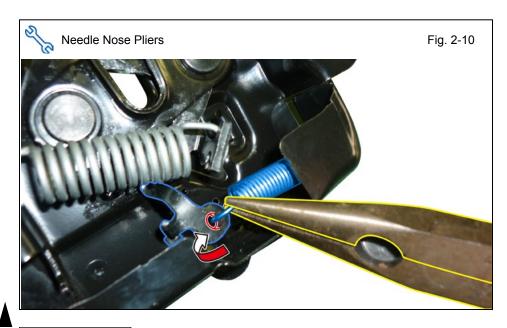

# Vehicles Without Factory Alarm ONLY

- h. Install the Hood Switch with the Switch Lever underneath the Hood Lock Trigger Lever.
- **Torque:** Tighten the Screw to 3.1 in•lbf (0.35 N•m).

**NOTE:** Do not reuse the Screw once it is already installed. The effect of the adhesive becomes weak if used again.

- i. Route the Hood Switch Harness underneath the Hood Lock Cable Lever.
- j. Using VDC approved cleaner and cleaning method, clean the indicated area underneath the Hood Lock Assembly.
- k. Attach the Clamp underneath the Hood Lock Assembly.
- I. Secure the Hood Switch Harness using the Clamp.

∕!∖

**CAUTION:** Do not overstress the Hood Switch Harness.

m. Reinstall the Spring to the Hood Lock.

**Vehicles Without** Factory Alarm ONLY n. Reinstall the Hood Lock Cable to the Hood Lock Assembly. o. Reinstall the Hood Lock Assembly. S, Torque: Tighten the 3 Bolts to 71 in•lbf (8.0 N•m). p. Reinstall the Bolt Cover. q. Disconnect and discard the Dummy Connector from the Vehicle's Pre-Connector. r. Connect the Hood Switch Harness Connector to the Vehicle's Pre-Connector.

Issue A: 11/16/16

# 3. Vehicle Disassembly

a. Remove the Passenger's Side Step Cover.

b. Remove the Passenger's Side Cowl Cover.

Remove 1 Nut.


c. Remove the Passenger's Side Dash Cover.

d. Remove the Glove Box Under Cover.

e. Remove 2 Bolts from the bottom of the Glove Box.

- f. Open the Glove Box.
- g. Dislodge the Glove Box.
  - Remove 3 Screws.

- h. Disconnect the Vehicle's Connectors.
- i. Remove the Vehicle clamp from the Glove Box.
- j. Remove the Glove Box.

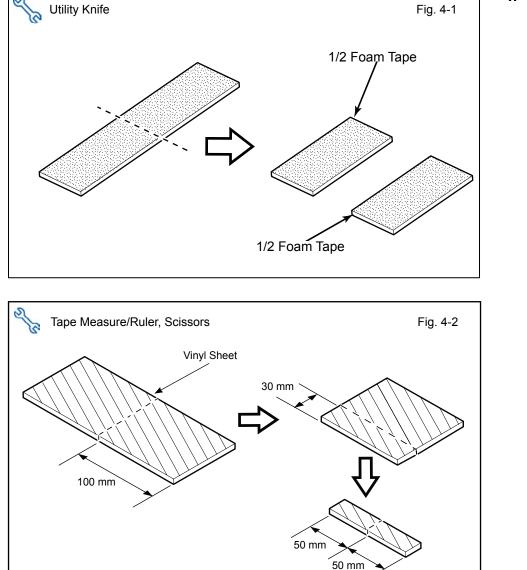

- 4. RES ECU Preparation and Installation.
  - a. Cut the Foam Tape into 1/2 pieces.

- b. Cut the Vinyl Sheet in half, then cut 1 (100 x 30mm) pieces from the 1 half piece as shown.
- c. Cut one of the remaining pieces in half to form
  2 (50 x 30mm) as shown.

# **TOYOTA** Highlander / Highlander HV PROCEDURE


d. Use VDC approved cleaner to clean the RES ECU Bracket.


e. Attach the 2 (50 x 30mm) Vinyl Sheets to the RES ECU Bracket.


f. Attach the 1/2 Foam Tapes over the Vinyl Sheets on the RES ECU Bracket.

g. Attach the RES ECU Bracket to the RES ECU.

Page 15 of 35

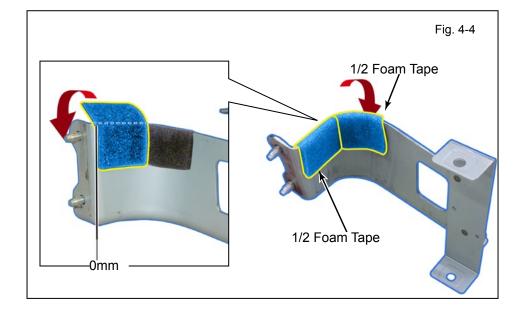

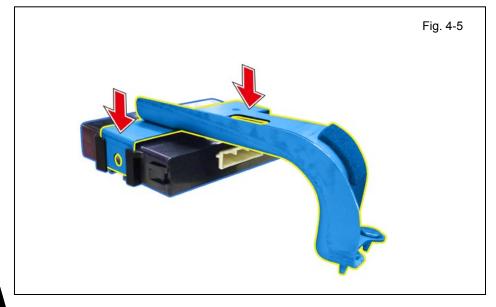

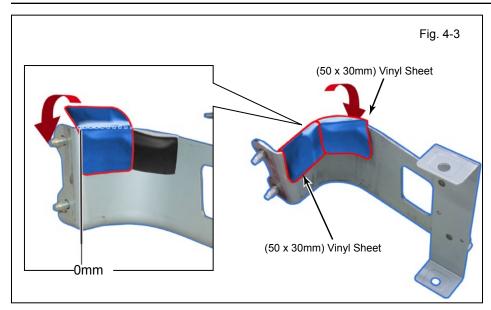

2017-

# **TOYOTA** Highlander / Highlander HV PROCEDURE

# h. Attach the Foam Tape to the RES ECU.

**REMOTE ENGINE STARTER (RES)** 


**TVIP V4** 


i. Plug in the V4 White 24P Connector to the RES ECU.

- j. Install the RES ECU using and the V4 Ground Wire Terminal using the supplied Nuts.
- **NOTE:** Verify that these Nuts are tightened securely.

**Torque:** Tighten the Nuts to 8 N•m (71 in•lbf).

STOP

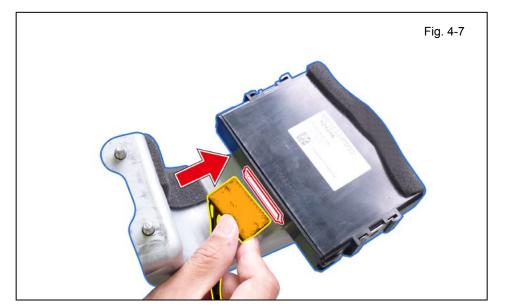


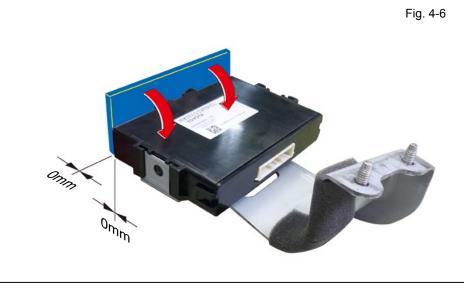

2017-

5. V4 Harness Installation. V4 ONLY NOTE: If V2 (GBS) is installed in STOP the vehicle, skip to page 19 for V4/V2 Add-On (steps I-z). a. Remove the Tape securing the Vehicle's 8P Pre-Connector. b. Connect the V4 White 8P Connector to the Vehicle's 8P Pre-Connector. c. Secure the V4 Harness's White Tape Marker to the Vehicle Harness using 1 Wire Tie (#1). (Fig. 5-3)

	V4 ONLY
	d. Secure the 8P Connectors to the Vehicle Harness using 1 Wire Tie (#2). (Fig. 5-4)
ST	<b>NOTE:</b> Place the 8P Connector in reference to the illustration.
	e. Secure the V4 Harness to the Vehicle Harness using 1 Wire Tie (#3). (Fig. 5-4)
ST	• <b>NOTE:</b> Rotate the ratchet end on Wire Ties (#2, #3) toward the rear of the Vehicle.
	<ul> <li>Route the V4 Harness toward the Passenger side Cowl area.</li> </ul>
	g. Disconnect the Vehicle's Gray 18P Connector from the Connector Block.
	<ul> <li>h. Connect the Vehicle's Gray</li> <li>18P Connector to the V4</li> <li>18P Connector.</li> </ul>

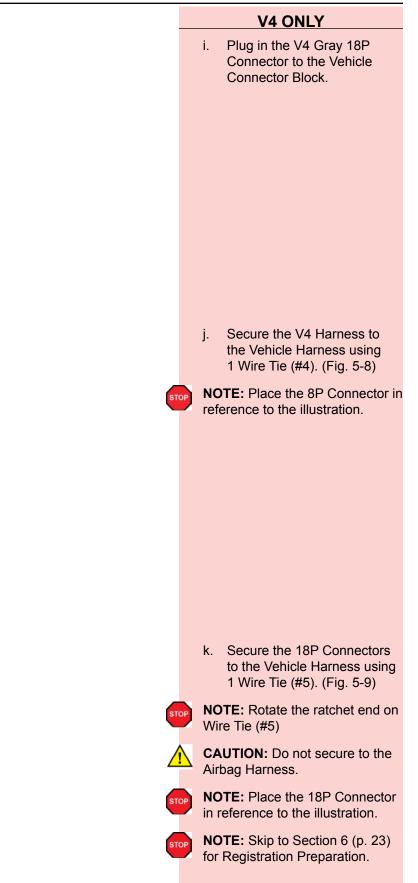

# V4/V2 Add-on Only

I. Cut the Wire Tie securing the V2 8P Connector.

m. Disconnect the Vehicle's 8P
 Pre-Connector from the V2
 8P Connector.

n. Secure the V4 Harness's White Tape Marker to the Vehicle Harness using 1 Wire Tie (#1). (Fig. 5-12)

# V4/V2 Add-on Only o. Connect the V4 White 8P Connector to the Vehicle's 8P Pre-Connector. p. Connect the V4 White 8P Connector to the V2 White 8P Connector.


 q. Cut the Wire Tie securing the V2 Harness.

# V4/V2 Add-on Only r. Cut the Wire Tie securing the V2 Gray 18P Connector. Disconnect the Vehicle's Gray S. 18P Connector from the V2 18P Connector.

- t. Connect the V4 Gray 18P Connector to the V2 Gray 18P Connector.
- u. Connect the Vehicle's 18P Gray Connector to the V4 Gray 18P Connector.

# V4/V2 Add-on Only

- v. Secure the V4 8P Connector to the Vehicle Harness with 1 Wire Tie (#2). (Fig. 5-19)
- w. Secure the V4 8P Harness to the Vehicle Harness with 1 Wire Tie (#3). (Fig. 5-19)
- x. Secure the V2 8P Connector to the Vehicle Harness with 1 Wire Tie (#4). (Fig. 5-19)
- CAUTION: Reduce stress on Wire Tie (#4) and the 8P Connector's wire as shown.
  - **NOTE:** Rotate the ratchet end on Wire Ties (#2, #3, #4) toward the rear of the Vehicle.

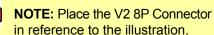

STOP

STOP

y. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie (#5). (Fig. 5-20)

z. Secure the V4 Harness to the V2 Harness and Vehicle Harness using 1 Wire Tie (#6). (Fig. 5-21)




(Fig. 5-21) **CAUTION:** Do not secure to the Airbag Harness.

 aa. Secure the V4 18P Connector to the V2 18P Connector and Vehicle Harness using 1 Wire Tie (#7). (Fig. 5-21)



**NOTE:** Rotate the ratchet end on Wire Ties (#6, #7) toward the rear of the Vehicle.


Issue A: 11/16/16

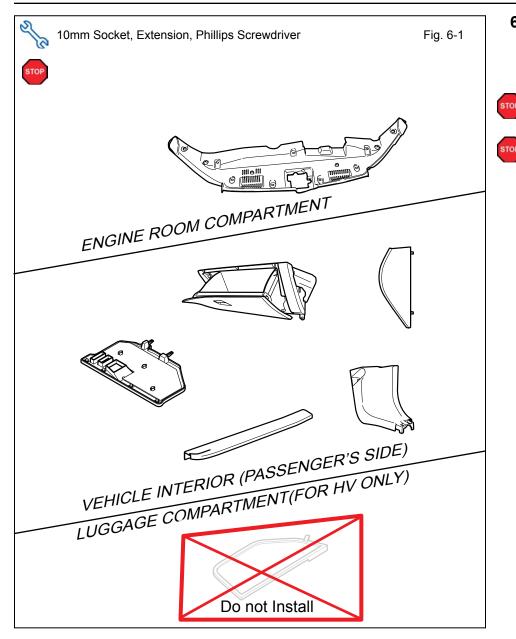

# 6. Registration Preparation.

- a. Reassemble the Vehicle except for the passenger side Luggage Side Cover.
- **VERIFY:** That panels fit together properly, with no uneven gaps.
- **VERIFY:** That all Connectors are plugged in.


**TOYOTA** Highlander / Highlander HV PROCEDURE

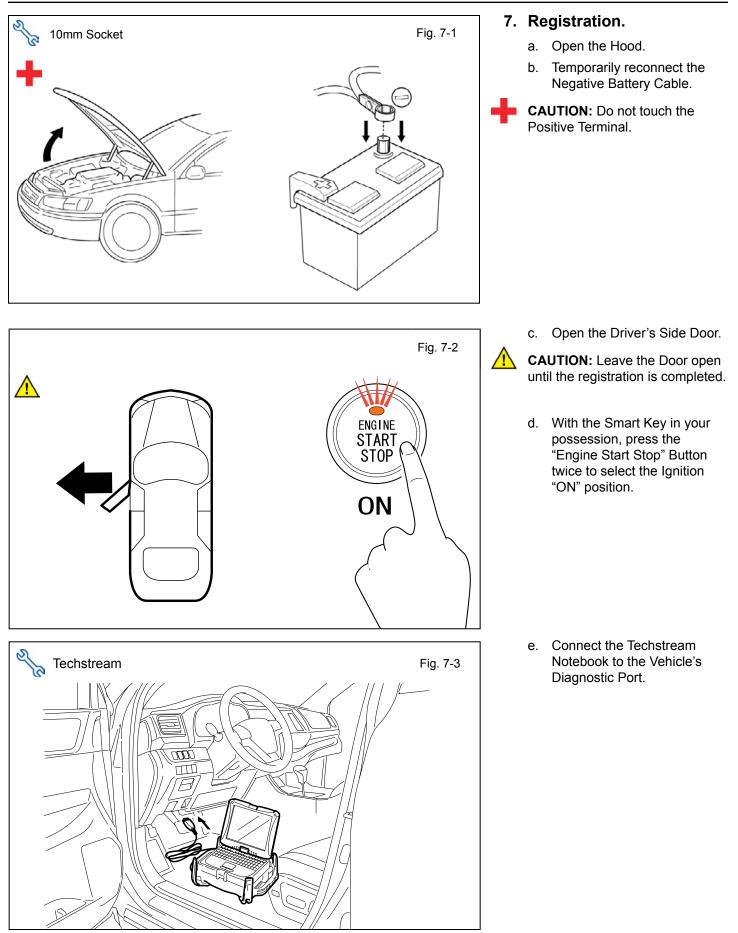

Issue A: 11/16/16

# **TOYOTA** Highlander / Highlander HV PROCEDURE

- Fig. 7-4 TIS 6 Ver. 7.30.02 bsetion Expirat 113d 14h 49n
- Fig. 7-5 TIS XXXXXX • Mode XXXXX ModelYea XXXX ◙ XXXXXX Engine Opti  $\nabla$ V ptional Inf VIN Hisrory Help Next> Cancel Ver 7,30,025

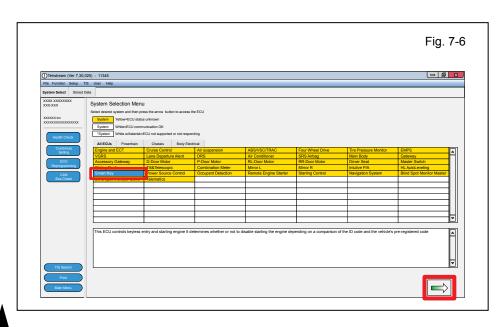

Page 26 of 35

h. Confirm that the information displayed on the Vehicle Connection Wizard is correct for the vehicle. If not verify that the Techstream is properly connected.

Start the TIS Techstream

Application by clicking on the shortcut located on the

g. Click "Connect to Vehicle."


- Select option that applies to i. the Vehicle.
- Click "Next>." j.

Select "Smart Key." k.



f.

Desktop.

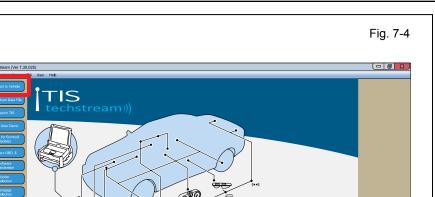

Issue A: 11/16/16

m. Click on "Utility."

**REMOTE ENGINE STARTER (RES)** 

**TVIP V4** 

2017-

Fig. 7-7


- n. Select "ECU Communication ID Registration."
- o. Click

p. Click "Next>."

			Fig. 7-8
Tehstream (Ver 7,3	0.025)- 11345		
File Function Setup			
	Data Smart Access Live		
XXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX			
XXX-XXX	Utility Selection Menu		
	Select desired Utility and then press Next button		
XX0000X km XX0000XX0000XX000X	Operation History	Wireless Door Lock Diagnosis Mode	
	Contractor	Communication Check(Key Diag Mode)	
Trouble Codes	ECU Communication ID Registration	mart Code Erasure	
Indian Cooks	Smart Code Reset	emart Code Registration	
Data List	Shar Gode Reset		
Active Test			
Modifay			
Usity			
Dual Data List			
	(Usage) Use htis function in the following situation - Certification ECU has replaced		
	- Certification ECU has replaced		
	(Introduction)		
	(Introduction) This function regidters the communication ID between the ID	Cide Box ECU and Certification ECU	

Tehstream (Ver 7,30 File Function Setup T System Select Stored D			
00000 00000000000000000000000000000000	Utility Selection Menu Select desired Utility and then press Next button Operation History Customize	ECU Communication ID Registration(SMRT-17-001)	
Trouble Codes Data List Active Test Modilay Usity Dual Data List	ECL Communication ID Registration Smart Code Reset	Welcome to ECU Communication ID Registration wizard This function is used to perform the "hand shake" procedure Confirm the following conditions - The Power/Engine Switch is ON(IG) - Smart Cancel function is OFF	
	(Usage) Use htis function in the following situation - Certification EDU has replaced (Introduction) This function registers the communication ID		<u>م</u>


Page 27 of 35

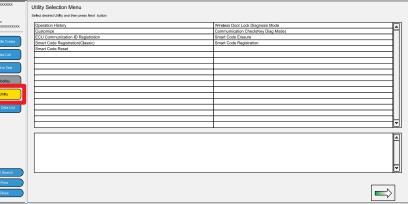

# **TOYOTA** Highlander / Highlander HV PROCEDURE

Tehstream (Ver 7,30,025) - 11345 n Setup TIS User Help ed Data Smart Access Live

ТОҮОТА	Highlander /	Highlander HV
PROCEDURE		

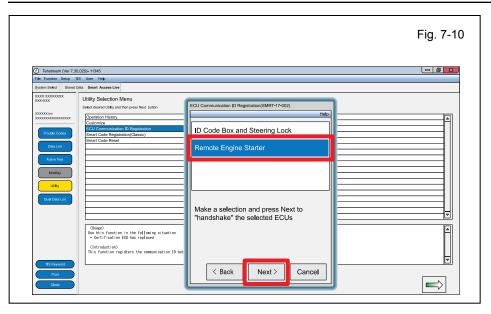

Tehstream (Ver 7,30 File Function Setup T	),025)-11345 18 User Helo		
	Data Smart Access Live		
0000X X0000000X 000-300X	Utility Selection Menu Select desired Utilty and then press Next button Operation History	ECU Communication ID Registration(SMRT-17-006)	
Trouble Codes	Customize ECU Communication ID Registration Smart Code Registration(Classic) Smart Code Reset	Communication ID registration for Remote	
Active Test Modifay		Engine Starter is complete	
Utility Dual Data List			
	(Usage) Use htis function in the following situation - Certification ECU has replaced		
	(Introduction) This function regidters the communication ID	bet	

IP TIS	5 User Help						
system Select	ata						
XXX-XXX	System Selection Men	1					
	Select desired system and then pr		ne ECI I				
OCODOCK km	System Yellow=ECU statu						
xxxxxxxxxxxxxxxxxxxxxxxx							
	System White=ECU comm						
Health Check	*System White wAsterisk=	ECU not supported or not respon	iding				
	All ECUs Powertrain	Chassis Body Elect	rical				
Customize	Engine and ECT	Cruise Control	Air suspension	ABS/VSC/TRAC	Four Wheel Drive	Tire Pressure Monitor	EMPS 🔺
Setting	VGRS	Lane Departure Alent	DRS	Air Conditioner	SRS Airbag	Main Body	Gateway
ECU	Accessory Gateway	D-Door Motor	P-Door Motor	RL-Door Motor	RR-Door Motor	Driver Seat	Master Switch
Reprogramming	Sliding Roof	Tilt&Telescopic	Combination Meter	Missort	Mirror R	Intutive P/A	HL AutoLeveling
CAN	Smart Access	Power Source Control	Occupsnt Detection	Remote Engine Starter	Starting Control	Navigation System	Blind Spot Monitor Master
Bus Check	Blind Spot Monetor Slave	Telematics			-		
							Ľ
	This ECU controls the engin	e start from outside of our					
	This ECU controls the engin	e start from outside of car					<b></b>
							*

- q. Select "Remote Engine Starter."
- r. Click "Next>."

**CONFIRM:** That the ECU Communication ID was completed successfully.

s. Click "Exit."

- t. Click on "System Select" tab.
- u. Select "Remote Engine Starter."



Tehstream (Ver 7,30,025)- 11345 e Function Setup TIS User Help

Stored Data Remote Engine Starter Live Utility Selection Menu

> (Usage) To execute initial registration of the Remote Enco (Introduction) Registers vehicle intermation with the Remote En

Tehstream (Ver 7,3)	0,025) - 11345		
File Function Setup 1	TIS User Help		
System Select Stored I	Data Smart Acco	ess Live Remote Engine Starter Live	
XXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Diagnostic	Code	
XXXXXXX km	Code	Description	
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Note		
Trouble Codes			
Data List			
Active Test			
Modifay			
Utiliy			
Dual Data List			
TIS Search			

w. Click on "Utility."

**TVIP V4** 

x. Select "Remote Engine Starter Initial Registration."

y. Click "Next>."

	Fig. 7-1
Tehstream (Ver 7.30.025): 11345      Fte Function Setup TIS User Heb     System Setect Stored Data Remote Engine Starter Live	
Thill be cash     UBIN 2000 Cash       Thild cash     UBIN 2000 Cash       Thild cash     Remote Cash and the press Next balant       Thild cash     Remote Cash and the press Next balant       Thild cash     Remote Cash and the press Next balant       Thild cash     Remote Cash and the press Next balant       Subtract of the press Next balant     Remote Cash and the press Next balant       Cash     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Cash     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Cash     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant       Remote Cash and the press Next balant     Remote Cash and the press Next balant	

Fig. 7-13

nmary 🔺 tory SL

ె

Fig. 7-14

攴 A

⊽

 $\Rightarrow$ 

ΤΟΥΟΤΑ	Highlander /	Highlander HV
PROCEDURE		

			Fig. 7-1
Tehstream (Ver 7,3)     File Function Setup 1     System Select Stored 1			
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Utility Selection Menu Select assing UBM and then press Next button Remote Engine Statute Index Engine	Remote Engine Starter Initial Registration(RES-03-002)  Perform the following operation 1. Close the engine hood When registration is complete, the screen will automatically change  Registering	
TIS Keyword Print Cicce	(Usage) To execute initial registration of Us (Introduction) Registers vehicle internation with Us	Time Remaining 24 sec	

			Fig. 7-17
Tehstream (Ver 7,3 File Function Setup 1 System Select Stored			
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Utility Selection Menu	Remote Engine Starter Initial Registration(RES-03-003) Help. Remote Engine Starter Initial Registration is complete	
TIS Keyword Print Close	To execute initial registration of th (Introduction) Registers vehicle internation with th	Exit	

Tehstream (Ver 7,3     File Function Setup     System Select Stored	TIS User Help		
Spirit See Jobs	Claim Renois Engine Starter Live     Utility Selection Menu     Utility Selection Menu     Engine Starter Renoi Reputation     Engine Engine Starter Renoi Reputation     (Introduction)     To execute initial repitration of th     (Introduction)     Registers vehicle internation with th	Remote Engine Starter Initial Registration(RES-03-002)       Perform the following operation       1 Close the engine hood   Enror Remote Engine Starter Initial Registration       Mergistration has failed       Do you want to try again?       Yes   No       ( Back Next > Exit	

Page 30 of 35


aa. Click "Exit."

- **IF THIS PROCEDURE FAILED** 
  - Click "Yes."
  - Start again from step y.



seconds.

z. Close the Hood within 30

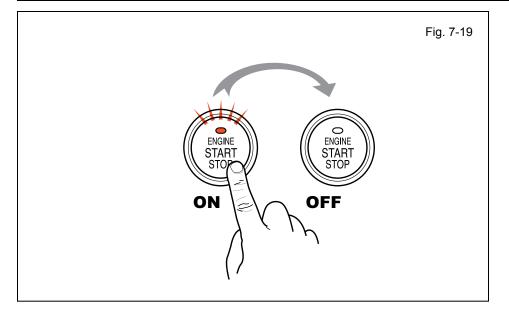

ab. Press the "ENGINE START STOP" Button once to switch the ignition off.


TVIP V4

- 8. Complete the Installation.
  - · For Hybrid Vehicles the battery is in the Luggage Compartment.
  - For Gas Vehicles the battery is in the Engine Compartment.
    - a. Position the Negative Battery Cable at the original factory position.

Torque: Tighten the Nut to 48 in•lbf (5.4 N•m)

<u></u>

CAUTION: Do not touch the positive terminal.

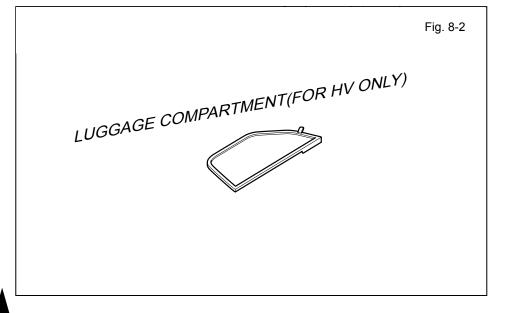

- Finish reassembling the b. Vehicle.
- c. Clean up and Remove trash.
- d. Sealed in its protective bag, place the Owner's Manual in the Glove Box.

# **TOYOTA** Highlander / Highlander HV PROCEDURE





## 9. Tag and Labels.

- For US Vehicles use the English Tags and Labels, and discard the Spanish Tags and Labels.
- For Mexico Vehicles use the Spanish Tags and Labels, and discard the English Tags and Labels.
- a. Using VDC approved cleaner and cleaning method, clean the area indicated in the Underside of the Hood.
- b. Attach the Engine Room Label as shown.

**CAUTION:** Do not touch the adhesive surface.

c. Attach the Key Tag.

**REPEAT:** Step 9c on the other Smart Key.

- d. Use Household Glass Cleaner to clean the inside of the Front Door Window.
- e. Use a piece of Clear Tape to lift the Label off its protective backing.

CAUTION: Do not touch the adhesive surface

STOP

- adhesive surface.
- f. Attach the Label as shown.

NOTE: Make sure to Align according to Etching or Other Label.

**REPEAT:** Steps 9d-9f on the other Front Door Window.

Issue A: 11/16/16

# Accessory Function Checks

Close the hood, enter the vehicle and close all doors. Place the shift lever in the "P" (Park) position, set the parking brake and make sure the Vehicle is off.

	Perform	Look For
1	Press the remote control's lock button twice within 2 seconds, then press and hold the lock button for 3 seconds.	The hazard lights flash after 3 seconds. The engine starts. The hazard lights flash repeatedly for 10 seconds.
2	With the engine running, pull the hood release handle.	The engine stops. The hazard lights flash once. The security alarm triggers. (Only if equipped with OE Factory Alarm, not Genuine Accessory alarm, and only if armed)

# Vehicle Appearance Check

Perform	Look For
After accessory installation and removal of protective cover(s), perform a visual inspection of the vehicle.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)

# **TOYOTA** Highlander / Highlander HV

CHECKLIST - these points MUST be checked to ensure a quality installation.

# **TVIP V4 REMOTE ENGINE STARTER (RES)**

# Vehicle Function Checks

		First diam			Freedow						
		Function			Function						
En	Enter the Vehicle										
		Dome/Courtesy Lights			Horn						
Sta	art the V	/ehicle									
		Panel/Switch Illumination			Gauges						
		Check Engine Light If the warning light remains on, it may indicate a system malfunction.	CHECK		ABS Light (if equipped) If the warning light remains on, it may indicate a system malfunction.	(ABS)					
		Lamp Failure Sensor If the warning light remains on, it may indicate a system malfunction.			Track/Skid Control Light (if equipped) If the warning light remains on, it may indicate a system malfunction.	ζŢ					
		Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction.			Tire Pressure Monitoring System (TPMS). Prior to TPMS activation and Pre-delivery Service	$(\underline{\cdot})$					
		Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction.	20		(PDS) of the Vehicle the TPMS light will blink when IG is turned on.						
		Cruise Control Light (if equipped)	CRUISE		TPMS light will illuminate for a few seconds and go off when IG is turned on.						

### Using a Mirror or Assistant check the following.

Trunk/Tailgate/Bed Lights (if equipped)	Tail Lights
Brake Lights	Daytime Running Lights (if equipped)
Backup Lights	Marker Lights
Clearance Sonar (if equipped)	Turn Signal Lights

### Stop the Engine, Place the Vehicle's IG in the ON position.

Hazard Lights	Power Back Door/Hatch (if equipped)
Head Light	Fog Lights (if equipped)
High Beams	Accessory Controls/Illumination (if equipped)
Power Side Mirrors (if equipped)	Convenience Memory Settings (if equipped)
Power Sliding Door (if equipped)	Rear Sunshade (if equipped)

2017-

# **TOYOTA** Highlander / Highlander HV

2017-

# TVIP V4 REMOTE ENGINE STARTER (RES)

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

	Function		Function		
	Front Wiper/Washer		Rear Wiper/Washer (if equipped)		
	Power Sun/Moon Roof (if equipped)		Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)		
	Clock (if equipped)		Navigation System (if equipped)		
	Audio/Video (if equipped)		USB Connections (if equipped)		
	Steering Wheel Audio Control (if equipped)		HVAC		
	Front Windshield Defogger (if equipped)		Rear Window Defogger (if equipped)		
	Side Mirror Defogger (if equipped)		Accessory Power Socket (if equipped)		
	Massage Seats (if equipped)		Heated/Vented Seats (if equipped)		
	Glove Box Light (if equipped)		Trunk or Back Door/Hatch Cancel Switch (if equipped)		
	Power Locks (if equipped)		Power Windows (if equipped)		
	Power Seats (if equipped)		Key Sensor Buzzer		