Kit Contents

Item #	Quantity Reqd.	Description
1	1	RH Fog Light
2	1	LH Fog Light

Hardware Bag Contents

lard ware bug contents		
Item #	Quantity Reqd.	Description

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

General Applicability

2018 and newer Highlander models

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory


Recommended Tools

Personal & Vehicle	Notes
Protection	
Blankets	
Special Tools	Notes
Nylon Panel Removal Tool	
Installation Tools	Notes
Ratchet	
Socket Extension	
Socket	10mm Socket
Screwdriver	#2 Phillips
Torque wrench	5.4 N-m (48 in-lbs)
Special Chemicals	Notes
None	

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

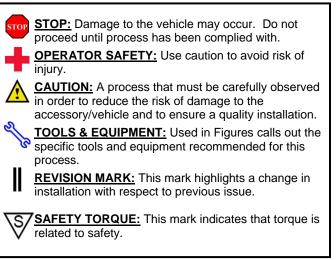


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

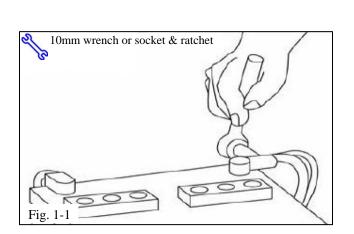

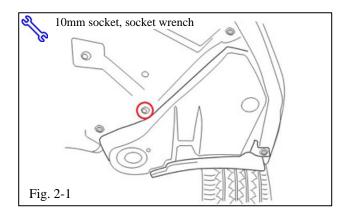

1. Prepare for the Installation.


- (a) The engine components and coolant may be hot.
 - (b) Check the kit for contents and any damage.
 - (c) Protect the fender.


(d) Remove the battery cable from the negative terminal (Fig. 1-1).


CAUTION: Do not touch the positive terminal with any tool during removal.


2. Remove the Body Panel.

- (a) Raise the vehicle on a lift.
- (b) Remove the bolt (Fig. 2-1).

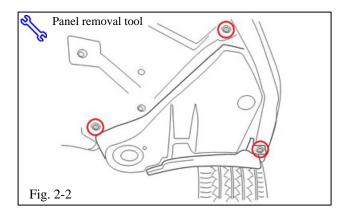

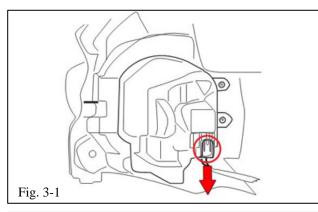

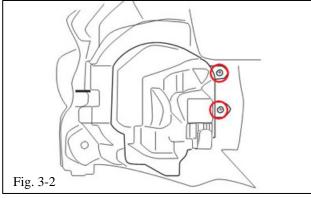

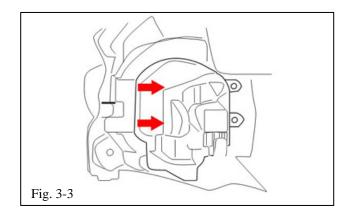

- (c) Remove the fasteners (Fig. 2-2).
- (d) Remove the panel and place it in a safe location.

3. Remove the Fog Light.

 (a) Disconnect the fog light harness indicated by the circle. Press the tab, pull the connector in the direction indicated by the arrow and disconnect it (Fig. 3-1).


(b) Remove the Phillips screws indicated by the circles. Place the screws in a safe place. The screws will be reused to install the LED fog light (Fig. 3-2).


(c) Slide the O.E. fog light from the guides in the direction indicated (Fig 3-3).


Issue: A 02/06/2017


ΤΟΥΟΤΑ

Procedure

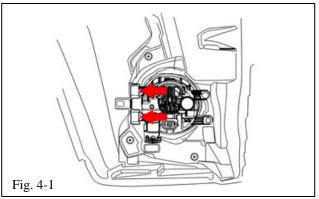

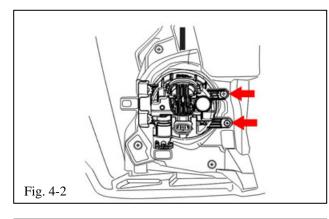

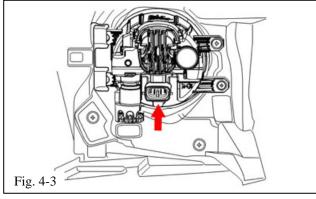

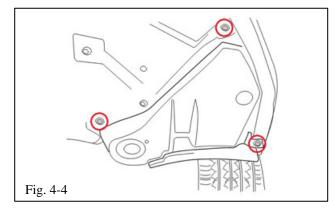


4. Install the LED fog lights.


(a) Insert the LED fog light in to the guides (Fig. 4-1).


(b) Secure the fog light with the screws removed and saved from step 3(b) (Fig 4-2).

(c) Reconnect the harness disconnected in Step 3(a) (Fig. 4-3).

(d) Reinstall the body panel removed in Step 2(b) and Step 2(c) by reinstalling the fasteners in the locations indicated (Fig. 4-4).

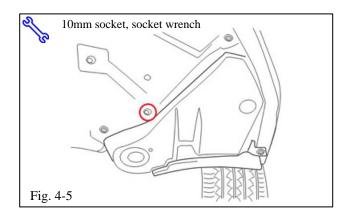

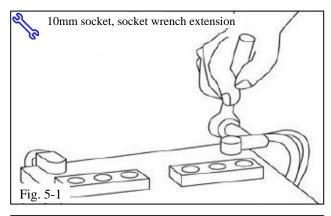

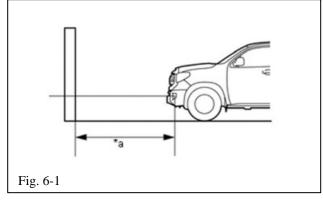

- (e) Reinstall the bolt in the location indicated (Fig. 4-5).
- (f) Repeat the procedure on the opposite side.

5. Reconnect the Battery.

(a) Reconnect the negative battery cable (Fig. 5-1).

Torque: 5.4 N-m (48 in-lbs)


CAUTION: Do not touch the positive terminal with any tool.


6. Adjust the LED Fog Light.

- (a) Prepare the vehicle for the fog light aiming adjustment (Fig 6-1).
 - Make sure that there is no damage to or deformation of the body around the fog lights.
 - (2) Fill the fuel tank.
 - (3) Make sure that the oil is filled to the specified level.
 - (4) Make sure that the coolant is filled to the specified level.
 - (5) Inflate the tires to the appropriate pressures.

2018 -

- (6) Unload the vehicle, ensuring that the spare tire, tools, and jack are in their original positions.
- (7) Have a person of average weight (68 kg, 150 lb) sit in the driver seat.
- (b) Prepare for the fog light aiming.
 - Place the vehicle in a location that is dark enough to clearly observe the cutoff line. The cutoff line; below which light from the fog lights can be observed and above which it cannot.
 - (2) Place the vehicle at a 90° angle to the wall.
 - (3) Create a 7.62 m (25.0 ft.) distance between the vehicle (fog light bulb center) and the wall (Fig. 6.2).
 - (4) Make sure that the vehicle is on a level surface.
 - (5) Bounce the vehicle up and down to settle the suspension.
- (c) Prepare a piece of thick white paper approximately 2.0 m (6.56 ft.) (height) x
 4.0 m (13.1 ft.) (width) screen.
- (d) Draw a vertical line down the center of the screen (V line).
- (e) Set the screen as shown (Fig 6-2).
- **NOTE:** *a: 7.62 m (25.0 ft.) between the vehicle (fog light bulb center) and wall. If unavailable, secure a distance of exactly 3 m (9.84 ft.) for the adjustment (the target zone will change with the distance, so follow the instructions in the illustration (Fig. 6-2).

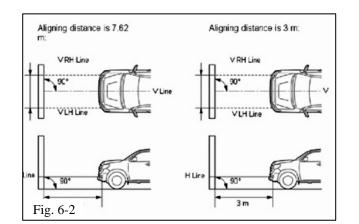

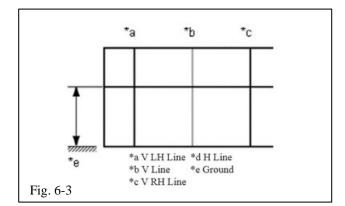



HIGHLANDER

- (f) Draw the base lines (H line, V LH, V RH) on the screen (Fig. 6-3).
 - (1) H Line (fog light height): Draw a horizontal line across the screen so that it passes through the center marks. The H line should be at the same height as the fog light bulb center marks of the fog lights.
 - (2) V LH Line, V RH Line (Center mark position of left-hand (LH) and right-hand (RH) fog lights): Draw two vertical lines so that they intersect the H line at each center mark.
- (g) Inspect the fog light aiming.
 - Cover the fog light or disconnect the connector of the fog light on the opposite side to prevent light from light that is not being inspected from affecting the fog light aiming inspection.

NOTE: Do not keep the fog light covered for more than 3 minutes. The fog light lens is made of synthetic resin may melt or be damaged due to excessive heat.

- (1) Start the engine.
- (2) Turn on the fog light and check if the cutoff line falls within the specified area (Fig. 6-4).

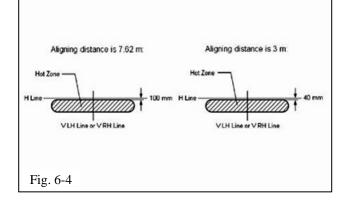

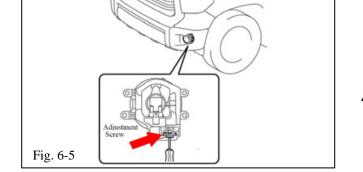

HIGHLANDER

2018 -

- (1) Adjust the aim vertically (Fig. 6-5).
- (2) Adjust the aim of each fog light to the specified range by turning the aiming screw with a screwdriver.

NOTE: The final turn of the aiming screw should be made in the clockwise direction. If the screw is tightened tight loosen it, and then retighten it so that the final turn of the screw is in the clockwise direction.

(h) Adjust the fog light aiming.

TOYOTAHIGHLANDER2018 -FOG LIGHT KIT, LEDChecklist - these points MUST be checked to ensure a quality installationFOG LIGHT KIT, LED

Check:	Look For:		
Accessory Function Checks			
Install a short pin (if necessary)			
Turn on the headlights	Headlights function as normal		
Check the fog light switch illumination	Switch lights up		
Turn the fog lights on	Fog lights turn on		
Switch the high beams on	High beams on/Fog lights off		
Turn the headlights off	Headlights and fog lights turn off		
Vehicle Function Checks			
Taillights/brake lights/turn signals	All function properly		
Reverse lights & emergency flashers	Function properly		
Mirror & dimmer controls	Function properly		
Traction control	Functions properly		
Negative battery cable torque	S 5.4 N-m (48 in-lbs)		
Vehicle Appearance Check			
After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)		