Part Number: PT276-52041

Kit Contents

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3	1	Instruction Card
4	1	ID Card
5	1	Order Form / Envelope

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	1	PT276-06999- Key Pouch

Conflicts

Recommended Tools

Personal & Vehicle	Notes
Protection	
None	
Special Tools	Notes
None	
Installation Tools	Notes
Socket	21 mm, Deep Well
Torque Wrench	Dial type or Digital (lbf-ft.)
Special Chemicals	Notes
Special Chemicals None	Notes

General Applicability

16" Accessory Wheel- PT904-52084
17" Accessory Wheel- PT904-52082

Recommended Sequence of Application

Item #	Accessory
1	Alloy Wheel
2	Wheel Lock

*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

STOP	<u>STOP</u> : Damage to the vehicle may occur. Do not proceed until process has been complied with.
+	OPERATOR SAFETY: Use caution to avoid risk of injury.
	<u>CAUTION</u> : A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
el c	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	<u>REVISION MARK:</u> This mark highlights a change in installation with respect to previous issue.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota/Scion dealer for a copy of this document.

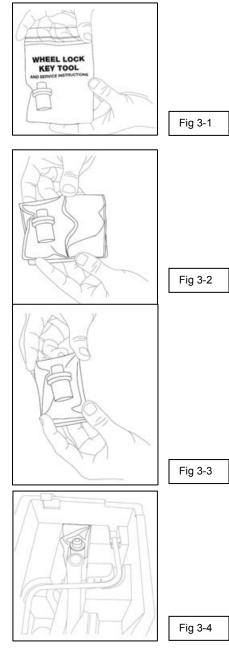

1. Remove One Lug Nut.

(a) Carefully remove one lug nut from each wheel, in order to avoid damage to wheel.

2. Install Wheel Lock.

- (a) By hand, install a Wheel Lock on each wheel.
- (b) Take the key supplied in the wheel lock set.Place it on top of the wheel lock and turn until the patterns engage.
- (c) Place the socket on top of the key. Using a torque wrench and while applying pressure on the key tighten the wheel locks to 103 N-m (76 lbf-ft).

3. Key Storage

- (a) Place wheel lock key into the bottom left hand side of the plastic bag labeled "wheel lock key tool". (See Fig 3-1)
- (b) Fold the bag in the height direction.(See Fig 3-2)
- (c) Then fold the bag again in the width direction.(See Fig 3-3)

NOTE: Make sure the key is visible through the clear bag.

(d) Insert bag in the pocket over the floor jack. (See Fig 3-4)

4. Place ID Card in Glove Box

SCION Checklist - these po	xB ints MUST be checke	2008 ed to ensure a qual	ity installation.
Check:			Look For:
Accessory Function	<u>Check:</u>		
Correct part	number has been inst	alled.	Verify part number on package
Wheel lock	tightness.		Verify wheel locks have been installed at a torque of 103 N-m (76 lbf-ft.).
Wheel for da	amage.		Verify installation has not caused any damage to the wheel.
Place ID Ca	rd in glove box		Verify placement of ID Card in glove box.