Part Number: PT276-30986 or 00276-00970 (PPO) 00276-00901 or 00276-00900 (DIO)

Kit Contents

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3	1	Port Stuffing Pack w/ID Card
4	1	Cable Tie

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	1	

Conflicts

Recommended Tools

Personal & Vehicle Protection	Notes	
Safety Glasses		
Special Tools	Notes	
None		
Installation Tools	Notes	
Socket	21mm Deep Socket	
Torque Wrench	Dial type or Digital 0-100 ft·lbf (0-135N·m)	
Wire Brush		
Pliers	With Side Cutter	
Special Chemicals	Notes	
None		

General Applicability

Factory Alloy

Recommended Sequence of Application


Item #	Accessory
1	
2	
3	
	VM 1 /

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

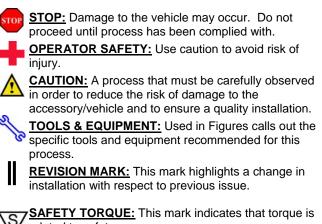

related to safety.




Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Lexus dealer for a copy of this document.

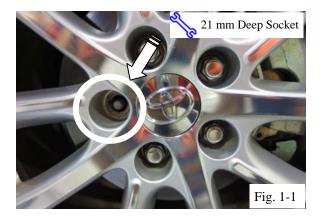





1. Remove One Lug Nut.

(a) Remove one lug nut from each wheel(Fig 1-1) and discard according to local scrap/recycle regulations.



(b) If studs are dirty, clean with a wire brush prior to installing wheel locks. Use Safety Glasses while using wire brush.

2. Install Wheel Lock.




CAUTION: DO NOT USE IMPACT WRENCH TO INSTALL OR REMOVE WHEEL LOCKS.

- (a) By hand, install a Wheel Lock on each wheel. (Fig. 2-1)
- (b) Take the key supplied in the wheel lock set.Place it on top of the wheel lock and turn until the patterns engage. (Fig. 2-2)

Issue: E 4/1/13

TOYOTATACOMA2005 -Procedure



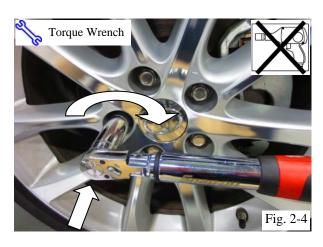

(c) Place the 21mm Deep Socket on top of the key. (Fig 2-3)


(d) Using a torque wrench and while applying pressure on the key, tighten the wheel locks to 113 N·m (83 ft·lbf). (Fig. 2-4)



CAUTION: DO NOT USE IMPACT WRENCH TO INSTALL OR REMOVE WHEEL LOCKS.



Torque: 113 N·m (83 ft·lbf)

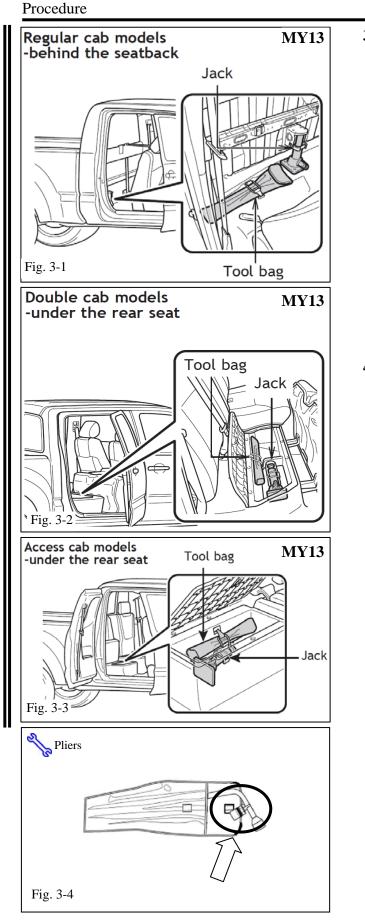

3. Key Storage.

- (a) Locate and remove the vinyl tool bag.(Fig's 3-1, 3-2, 3-3 for MY13. Refer to owner's manual for other model years).
- (b) Attach the key to the vehicle lug wrench using the cable tie. (Fig. 3-4)
- (c) Pull cable tie tight with pliers and cut off excess with side cutters.
- (d) Place the lug wrench with the key attached in the vinyl tool bag.
- (e) Return the tool bag to the storage compartment.
- 4. Complete the Installation.
 - (a) Place all remaining paperwork in the glove compartment.

TOYOTATACOMA2005 -Checklist - these points MUST be checked to ensure a quality installation

Checklist - these points MUST be checked to ensure a c	quality installation.
Check:	Look For:
Accessory Function Checks	
Correct part number has been installed	Verify part number on package
Wheel lock tightness	Wheel locks have been installed at a torque
	of 113 N•m (83 ft•lbf). Verify process only
	Check torque during installation.
Vehicle Appearance Check	
After accessory installation and removal of	Ensure no damage (including scuffs and
protective cover(s), perform a visual	scratches) was caused during the
inspection.	installation process.
	(For PPO installations, refer to TMS Accessory Quality Shipping Standard.)
	The cost of quanty shipping standard,