

**Part Number: PT276-52041**

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Kit Contents**

| Item # | Quantity Req'd. | Description           |
|--------|-----------------|-----------------------|
| 1      | 4               | Wheel Lock            |
| 2      | 1               | Key                   |
| 3      | 1               | Instruction Card      |
| 4      | 1               | ID Card               |
| 5      | 1               | Order Form / Envelope |
|        |                 |                       |

**Additional Items Required For Installation**

| Item # | Quantity Req'd. | Description |
|--------|-----------------|-------------|
|        |                 |             |
|        |                 |             |

**Conflicts**

|  |
|--|
|  |
|--|

**Recommended Tools**

|  |                                |
|--|--------------------------------|
| <b>Personal &amp; Vehicle Protection</b> | <b>Notes</b>                   |
| None                                     |                                |
|  |                                |
| <b>Special Tools</b>                     | <b>Notes</b>                   |
| None                                     |                                |
|  |                                |
| <b>Installation Tools</b>                | <b>Notes</b>                   |
| Socket                                   | 21 mm, Deep Well               |
| Torque Wrench                            | Dial type or Digital (lbf-ft.) |
| Pliers                                   | With Side Cutter               |
|  |                                |
| <b>Special Chemicals</b>                 | <b>Notes</b>                   |
| None                                     |                                |
|  |                                |

**General Applicability**

|                                  |
|----------------------------------|
| 16" Accessory Wheel- PT904-52083 |
|----------------------------------|

**Recommended Sequence of Application**

| Item # | Accessory   |
|--------|-------------|
| 1      | Alloy Wheel |
| 2      | Wheel Lock  |
|        |             |
|        |             |

\*Mandatory

**Vehicle Service Parts** (may be required for reassembly)

| Item # | Quantity Req'd. | Description |
|--------|-----------------|-------------|
| 1      |                 |             |
| 2      |                 |             |
| 3      |                 |             |
|        |                 |             |

**Legend**



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.



**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota/Scion dealer for a copy of this document.

### **1. Remove One Lug Nut.**



- (a) Carefully remove one lug nut from each wheel, in order to avoid damage to wheel.

### **2. Install Wheel Lock.**


- (a) By hand, install a Wheel Lock on each wheel.
- (b) Take the key supplied in the wheel lock set. Place it on top of the wheel lock and turn until the patterns engage.



- (c) Place the socket on top of the key. Using a torque wrench and while applying pressure on the key tighten the wheel locks to 103 N-m (76 lbf-ft).

### **3. Key Storage**

- (a) Attach the key to the vehicle lug nut wrench using a cable tie. (Fig 3-1)
- (b) Pull cable tie tight with pliers and cut off excess with side cutters.
- (c) Place the lug wrench with the key attached in the tool pouch.
- (d) Replace tool pouch in its original location.
- (e) Place the wheel lock information in the zip lock bag and place it in the glove compartment.

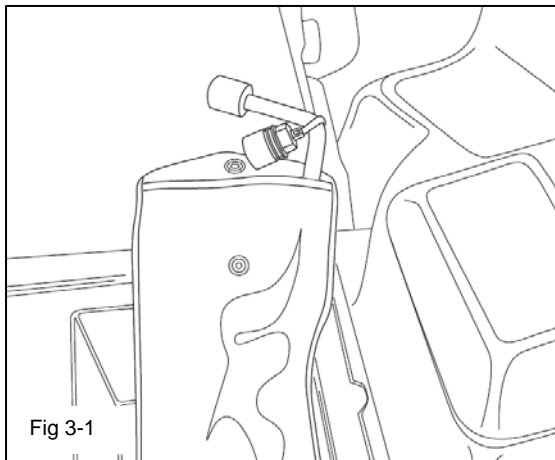

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Check:

- ☐ Correct part number has been installed.
- ☐ Wheel lock tightness.
- ☐ Wheel for damage.

- Verify part number on package
- Verify wheel locks have been installed at a torque of 103 N-m (76 lbf-ft.).
- Verify installation has not caused any damage to the wheel.
- Verify wheel lock key information is stored in the glove box.