

Part #: PT398-08103














NOTE: Part number of this accessory may not be the same as the part number shown.

**Conflicts:**

Do not install into Manual Transmission Vehicles or Vehicles without RKE system.

Will not program with Techstream Lite.

**Kit Contents**
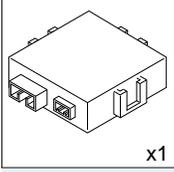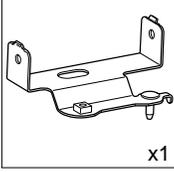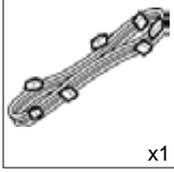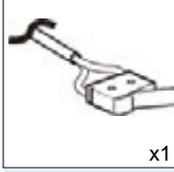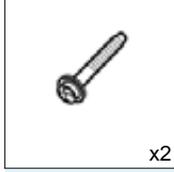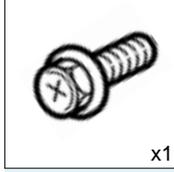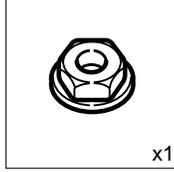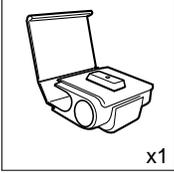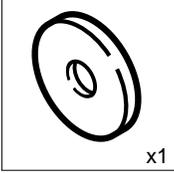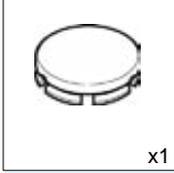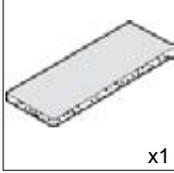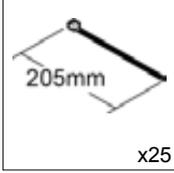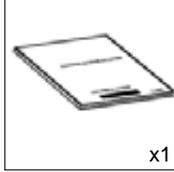
<p>RES ECU</p>  <p>x1</p> <p>PT398-89100-NS</p>	<p>RES ECU Bracket</p>  <p>x1</p>	<p>V4 Harness</p>  <p>x1</p>	<p>Hood Switch</p>  <p>x1</p> <p>PT398-0T096</p>	<p>Hood Switch Screw</p>  <p>x2</p> <p>90167-20001</p>	<p>M6 Bolt</p>  <p>x1</p> <p>91651-60618</p>	<p>Nut</p>  <p>x1</p>
<p>Scotch Lock</p>  <p>x1</p>	<p>Washer</p>  <p>x1</p>	<p>Nut Cover</p>  <p>x1</p> <p>53579-0E010</p>	<p>Foam Tape</p>  <p>x1</p>	<p>Wire Tie</p>  <p>205mm</p> <p>x25</p>	<p>Window Label</p>  <p>English x2 Spanish x2</p> <p>(E) 08192-07810 (S) PT398-00071-SL</p>	<p>Key Tag</p>  <p>English x2 Spanish x2</p> <p>(E) PT398-4209E (S) PT398-4209S</p>
<p>Remote Label</p>  <p>English x2 Spanish x2</p> <p>(E) 08192-07820 (S) PT398-00070-CL</p>	<p>Engine Room Label</p>  <p>English x1 Spanish x1</p> <p>(E) PT398-00070-EL (S) PT398-00070-SL</p>	<p>Owner's Guide</p>  <p>x1</p>	Service Part #'s			

**Additional Items**

(may be required)

Item#	Description

**Recommended Sequence of Application**

Item#	Description

**Recommended Tools**

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Vehicle Protection	Blankets, Parts Boxes
<b>Special Tools</b>	
Techstream	Do not use Techstream Lite
<b>Installation Tools</b>	
Screwdriver	#2 Phillips, Flat Blade Jeweler's, Phillips Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01
Side Cutters	
Torque Wrench	Battery: 36 in•lbf (4.07 N•m), Hood Latch: 71 in•lbf (8 N•m), Driver's Knee Airbag: 88.5 in•lbf (10 N•m)
Pliers	Needle Nose
Tape	Clear, Electrical
Socket	Magnetic 10mm, Extension
<b>Special Chemicals</b>	
Cleaner	VDC Approved Cleaner
Glass Cleaner	Household Glass Cleaner

**Table of Contents**

I. Preparation .....	1–3
1. Table of Contents .....	2
2. Wire Routing Overview .....	3
II. Procedure .....	4–40
1. Hood Switch Installation.....	4
2. Disassembly.....	8
3. RES ECU Preparation and Installation .....	16
4. V4 Wire Harness Installation (Passenger’s Side) .....	18
5. V4 Wire Harness Installation (Passenger’s Side to Driver’s Side).....	23
6. Registration Preparation .....	29
7. Registration (with Immobilizer).....	30
8. Registration (without Immobilizer).....	36
9. Tags and Labels.....	39
10. Complete the Installation .....	40
III. Checklist .....	41–43
1. Accessory Function Checks.....	41
2. Vehicle Function Checks.....	42

**Legend**

-  Do not proceed until process has been completed.
-  Follow steps carefully to avoid damaging the Vehicle or Accessory
-  Use caution to avoid injury.
-  Used in Figures to call attention to specific tools recommended for the process.
-  Highlights a change in installation with respect to previous issue.
-  Indicates that torque is related to safety.
-  Video available; click to play.
-  Wire Tie location and number.

**Accessory Installation Practice (read before installation)**

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the “Accessory Installation Practices” document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your Toyota dealer for a copy of this document.



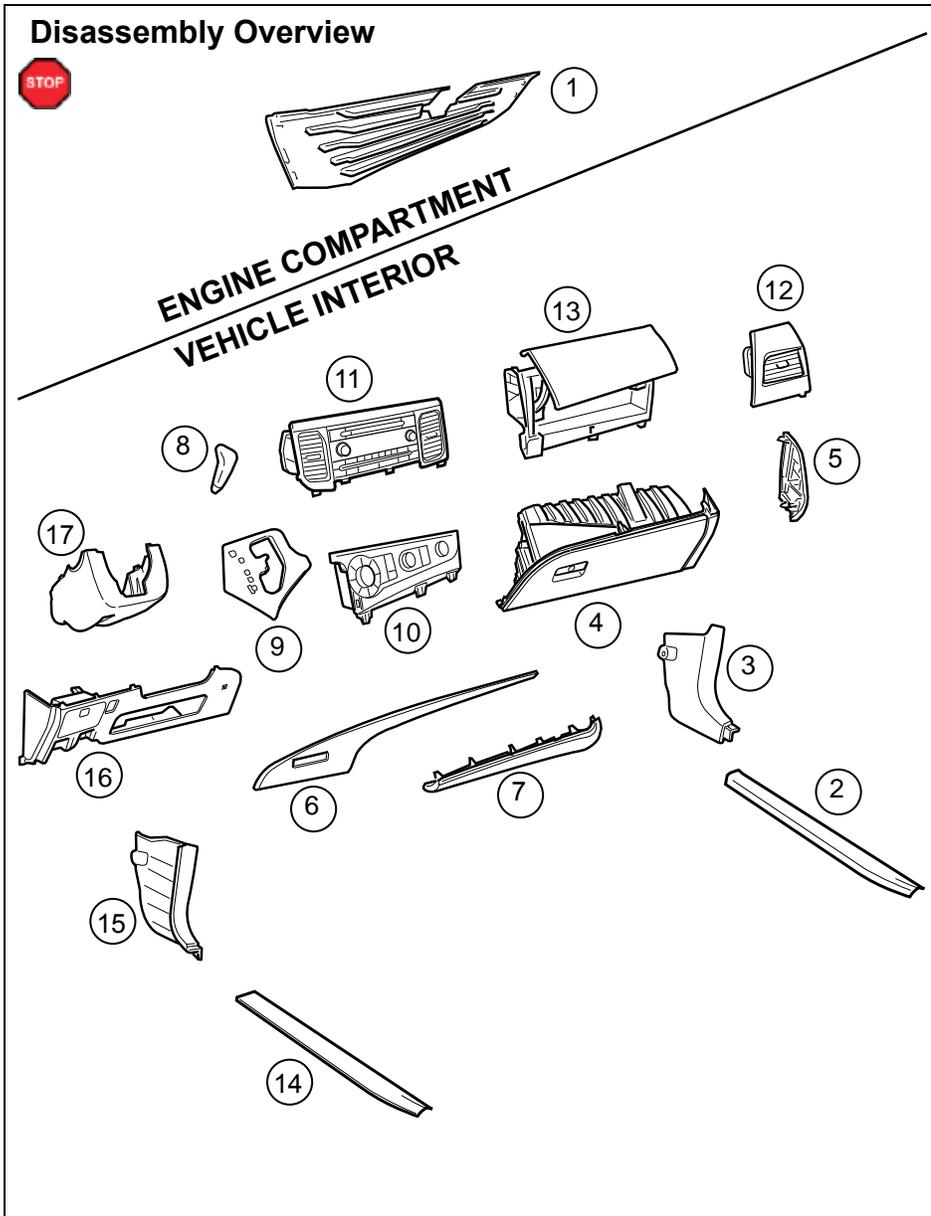

1	Front Grill
2	PS Step Cover
3	PS Cowl Cover
4	Glove Box
5	Dash Side Cover
6	Dash Wood Trim
7	PS Dash Trim
8	Shift Knob
9	Shift Trim
10	HVAC Control Panel
11	Audio Unit
12	PS Air Vent
13	Upper Glove box
14	DS Step Cover
15	DS Cowl Cover
16	DS Lower Dash Cover
17	Lower Steering Column Cover


- Disconnect all Corresponding Connectors.
- Re-attach Panel Clips that falls off during disassembly.

**1. Hood Switch Installation.**


- a. Verify that the Short Pin is Installed.
  - If not Install now.

## Confirm the following:


Insert the Key into the ignition, then Remove the Key from the ignition. Observe the Security LED.

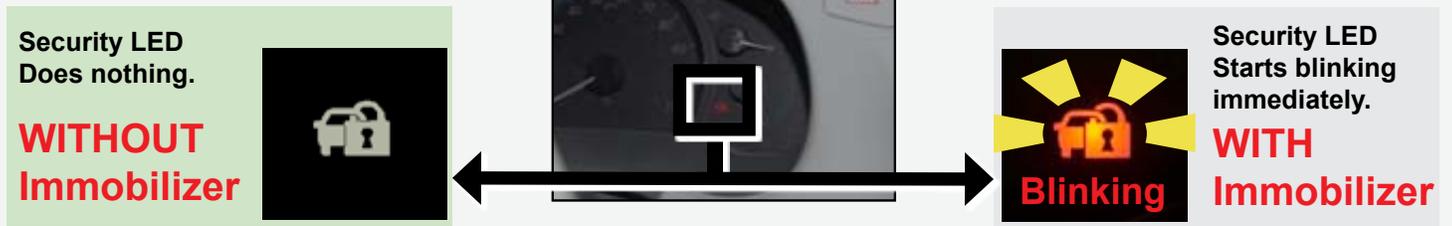

Before beginning, close the Hood and the Doors. Press the remote control's lock button.

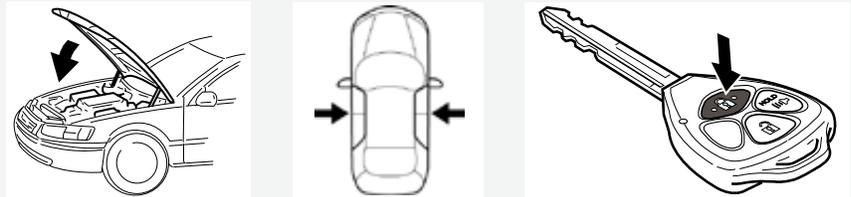

Observe the Security LED on the Instrument Panel

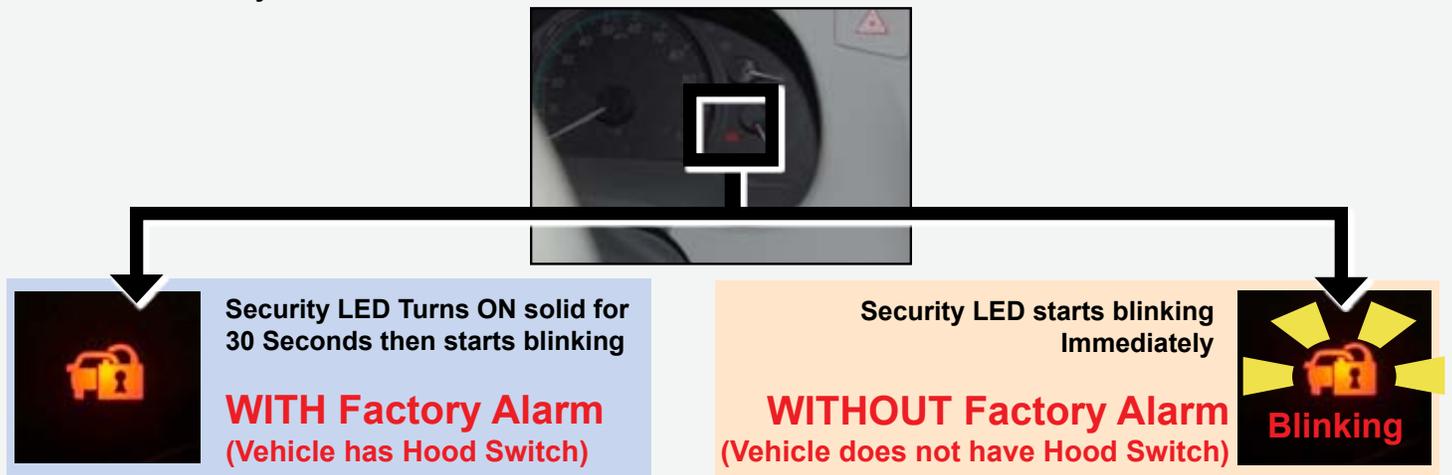

- b. Place the Vehicle in Neutral with the Parking Brake set.
- c. Tape the Gas Door shut.
- d. Disconnect the Negative Battery Terminal.
  - Note the Battery Cable Position as it will be re-installed in the same position.



**CAUTION:** Do not touch the Positive Terminal.

**Vehicles Without Alarm Only**

- e. Remove the Vehicle's Front Grill by pulling outward.
  - Remove 6 Clips.



**NOTE:** Apply Protective tape on top of Bumper.

- f. Mark the Bolt locations on both the Hood Latch Assembly and the Vehicle's Brace.
- g. Dislodge the Vehicle's Hood Latch Assembly.
  - Remove Nut Cover and discard.
  - Remove 3 Bolts.

- h. Remove the Hood Latch Cable.
- i. Release the Spring from the Hood Latch.

- j. Install the Hood Switch with the Switch Lever underneath the Hood Lock Trigger Lever.



Make sure to hold the Hood Switch by its sides.



Make sure the Hood Switch Lever is positioned properly.



If the Hood Switch is Broken RES will not function.

- k. Reinstall the Spring.

- l. Attach the Hood Switch Clip to the Hood Latch Assembly.

- m. Reinstall the Hood Latch Cable to the Hood Latch Assembly.

- n. Reinstall the Hood Latch Assembly by aligning to Bolt Markings made on the Vehicle's Brace.



**NOTE:** Make sure to Torque the Bolts to 71 in·lbf (8 N·m) in the specified order.



**NOTE:** Close the Hood and tap on it to check for rattle. Adjust the Hood Latch Assembly if necessary.

- o. Connect the Hood Switch Connector to the Vehicle's Pre-Connector.
- p. Install the Nut Cover supplied in the Kit.
- q. Reinstall the Front Grill.

## 2. Disassembly.

- a. Remove Passenger's Side Step Cover.
  - Disengage front inner sill clip and front step plate clip.
  - Disengage rear inner sill clip and rear step plate clip.
  - Hold ends up keeping guide pins up and slide sill forward to disengage remaining clips.



**CAUTION:** Make sure to follow steps above to avoid breaking Sill Plate Clips.

- b. Remove Passenger's Side Cowl Cover.
  - Remove 1 Nut.
-  c. If the Clip stays in the vehicle remove it.
  - Carefully remove otherwise it will fall inside the vehicle.
  - Re-attach the Clip to the Cowl Cover.

- d. Remove 2 Bolts from the bottom of the Glovebox.

- e. Open Glovebox and remove 2 Screws.
- f. Remove the Glovebox.

g. Remove Dash Side Cover.

h. Open Cup Holder.

i. Remove Dash Wood Trim.

j. Remove Passenger's Side  
Dash Trim.

- k. Remove the Shift Knob.
- l. Remove the Shift Trim.

- m. Remove the HVAC Control Panel.

- n. Remove Audio Unit.
  - Remove 4 Bolts.



**NOTE:** Add protective tape to any pry area(s).

- o. Remove Passenger's Side Air Vent.
  - Open the Upper Glove Box.

- p. Remove Upper Glove Box.
  - Open Upper Glove Box.
  - Remove 1 Screw Cover.
  - Remove 3 Screws.



**NOTE:** Add protective tape to any pry area(s).

- q. Remove Driver's Side Step Cover.
  - Disengage front inner sill clip and front step plate clip.
  - Disengage rear inner sill clip and rear step plate clip.
  - Hold ends up keeping guide pins up and slide sill forward to disengage remaining clips.



**CAUTION:** Make sure to follow steps above to avoid breaking Sill Plate Clips.

r. Remove Driver's Side Cowl Cover.

- Remove 1 Nut.



s. Remove the Clip if it stays in the vehicle.

- Carefully remove otherwise it will fall inside the vehicle.
- Re-attach the Clip on the Cowl Cover.

t. Remove 2 Screws from Lower Steering Column Cover.

- Insert the Key into the ignition and turn it to "ON" position.
- Turn the Steering Wheel from Right to Left to access the Screws.

u. Dislodge the Steering Column's Center Clip.

- v. Remove the Lower Steering Column Cover.

- w. Dislodge the Lower Dash Cover.

- Remove 2 Bolts.

- x. Remove Hood Release Cable and Gas Door Release Cable.

- y. Remove the Lower Dash Cover.

- z. Dislodge the Driver's Knee Airbag.
  - Remove 4 Bolts.



**CAUTION:** Do not disconnect the Vehicle's Connector.

- aa. Wrap the Airbag with blanket.
- ab. Place the Airbag on top of the TVIP box to prevent stress on the Airbag Harness.



- d. Position RES ECU in the location shown.

- e. Install RES ECU to the Vehicle's Bracket.



**NOTE:** Make sure the Guide Pin is seated correctly.

- Tighten using 1 Nut and 1 Bolt with Washer from the Kit.

**4. V4 Harness Installation.  
(Passenger's Side)**

- a. Route the V4 Harness behind then over the Vehicle's Reinforcement Brace and secure it with 1 Wire Tie.

- b. Secure V4 Harness to the Vehicle's Harness using 1 Wire Tie.

**Vehicles With Alarm Only**

- c. Connect the V4 1P White Connectors together.

**V4 ONLY**

- d. Locate the Vehicle's 5P Pre-Connector.
- e. Remove the Tape securing the Pre-Connector Wire.
- f. Disconnect the Vehicle's 5P Pre-Connector.
  
- g. Remove the Vehicle's Ground Terminal Bolt.
  - Use Top Ground Terminal on the PS Cowl Area.
- h. Secure the V4 Ground Terminal to the Vehicle using the same Bolt.
- i. Connect the Vehicle's 5P Pre-Connector to the V4 5P Connector.
- j. Secure the V4 Harness and 5P Connectors together with the V4 1P Connectors to the Vehicle Harness using 2 Wire Ties.
  
- k. Disconnect the Vehicle's Black 12P Connector from the Passenger's Side Cowl Area.
  - Ensure Connector Lock is fully released prior to pulling on Connector.















- k. Route the V4 1P Connectors toward the Driver's Side Junction Box and secure to the Vehicle's Harness with 1 Wire Tie.

#### **Vehicles Without Alarm Only**

- l. Disconnect the Vehicle's 40P Connector from the Driver's side J/B.
  - Release Black Connector Lever.

- m. Pull back 1 inch of the Vehicle's Wire Harness Shielding to expose the Wires.
  - Remove Tape from Harness Shielding.

- n. Attach the V4 Harness's Blue Wire to the indicated Blue Wire on the Vehicle's 40P Connector using 1 Splicing Connector.
- o. Re-secure the Vehicle's Wire Harness Shielding with Electrical Tape.

- p. Reconnect the Vehicle's 40P Connector to the Driver's J/B.

- q. Secure the V4 Harness to the Vehicle's Harness with 1 Wire Tie.

**Vehicles Without  
Immobilizer Only**

- r. Connect the V4 1P Connectors to itself and secure to the Vehicle Harness with 1 Wire Tie.

**Vehicles With  
Immobilizer Only**

- s. Locate the Vehicle's 1P Connector near the Driver's J/B area.
- t. Disconnect the Vehicle's 1P Connector.
  
- u. Connect the V4 1P Connectors in between the Vehicle's 1P Connectors.

**Vehicles Without Alarm Only**

- v. Secure the 1P Connectors to the Vehicle Harness with 1 Wire Tie as shown.

**Vehicles With Alarm Only**

- w. Secure the end of the V4 Blue Wire to the V4 Black Wire using Electrical Tape.
- x. Secure the 1P Connectors with Taped V4 Wires to the Vehicle Harness using 1 Wire Tie as shown.

**6. Registration Preparation.**

- a. Re-install the Driver's side Knee Airbag.



**NOTE:** Make sure to tighten the Bolts to 88.5 in•lbf (10 N•m) in the specified order.


- b. Reassemble the Vehicle except for the Passenger's Cowl cover and Step cover.



**NOTE:** Make sure that all Connectors are reconnected.



**NOTE:** Verify that panels fit together properly, with no uneven gaps.



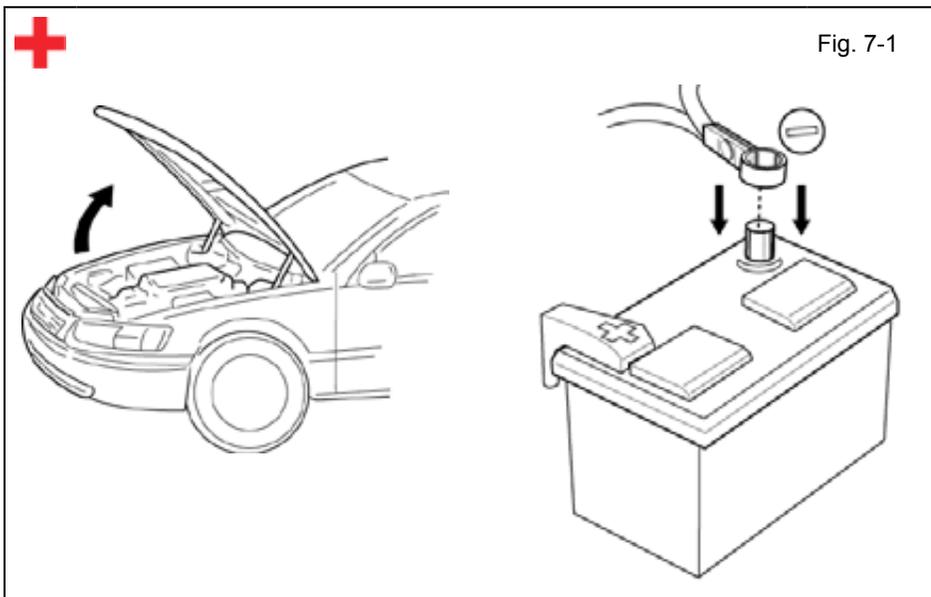


## 7. Registration (Vehicles With Immobilizer).

- a. Open the Hood.
- b. Temporarily reconnect the Negative Battery Cable.



**CAUTION:** Do not touch the Positive Terminal.

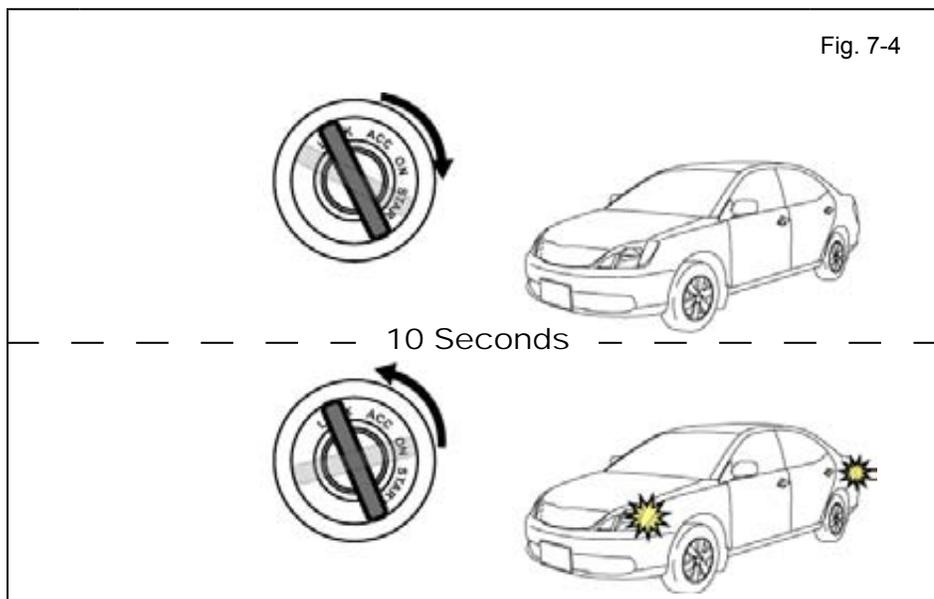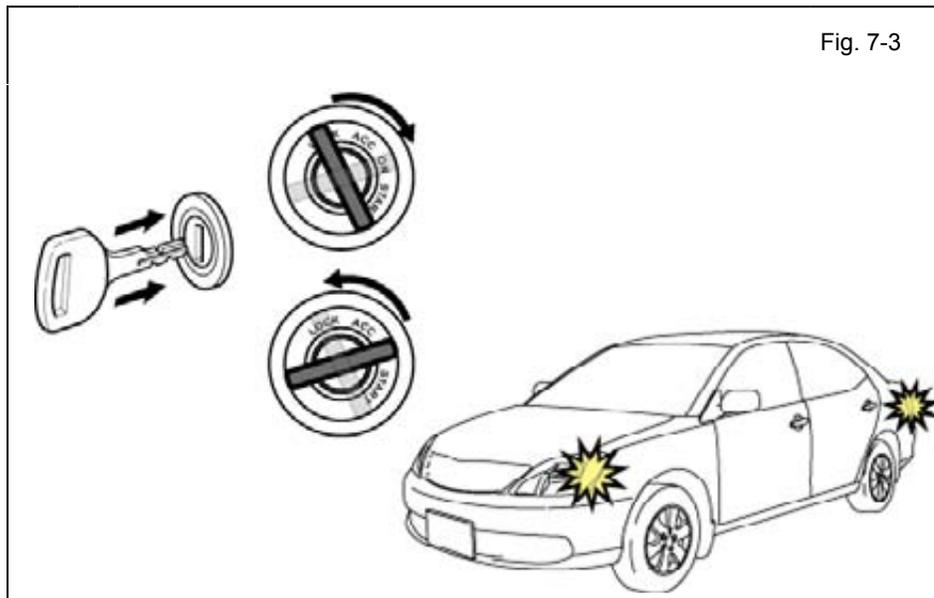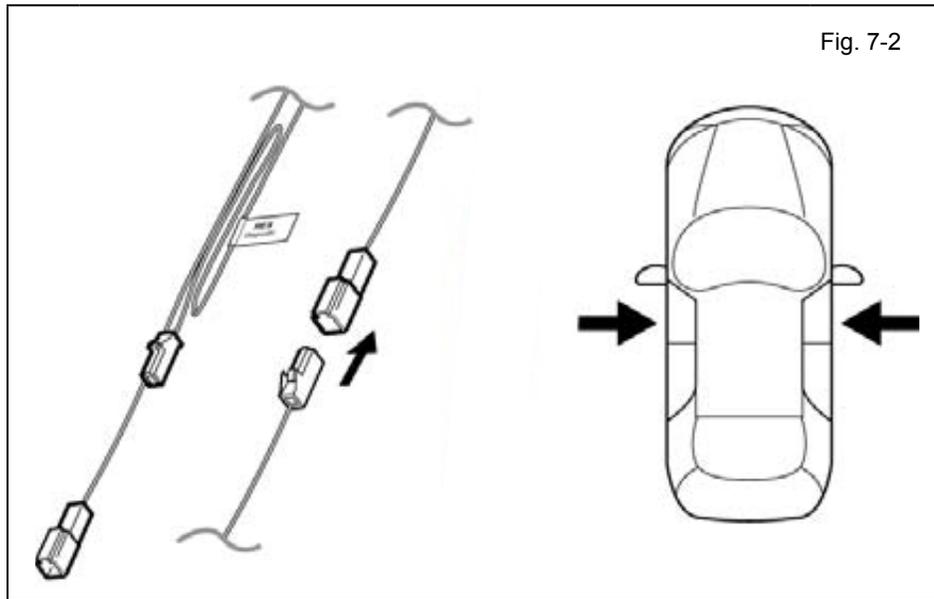

c. Locate the 1P RES Diagnostic Connectors in the Passenger's Side Cowl Area and connect them.

**NOTE:** Once connected you will have 10 minutes to complete this section, steps d-ab.

d. Close all doors.

e. Insert the key into the Ignition.

f. Turn it from "OFF" to "ON" 5 times.

**LOOK:** For the Hazard Lights to flash Once.

g. Turn the key to the "OFF" position.

h. Start the Engine.

i. After 10 seconds stop the Engine.

**LOOK:** For the Hazard Lights to flash Once.


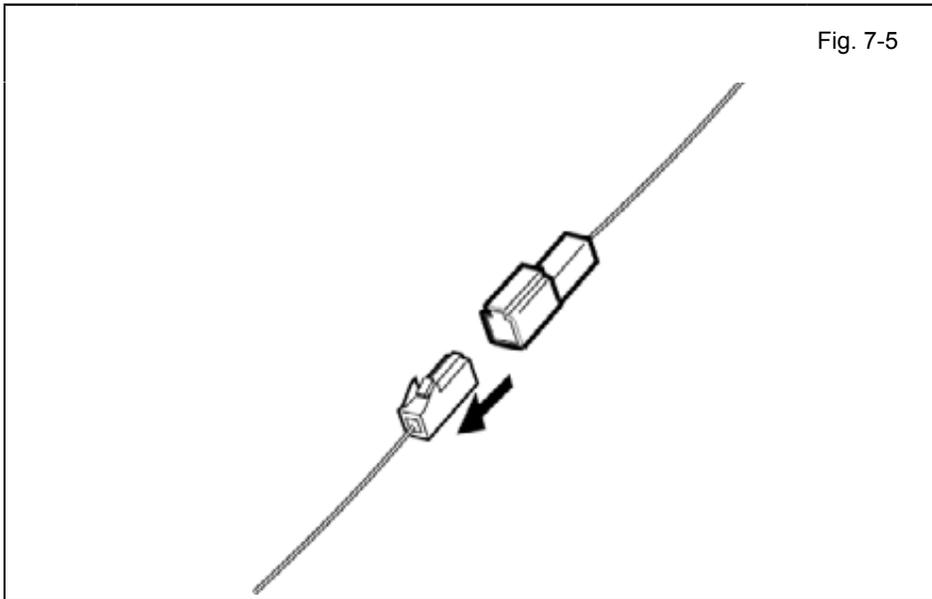


Fig. 7-5

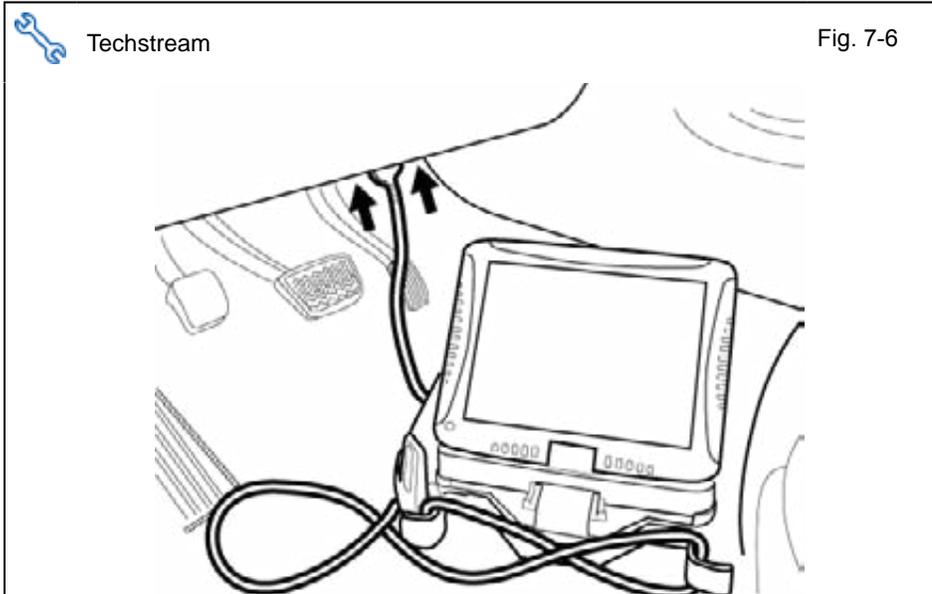

Techstream

Fig. 7-6

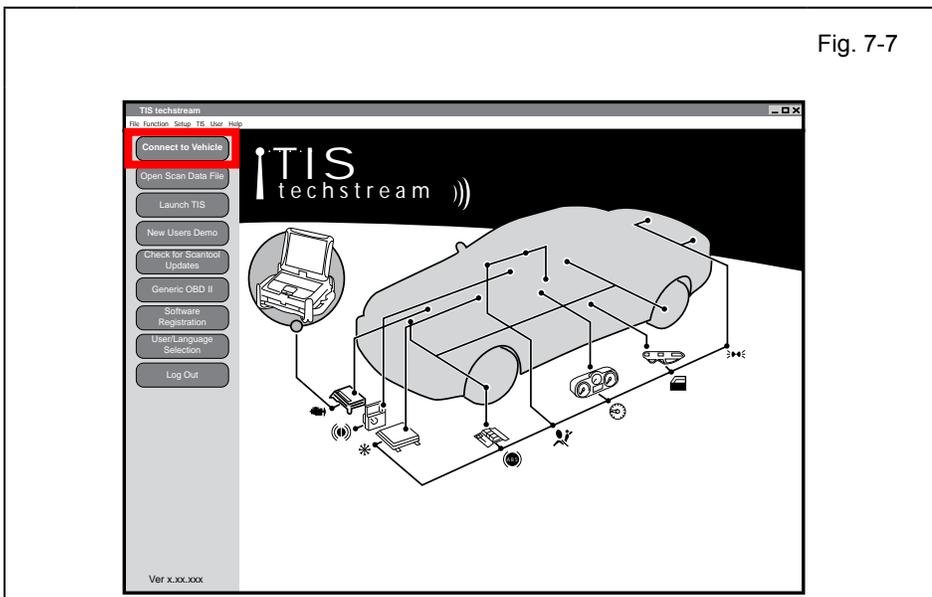


Fig. 7-7

**IF THIS PROCEDURE FAILED**

The Hazard Lights flash Twice.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- Start again from step c.



**CAUTION:** Techstream Lite will not work for this section, use the Techstream Notebook ONLY.

- Connect the Techstream Notebook to the Vehicle's Diagnostic Port.
- Turn the Key in the Ignition to the "ON" position.

- Start the TIS Techstream Application by clicking on the shortcut located on the Desktop.
- Click "Connect to Vehicle."

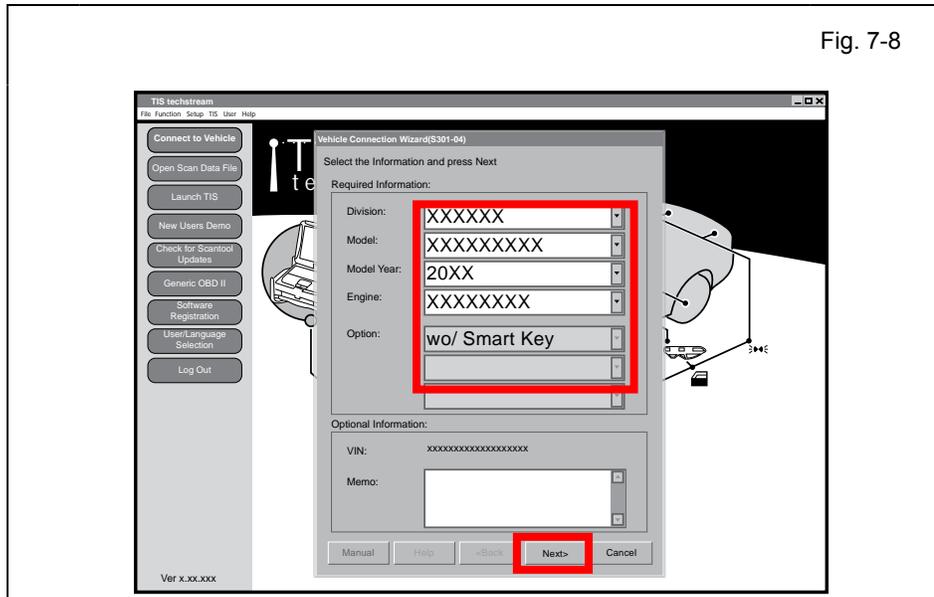


Fig. 7-8

- n. Confirm that the information displayed on the Vehicle Connection Wizard is correct for the vehicle. If not verify that the Techstream is properly connected.
- o. Select w/o Smart Key.
- p. Click "Next>."

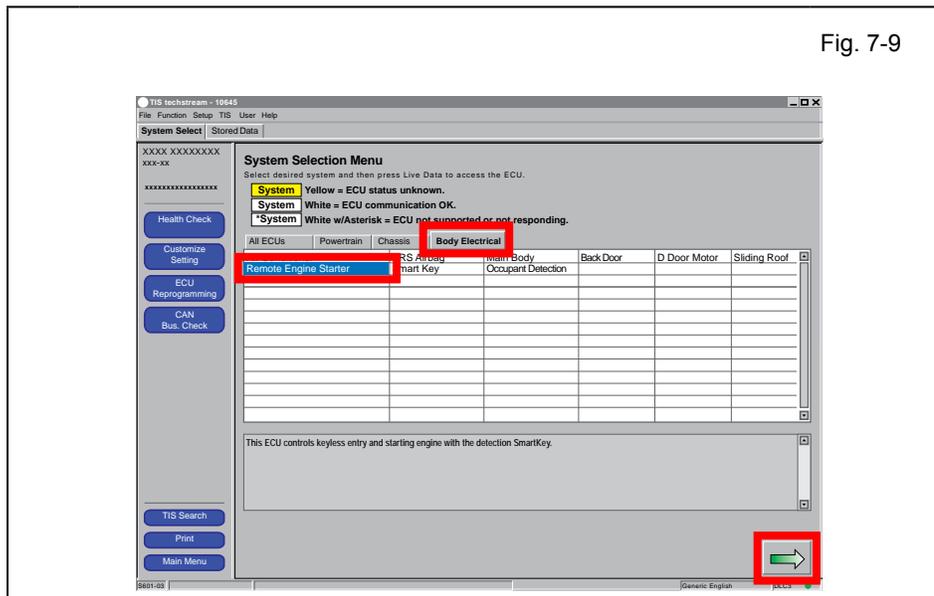


Fig. 7-9

- q. Select "Body Electrical" tab.
- r. Select "Remote Engine Starter."
- s. Click .



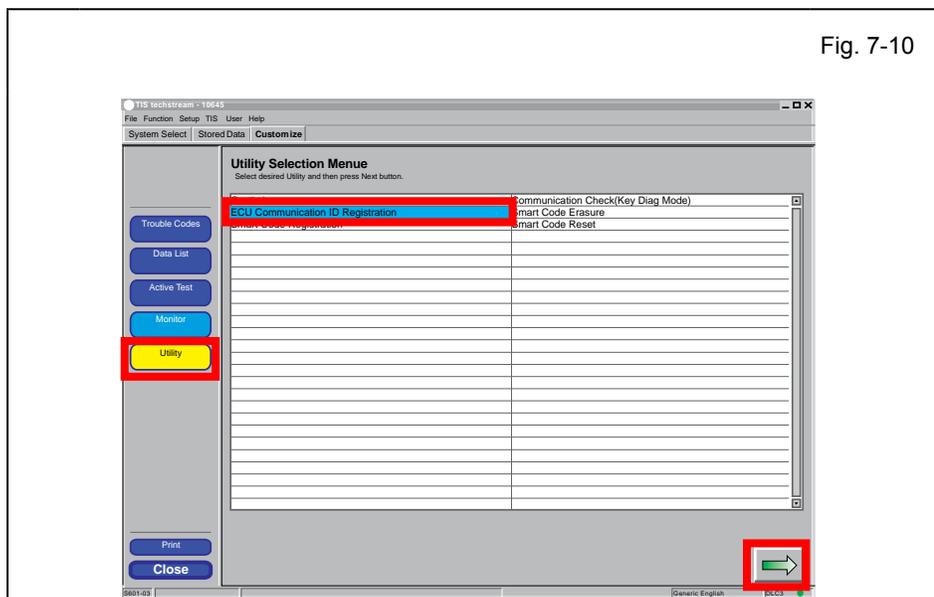


Fig. 7-10

- t. Select "Utility."
- u. Select "ECU Communication ID Registration."
- v. Click .

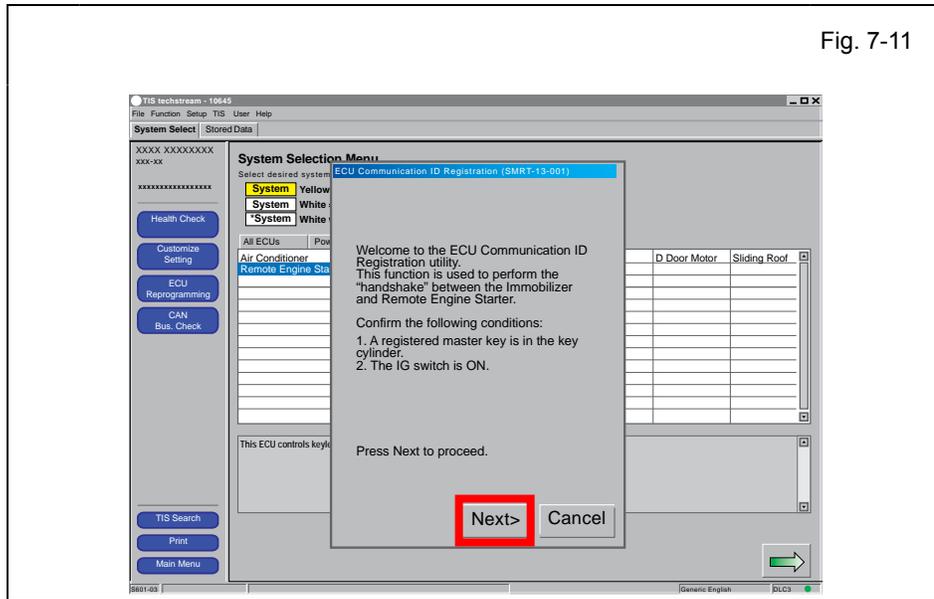


w. Click "Next>."

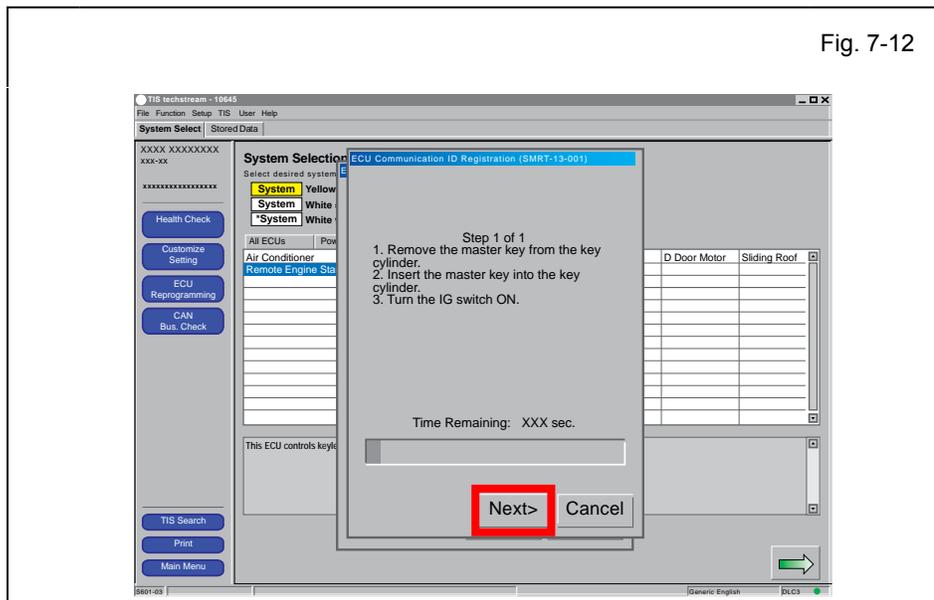

x. Follow the steps on the Techstream.

y. Click "Next>."

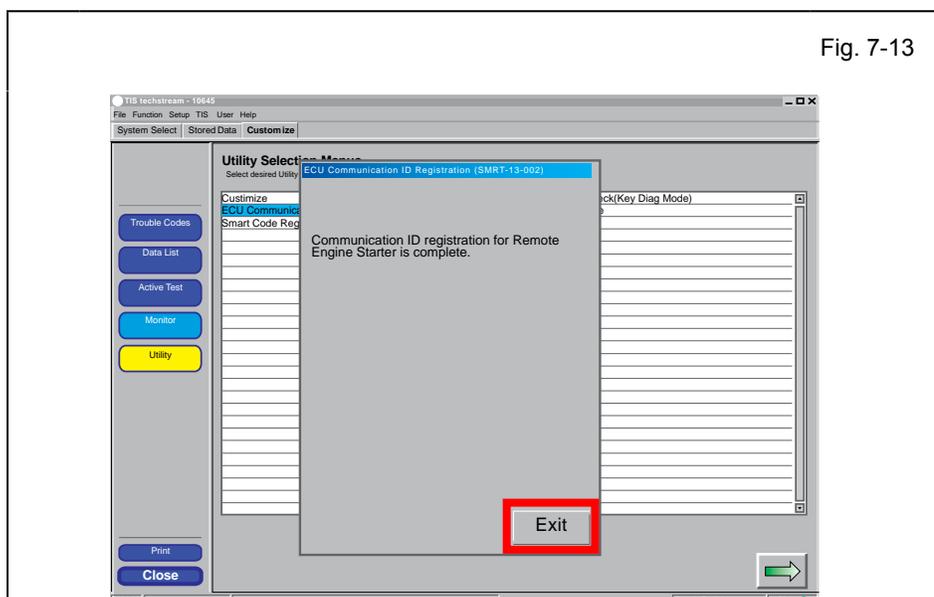

**CONFIRM:** That the ECU Communication ID was completed successfully.

z. Click "Exit."

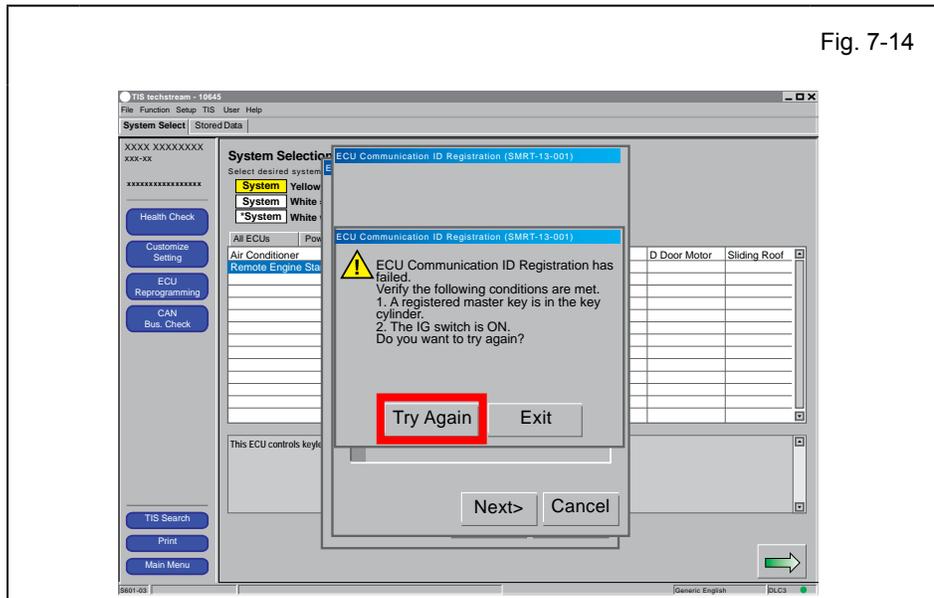


Fig. 7-14

**IF THIS PROCEDURE FAILED**

- Click "Try Again"
- Start again from step u.

- aa. Exit the vehicle.
- ab. Close the Hood.
- ac. Look for the Hazards to flash Twice.




**IF THIS PROCEDURE FAILED**

The Hazard Lights flash Three Times.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- Start again from step c.

- ad. After a successful Registration, disconnect the 1P RES Diagnostic Connectors.
- ae. Using Electrical Tape secure the 1P RES Diagnostic Connectors and Harness to the Vehicle Harness.

**Go To Section 9 (pg. 39)**

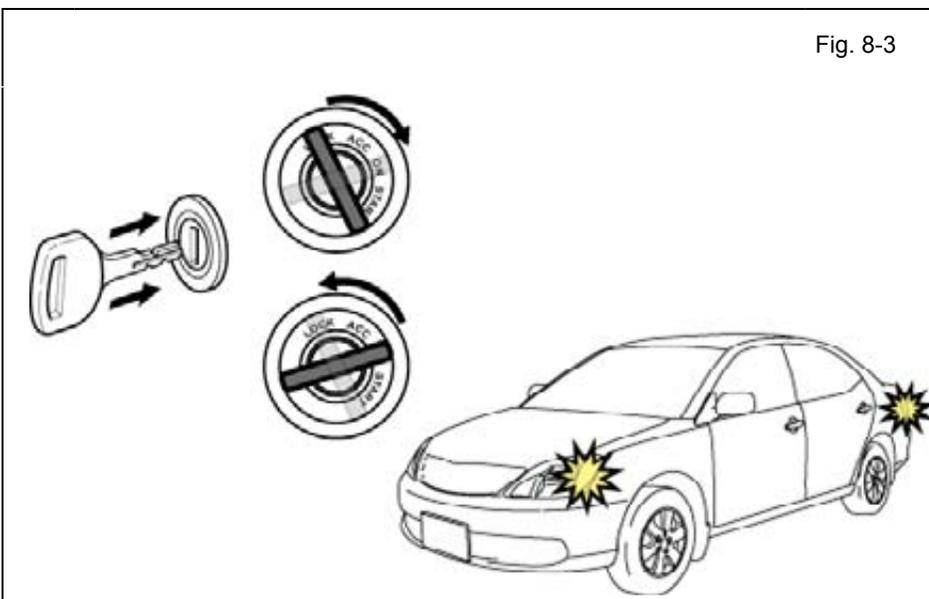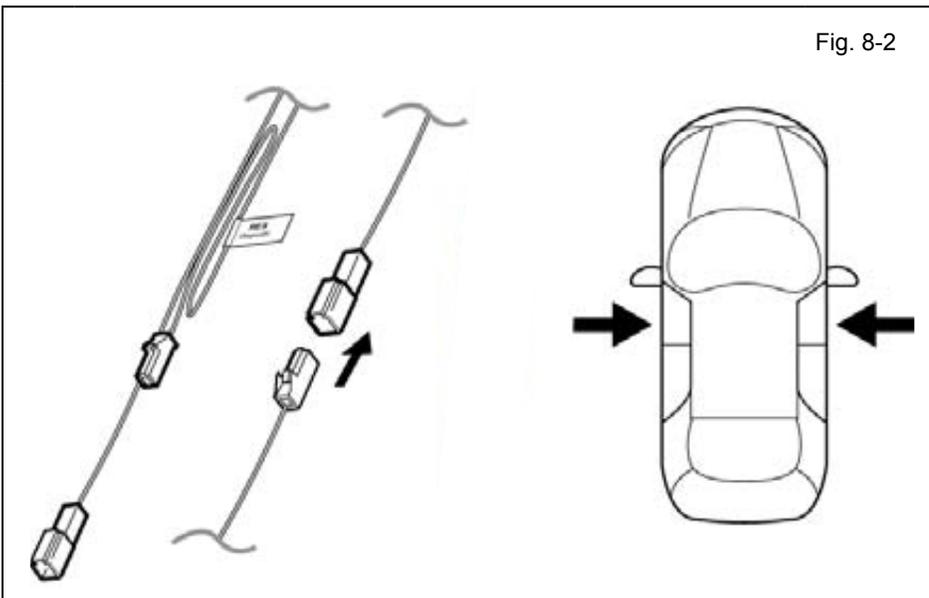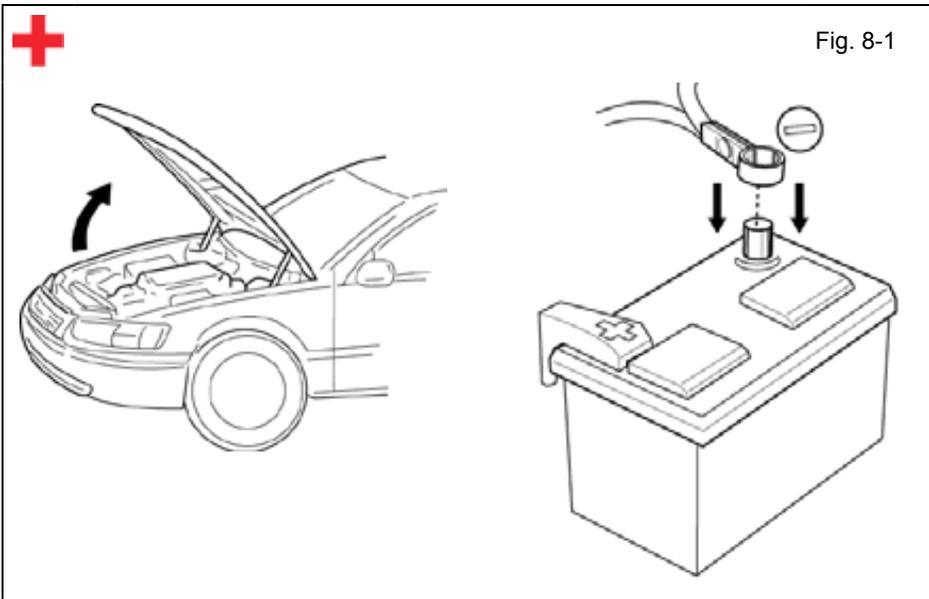

**8. Registration (Vehicles Without Immobilizer).**

- a. Open the Hood.
- b. Temporarily reconnect the Negative Battery Cable.

**+** **CAUTION:** Do not touch the Positive Terminal.

- c. Locate the 1P RES Diagnostic Connectors in the Passenger's Side Cowl Area and connect them.




**NOTE:** Once connected you will have 10 minutes to complete this section, steps d-n.

- d. Close all doors.

- e. Insert the key into the Ignition.
- f. Turn it from "OFF" to "ON" 5 times.

**LOOK:** For the Hazard Lights to flash Once.

- g. Turn the key to the "OFF" position.

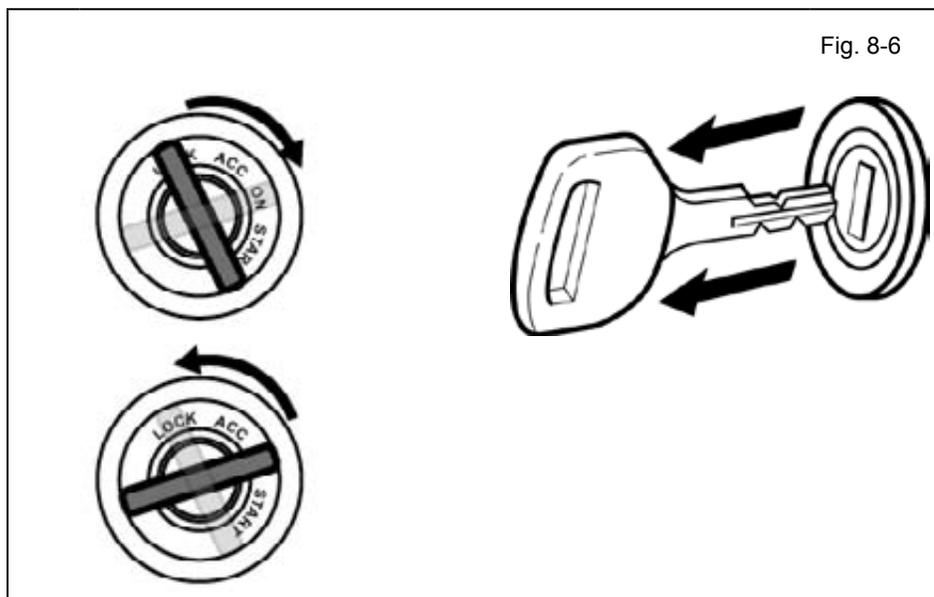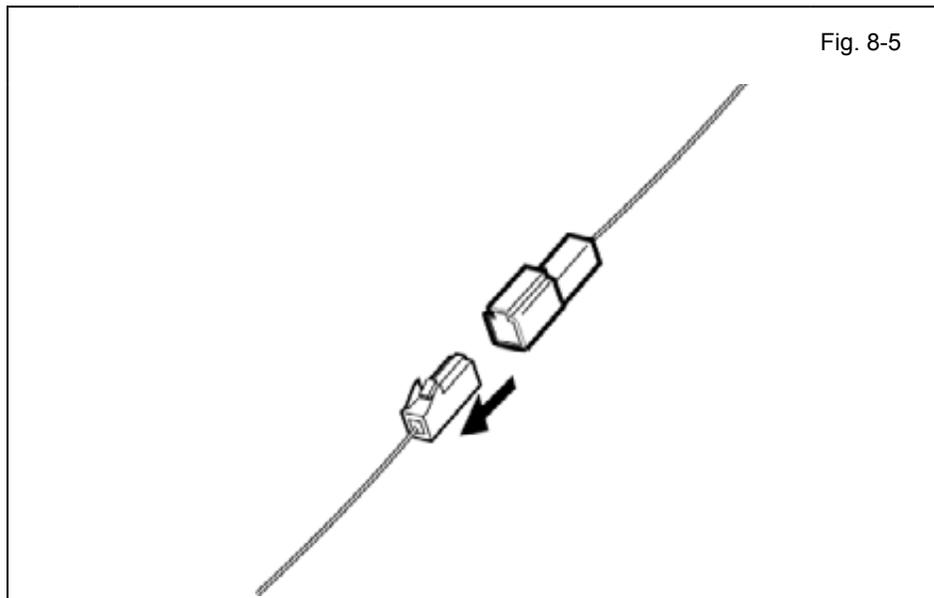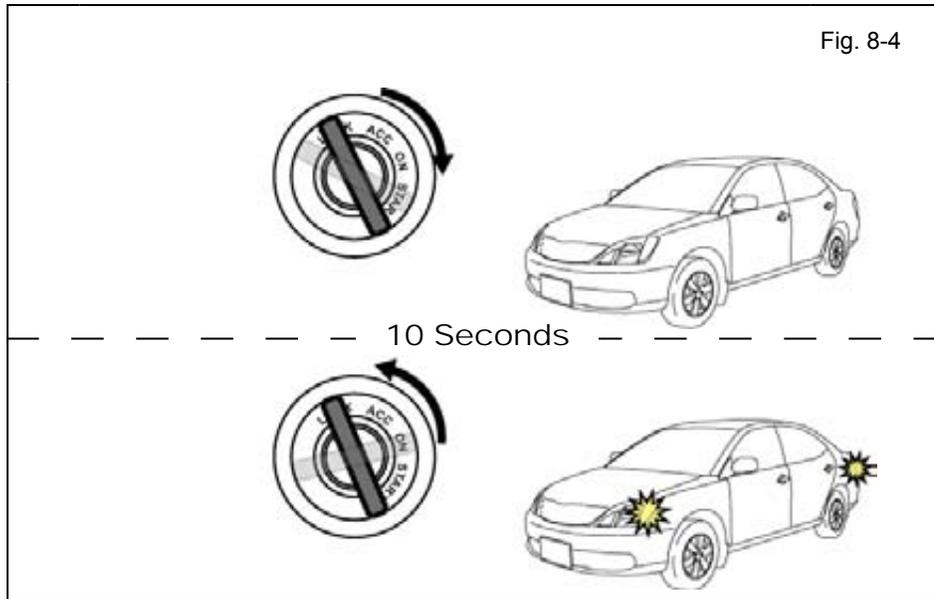

- h. Start the Engine.
- i. After 10 seconds stop the Engine.

**LOOK:** For the Hazard Lights to flash Once.

**IF THIS PROCEDURE FAILED**

The Hazard Lights won't flash or flashes Twice.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
- Start again from step c.

- j. Turn the Key from "OFF" to "ON" 5 times.
- k. Remove the Key from the Ignition.

- l. Exit the vehicle.
- m. Close the Hood.
- n. Look for the Hazards to flash Once.

**IF THIS PROCEDURE FAILED**

The Hazard Lights flash Three Times.

- Disconnect the V4 Harness's 1P RES Diagnostic Connectors.
  - Start again from step c.
- 
- o. After a successful Registration, disconnect the 1P RES Diagnostic Connectors.
  - p. Using Electrical Tape secure the 1P RES Diagnostic Connectors and Harness to the Vehicle Harness.



Fig. 9-1

## 9. Tags and Labels.

- For US Vehicles use the English Tags and Labels, and discard the Spanish Tags and Labels.
- For Mexico Vehicles use the Spanish Tags and Labels, and discard the English Tags and Labels.

- a. Using VDC approved cleaner and cleaning method, clean the area indicated on the Engine Compartment.
- b. Attach the Engine Room Warning Label as shown.



**CAUTION:** Do not touch the adhesive surface.

- c. Using VDC approved cleaner and cleaning method, clean the indicated area on the key.
- d. Use a piece of Clear Tape to lift the label off its protective backing.



**CAUTION:** Do not touch the adhesive surface.

- e. Attach the Key Label as shown.
- f. Attach the Key Tag to the Small Key ring.

REPEAT: steps c–f with the other Key.

- g. Use Household Glass Cleaner to clean the inside of the Front Door Windows.
- h. Use a piece of Clear Tape to lift the Label off its protective backing.



**CAUTION:** Do not touch the adhesive surface.

- i. Attach the Label as shown.



**NOTE:** Make sure to Align according to Etching or Other Label.

REPEAT: steps g–i with the other Window.

## 10. Complete the Installation.

- a. Finish reassembling the Vehicle.



**NOTE:** Make sure that all Connectors are reconnected.



**NOTE:** Verify that panels fit together properly, with no uneven gaps.

- b. Clean up and Remove trash.
- c. Sealed in its protective bag, place the Owner's Manual in the Glovebox.

- d. Position the Negative Battery Cable at the original factory position.



- Tighten the Nut to 36 in•lbf (4.07 N•m).



**CAUTION:** Do not touch the Positive Terminal.

- e. Turn the ignition to "ON."
- f. Reset the Power Windows.
  - Lower the Windows halfway.
  - Pull up on the Power Window Switches until the windows close.
  - Continue to hold up on the switches for a minimum of 1 Second.
- g. Reset the Sun/Moon Roof. (if equipped)
  - Open the Moon Roof halfway.
  - Push and hold the Moon Roof Switch to close until the Moon Roof closes.
  - Continue to hold the switch for a minimum of 1 Second.

**Accessory Function Checks**

Close the hood, enter the vehicle and close all doors. Place the shift lever in the “P” (Park) position, set the parking brake and make sure the Vehicle is off.

Perform		Look For
1	Press the remote control's lock button twice within 2 seconds, then press and hold the lock button for 3 seconds.	The hazard lights flash after 3 seconds. The engine starts. The hazard lights flash repeatedly for 10 seconds.
2	With the engine running, pull the hood release handle. <b>NOTE:</b> <i>Some Vehicles may require you to exit the Vehicle and pull up on the Hood.</i>	The engine stops. The hazard lights flash once. The Security Alarm triggers. (only if equipped with OE Factory Alarm, not Genuine Accessory alarm, and only if armed)
3	Move the shift lever out of “P” (Park). Attempt to start the Vehicle using the remote.	The engine does not start.

**Vehicle Function Checks**

Function	Function
----------	----------

**Enter the Vehicle**

<input type="checkbox"/> Dome/Courtesy Lights	<input type="checkbox"/> Steering Wheel Column Adjusts Without Interference
<input type="checkbox"/> Horn	

**Start the Vehicle**

<input type="checkbox"/> Starter	<input type="checkbox"/> Gauges
<input type="checkbox"/> Panel/Switch Illumination	<input type="checkbox"/> ABS Light (if equipped) <i>If the warning light remains on, it may indicate a system malfunction.</i> 
<input type="checkbox"/> Lamp Failure Sensor <i>If the warning light remains on, it may indicate a system malfunction.</i> 	<input type="checkbox"/> Track/Skid Control Light (if equipped) <i>If the warning light remains on, it may indicate a system malfunction.</i> 
<input type="checkbox"/> Seat Belt Warning Light <i>If the warning light remains on, it may indicate a system malfunction.</i> 	<input type="checkbox"/> Tire Pressure Monitoring System (TPMS) (if equipped)  <i>Prior to TPMS activation and Pre-delivery Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on.</i>  <i>After TPMS activation and PDS of the Vehicle the TPMS light will illuminate for a few seconds and go off when IG is turned on.</i> 
<input type="checkbox"/> Air Bag Warning Light <i>If the warning light remains on, it may indicate a system malfunction.</i> 	
<input type="checkbox"/> Cruise Control Light (if equipped) 	

**Using a Mirror or Assistant check the following.**

<input type="checkbox"/> Trunk/Tailgate/Bed Lights (if equipped)	<input type="checkbox"/> Tail Lights
<input type="checkbox"/> Brake Lights	<input type="checkbox"/> Daytime Running Lights (if equipped)
<input type="checkbox"/> Backup Lights	<input type="checkbox"/> Marker Lights
<input type="checkbox"/> Clearance Sonar (if equipped)	

**Stop the Engine, Place the Vehicle's IG in the ON position.**

<input type="checkbox"/> Hazard Lights	<input type="checkbox"/> Turn Signal Lights
<input type="checkbox"/> Head Light	<input type="checkbox"/> Fog Lights (if equipped)
<input type="checkbox"/> High Beams	<input type="checkbox"/> Accessory Controls/Illumination (if equipped)
<input type="checkbox"/> Power Side Mirrors (if equipped)	<input type="checkbox"/> Convenience Memory Settings (if equipped)
<input type="checkbox"/> Power Sliding Door (if equipped)	<input type="checkbox"/> Rear Sunshade (if equipped)

Function		Function	
<input type="checkbox"/>	Front Wiper/Washer	<input type="checkbox"/>	Rear Wiper/Washer (if equipped)
<input type="checkbox"/>	Power Sun/Moon Roof (if equipped)	<input type="checkbox"/>	Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)
<input type="checkbox"/>	Clock (if equipped)	<input type="checkbox"/>	Navigation System (if equipped)
<input type="checkbox"/>	Audio/Video (if equipped)	<input type="checkbox"/>	HVAC
<input type="checkbox"/>	Steering Wheel Audio Control (if equipped)	<input type="checkbox"/>	Rear Window Defogger (if equipped)
<input type="checkbox"/>	Front Windshield Defogger (if equipped)	<input type="checkbox"/>	Accessory Power Socket (if equipped)
<input type="checkbox"/>	Side Mirror Defogger (if equipped)	<input type="checkbox"/>	Heated/Vented Seats (if equipped)
<input type="checkbox"/>	Massage Seats (if equipped)		
<input type="checkbox"/>	Glovebox Light (if equipped)	<input type="checkbox"/>	Passenger Air Bag Switch (if equipped)
<input type="checkbox"/>	Power Locks (if equipped)	<input type="checkbox"/>	Power Windows (if equipped)
<input type="checkbox"/>	Power Seats (if equipped)	<input type="checkbox"/>	Key Sensor Buzzer

