TOYOTA Highlander / Highlander HV PREPARATION


2014-

Part #: PT398-48141

Conflicts:

Do not install into Vehicles without Factory Alarm System.

Kit Contents

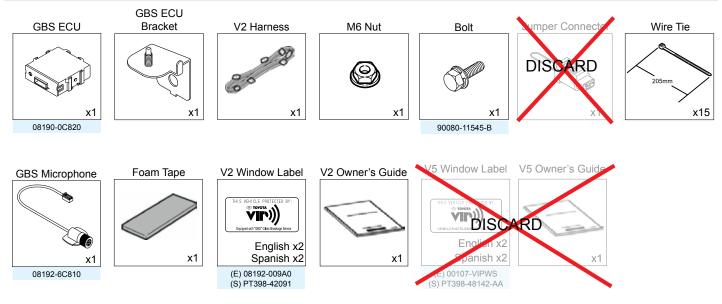

Service Part #'s

Recommended Tools

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Vehicle Protection	Blankets, Parts Boxes
Special Tools	
Striker Tool	CAD-E IADS P/N ALL 02-016-01
Installation Tools	
Screwdriver	#2 Phillips, Flat Blade Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01
Side Cutters	
Wrench	10mm
Socket	10mm, Extension
Pliers	Needle Nose
Torque Wrench	Battery: 48 in•lbf (5.4 N•m), Ground Bolt: 57 in•lbf (6.5 N•m
Таре	Clear
Special Chemicals	
Cleaner	VDC Approved Cleaner
Glass Cleaner	Household Glass Cleaner

Additional Items

(may be required)

ltem#	Description

Recommended Sequence of Application

ltem#	Description	
1	V4 RES	
2	V2 GBS	

TOYOTA Highlander / Highlander HV


2014 -

Table of Contents

PREPARATION

I.	Preparation	
	1. Table of Contents	2
	2. Wire Routing Overview	3
١١.	Procedure	
	1. Vehicle Disassembly.	
	2. V2 ECU Installation	7
	3. V2 Harness Installation.	8
	4. Microphone Installation.	
	5. Complete the Installation.	
111.	. Checklist	
	1. Accessory Function Checks	
	2. Vehicle Appearance Check	
	3. Vehicle Function Checks	

Legend

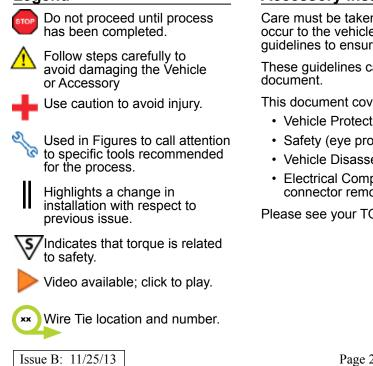

Accessory Installation Practice (read before installation)


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices"


This document covers such items as:


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- Safety (eye protection, checking torque procedure, etc.)
- · Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your TOYOTA dealer for a copy of this document.

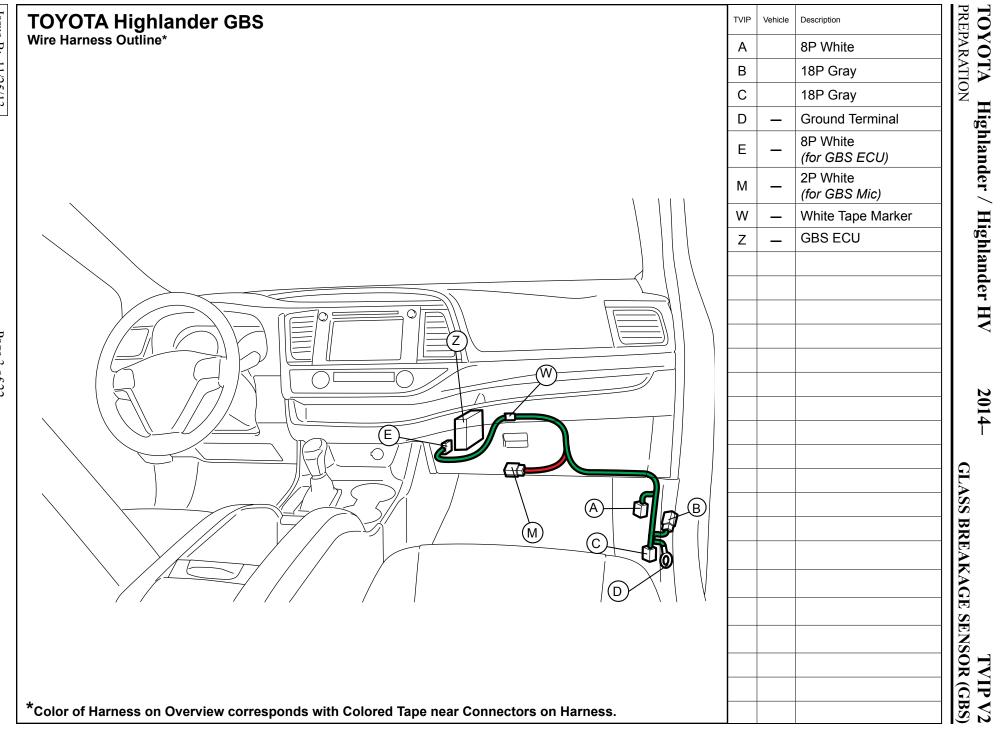

TOYOTAHighlander / Highlander HV2014–PROCEDURE

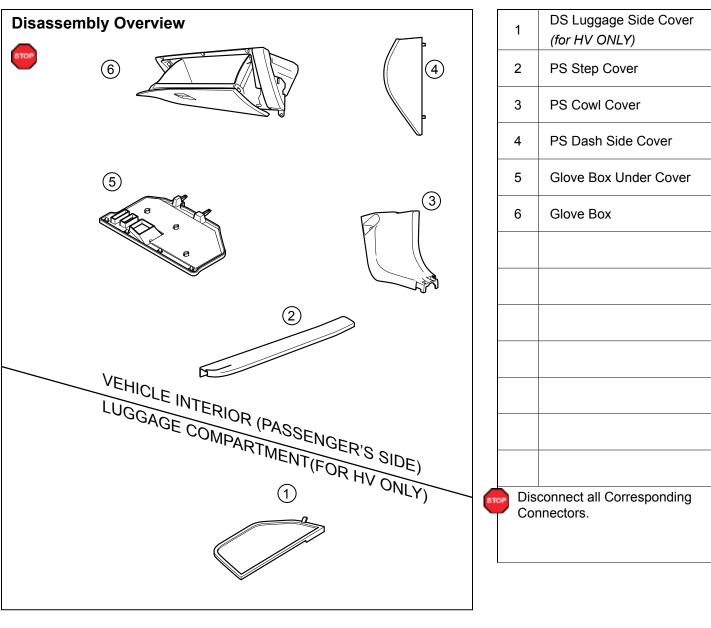

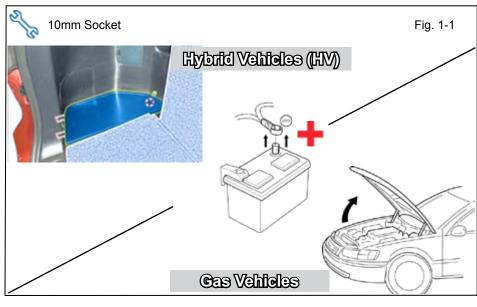

- 1. Vehicle Disassembly.
 - a. Place the Vehicle in Park with the Parking Brake set.
- For Hybrid Vehicles the battery is in the Luggage Compartment.
 - b. Remove the DS Luggage Side Cover (for HV only).
- For Gas Vehicles the battery is in the Engine Compartment.
 - c. Disconnect the Negative Battery Terminal.
 - Note the Battery Cable Position as it will be re-installed in the same position.

CAUTION: Do not touch the Positive Terminal.

d. Remove the Passenger's Side Step Cover.

e. Remove the Passenger's Cowl Cover.

Remove 1 Nut.


f. Remove the Passenger's Side Dash Cover.

g. Remove the Glove Box Under Cover.

h. Remove 2 Bolts from the bottom of the Glove Box.

- i. Open the Glove Box.
- j. Dislodge the Glove Box.
 - Remove 3 Screws.


- k. Disconnect the Vehicle's Connector.
- I. Remove the Vehicle clamp from the Glove Box
- m. Remove the Glove Box.

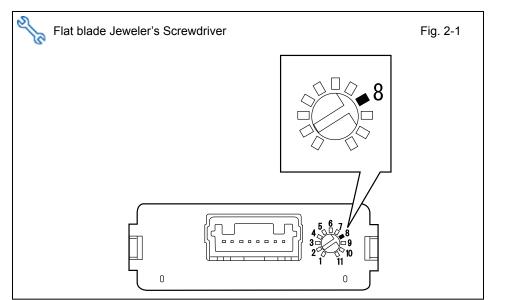

2. V2 ECU Installation.

a. Set the GBS Sensitivity Value to "8."

b. Attach the GBS ECU Bracket to the GBS ECU.

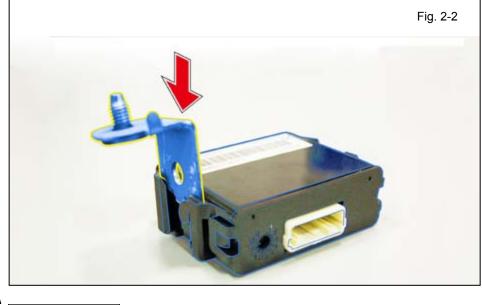

- c. Install the GBS ECU using the supplied Nut.
- STOP

NOTE: Make sure the Guide Pin is seated correctly and verify that the Nut is tightened securely.

3. V2 Harness Installation.

a. Route the V2 Harness 8P Connector behind the Vehicle Brace.

b. Plug in the V2 White 8P Connector to the GBS ECU.

c. Secure the V2 Harness White Tape Marker to the Vehicle IP Reinforcement using 1 Wire Tie.



NOTE: Make sure that the V2 Harness is routed behind the Vehicle Brace.

- d. Secure the V2 Harness to the Vehicle IP Reinforcement with 1 Wire Tie.
- e. Secure the V2 Harness to the Vehicle Brace with 1 Wire Tie.

With Smart Key Only

f. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.


With Smart Key Only

g. Secure the V2 Harness to the Vehicle Harness using 2 Wire Ties.


Without Smart Key Only

 h. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.

i. Secure the V2 Harness to the Vehicle Harness using 2 Wire Ties.

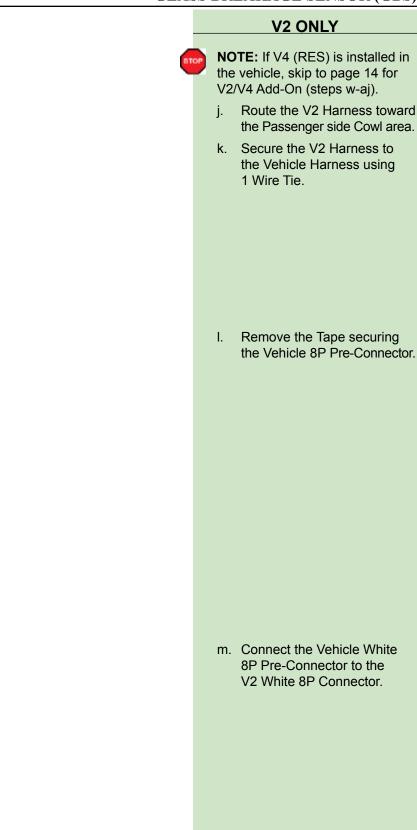

	V2 ONLY
	 n. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.
	 o. Secure the V2 8P Connector to the Vehicle Harness using 1 Wire Tie.
	• Rotate the ratchet end on the Wire Tie as shown.
STO	NOTE: Place the 8P Connectors in reference to the illustration.
	 p. Disconnect the Vehicle's Gray 18P Connector from the Connector Block.
	 q. Connect the Vehicle's Gray 18P Connector to the V2 18P Connector.

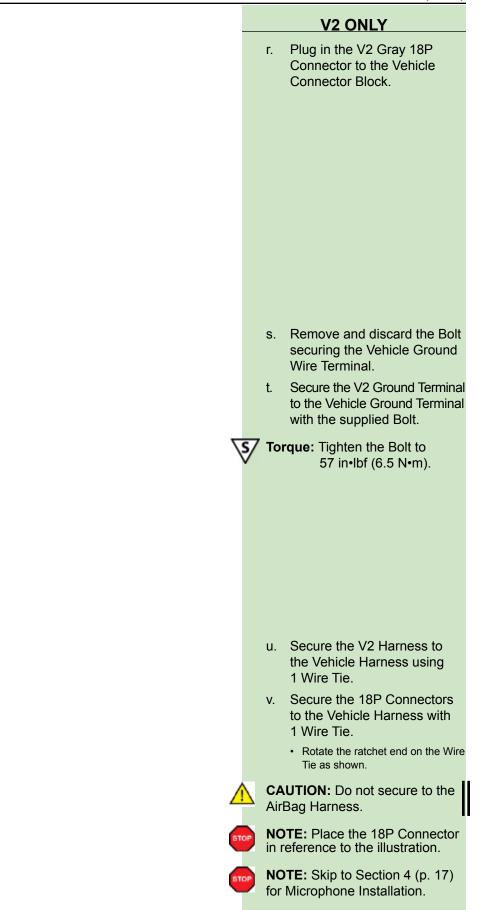

V2/V4 Add-on ONLY

- w. Route the V2 Harness toward the Passenger side Cowl area.
- x. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.

y. Remove the Tape securing the V4 Harness 8P Connector.

z. Connect the V4 Harness 8P Connector to the V2 White 8P Connector.

ad. Disconnect the Vehicle's 18P Gray Connector from the V4 18P Connector.

V2/V4 Add-on ONLY

- ae. Connect the V2 Gray 18P Connector to the V4 Gray 18P Connector.
- af. Connect the Vehicle's Gray 18P Connector to the V2 Gray 18P Connector.

- ag. Remove and discard the Bolt securing the V4 and the Vehicle Ground Terminals.
- ah. Secure the V2 & V4 Ground Terminals to the Vehicle Ground Terminal with the supplied Bolt.

Torque: Tighten the Bolt to 57 in•lbf (6.5 N•m).

- ai. Secure the V2 Harness to the Vehicle Harness with 1 Wire Tie.
- aj. Secure the V2 & V4 18P Connectors to the Vehicle Harness with 2 Wire Ties.
 - Rotate the ratchet end on the Wire Tie as shown.




S/


CAUTION: Do not secure to the AirBag Harness.

NOTE: Place the 18P Connector in reference to the illustration.

Issue B: 11/25/13

TOYOTA Highlander / Highlander HV PROCEDURE

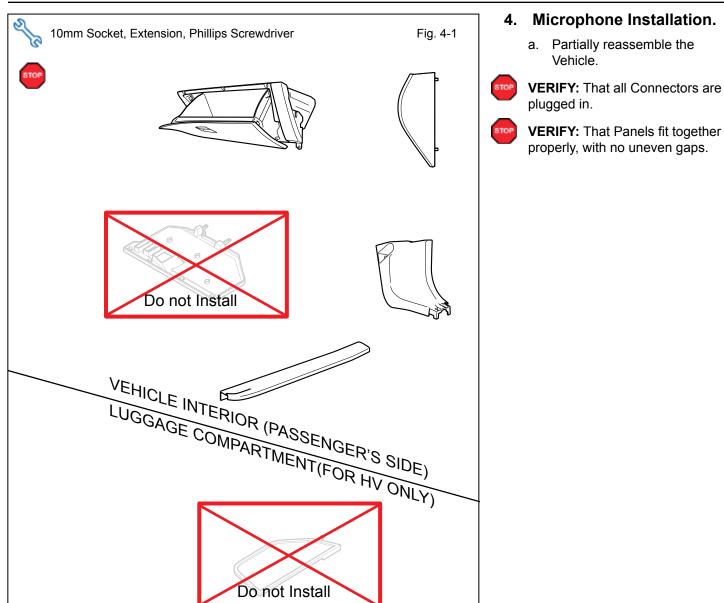


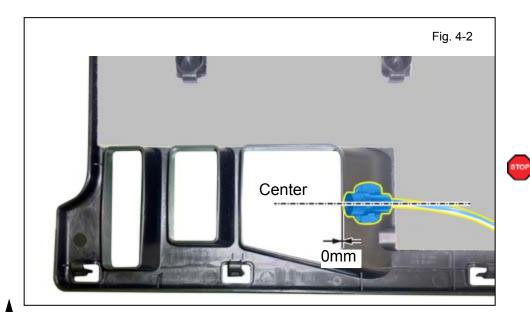


- b. Using the VDC approved cleaner and Cleaning Method, clean the area indicated on the backside of the Glove Box Under Cover.
- c. Attach the GBS Microphone to the backside of the Glove Box Under Cover as shown.

NOTE: Make sure to align GBS Microphone to the edge of the Glove Box Under Cover opening.

 Issue B: 11/25/13



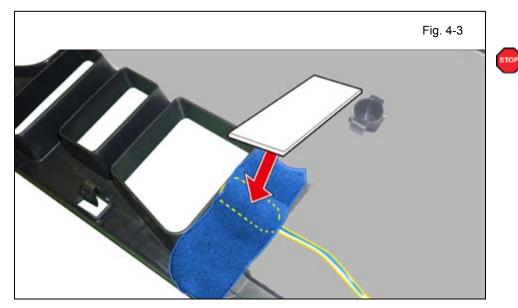

d. Apply 1 Foam Tape to the GBS Microphone as shown.



NOTE: Make sure not to cover the Microphone's opening with the Foam Tape.

e. Connect the V2 White 2P Connector to the GBS Microphone's Connector.

Reinstall the Glove Box f. Under Cover.

5. Complete the Installation.

- For US Vehicles use the English Labels and discard the Spanish Labels.
- For Mexico Vehicles use the Spanish Labels and discard the English Labels.
 - a. Use Household Glass Cleaner to clean the inside of the Front Door Window.
 - b. Use Clear Tape to lift the Label off its protective backing.

CAUTION: Do not touch the adhesive surface.

STOP

- c. Attach the Label as shown.
- NOTE: Make sure to Align the Label according to Etching or Other Label.

REPEAT: steps a-c with the other Front Door Window.

- d. Verify that the Short Pin is Installed.
 - If not, install now.

- For Hybrid Vehicles the battery is in the Luggage Compartment.
- For Gas Vehicles the battery is in the Engine Compartment.
 - e. Position the Negative Battery Cable at the original factory position.

Torque: Tighten the Nut to 48 in•lbf (5.4 N•m).

• **CAUTION:** Do not touch the Positive Terminal.

- f. Clean up and Remove trash.
- g. Sealed in its protective bag, place the Owner's Manual in the Glove Box.

CHECKLIST - these points MUST be checked to ensure a quality installation.

Accessory Function Checks

Roll up all windows, and exit the vehicle with the remote.

Vehicles w/Smart Key: Take out the Smart Key from the Vehicle. Place them 15 ft. (4.5 meters) or more away from the Vehicle.

	Perform	Look For
1	Lock the doors to start the system's arming process.	The turn signal lights flash once. All doors lock. The Security LED lights up.
2	Wait 30 seconds.	Security LED starts flashing; the system is now armed.

Perform the following check in a temperature controlled environment (50°- 90°F)

3	With the tip of a key, or Striker Tool pulled all the way out (PPO only), tap the center of the driver's door windows to trigger the alarm.	The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.
4	Insert the key into the driver's door key cylinder and turn it toward the back of the vehicle to stop the alarm.	The horn stops sounding. All the lights stop flashing and/ or turn off. The Security LED lights up.

Vehicles w/Smart Key: If the alarm does not trigger during functional verifications the Smart Key might be too close. Move them farther from the vehicle and test the system again.

NOTE: If the alarm still does not trigger during the section test, increase the GBS sensitivity to the next setting and test again.

NOTE: If you do not disarm the system, the alarm will last 20 seconds. It is not necessary to check the alarm duration.

Vehicle Appearance Check

Perform	Look For
After accessory installation and removal of protective cover(s), perform a visual inspection of the vehicle.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)

TOYOTA Highlander / Highlander HV

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

TVIP V2 GLASS BREAKAGE SENSOR (GBS)

Vehicle Function Checks

		Function		Function		
En	Enter the Vehicle					
		Dome/Courtesy Lights		Horn		
Sta	art the V	/ehicle				
		Panel/Switch Illumination		Gauges		
		Check Engine Light If the warning light remains on, it may indicate a system malfunction.		ABS Light (if equipped) If the warning light remains on, it may indicate a system malfunction.		
		Lamp Failure Sensor If the warning light remains on, it may indicate a system malfunction.		Track/Skid Control Light (if equipped) If the warning light remains on, it may indicate a system malfunction.		
		Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction.		Tire Pressure Monitoring System (TPMS).		
		Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction.		Prior to TPMS activation and Pre-delivery Service (PDS) of the Vehicle the TPMS light will blink when IG is turned on. After TPMS activation and PDS of the Vehicle the		
		Cruise Control Light (if equipped)	E)	TPMS light will illuminate for a few seconds and go off when IG is turned on.		

2014-

Using a Mirror or Assistant check the following.

Trunk/Tailgate/Bed Lights (if equipped)	Tail Lights
Brake Lights	Daytime Running Lights (if equipped)
Backup Lights	Marker Lights
Clearance Sonar (if equipped)	Power Back Door/Hatch (if equipped)

Stop the Engine, Place the Vehicle's IG in the ON position.

Hazard Lights	Turn Signal Lights
Head Light	Fog Lights (if equipped)
High Beams	Accessory Controls/Illumination (if equipped)
Power Side Mirrors (if equipped)	Convenience Memory Settings (if equipped)
Power Sliding Door (if equipped)	Rear Sunshade (if equipped)

TOYOTA Highlander / Highlander HV

2014-

CHECKLIST – these points MUST be checked to ensure a quality installation.

	Function		Function
	Front Wiper/Washer		Rear Wiper/Washer (if equipped)
	Power Sun/Moon Roof (if equipped)		Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)
	Clock (if equipped)		Navigation System (if equipped)
	Audio/Video (if equipped)		HVAC
	Steering Wheel Audio Control (if equipped)		Rear Window Defogger (if equipped)
	Front Windshield Defogger (if equipped)		Accessory Power Socket (if equipped)
	Side Mirror Defogger (if equipped)		Heated/Vented Seats (if equipped)
	Massage Seats (if equipped)		
	Glove Box Light (if equipped)		Trunk or Back Door/Hatch Cancel Switch (if equipped)
	Power Locks (if equipped)		Power Windows (if equipped)
	Power Seats (if equipped)		Key Sensor Buzzer