

Part Number: 08471-35810-B0

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Armrest
2	1	Hardware Bag
3	1	Installation Instruction

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	1	Bolt
2	1	Cap

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Blankets	
Special Tools	Notes
None	
Installation Tools	Notes
Socket	14mm
Ratchet	
Torque Wrench	0-50 lbs-ft
Nylon Removal Tool	e.g. e.g. Panel Pry Tool #1 Toyota SST # 00002-06001-01
Special Chemicals	Notes
None	

General Applicability

All FJ Cruiser

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	







*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.



These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-


- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).




Please see your Toyota dealer for a copy of this document.

1. Vehicle Preparation.

-  (a) Open package and check for damage and content.
-  (b) Apply vehicle protection to front seats.

2. Install Armrest.

- (a) Using a non-scratch pry tool, remove the access cover from the passenger side seat back and discard. Fig. 2-1
-  (b) Prepare the armrest.
 - (1) Insert bolt into armrest. Fig. 2-2
- (c) Check armrest orientation.
 - (1) Insert the three tab posts of the armrest into the three holes in the seat back.
 - (2) The armrest should rotate from horizontal to vertical. Fig. 2.3
- (d) Tighten the bolt and torque to 38 N-m (28 lbs-ft).
- (e) Install cap. Fig. 2-4

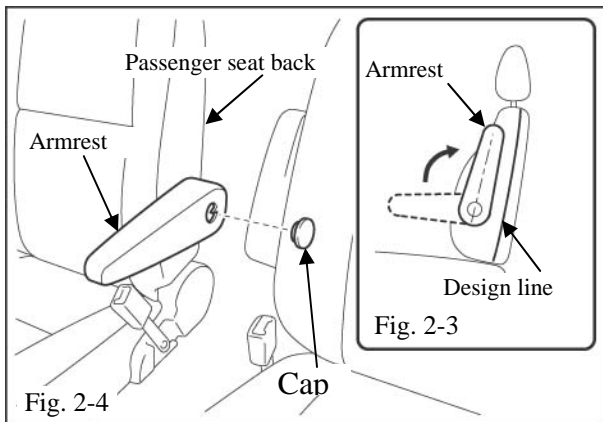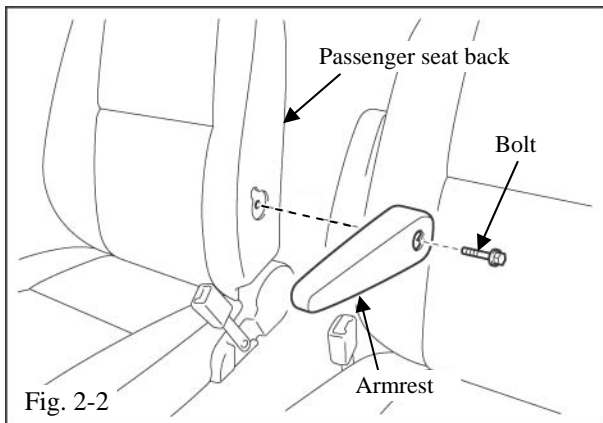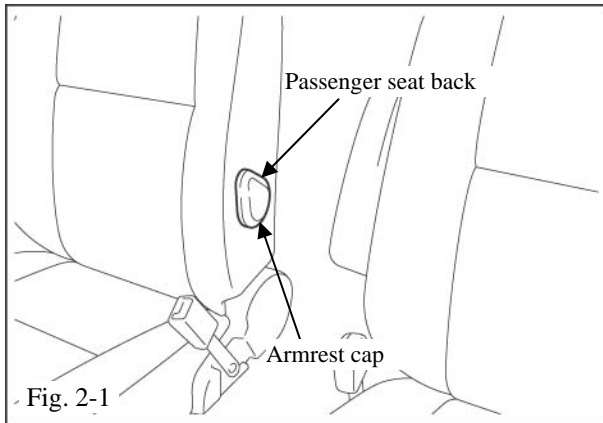

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <ul style="list-style-type: none"> <input type="checkbox"/> Armrest installation <input type="checkbox"/> Armrest installation angle <input type="checkbox"/> Vehicle condition 	<ul style="list-style-type: none"> Secure tightening with the bolts Appropriate installation angle Damage and dirt
<p><u>Vehicle Function Checks</u></p> <ul style="list-style-type: none"> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 	
<p><u>Vehicle Appearance Check</u></p> <ul style="list-style-type: none"> <input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection. 	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)</p>