

Part Number: PT347-52110**Kit Contents**

Item #	Quantity Req'd.	Description
1	1	Convenience Net
2	1	Hardware Bag

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1	2	T-Anchor Assembly

Additional Items Required For Installation

Item #	Quantity Req'd.	Description

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Vehicle Protection	Blanket
	Masking Tape 1"
Special Tools	Notes
None	
Installation Tools	Notes
Drill Motor	
Drill Bit	½"
Drill Stop	Set to 5 mm
Center punch	Spring Loaded
Shop Vacuum	
Scissors	
Special Chemicals	Notes
None	

General Applicability

Hatchback

NOTE: Part number of this accessory may not be the same as the part number shown.

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req'd.	Description

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.



REVISION MARK: This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

Procedure




Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your dealer for a copy of this document.

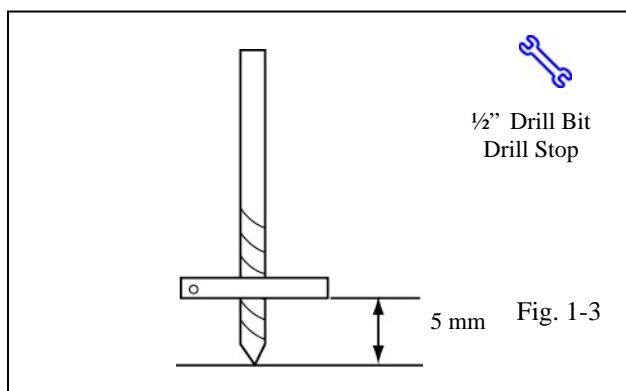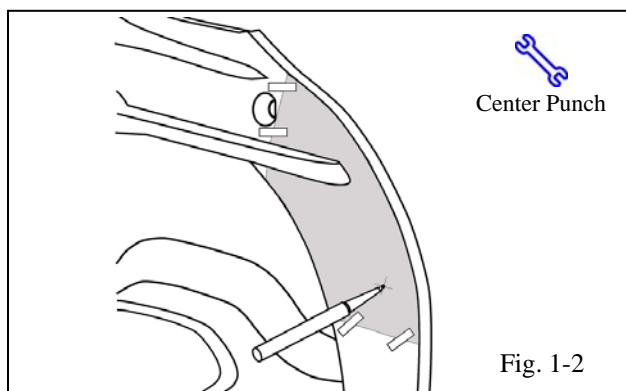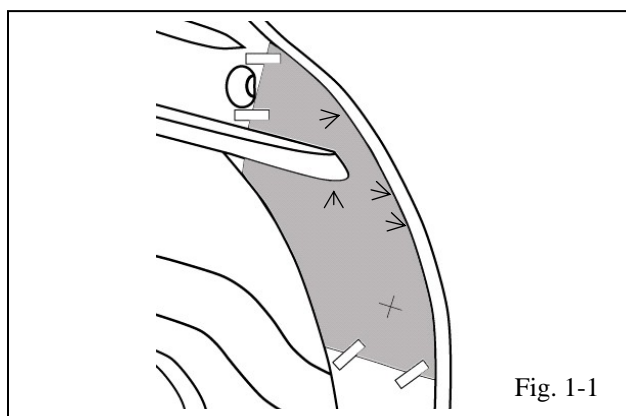

1. Install Hardware.

(a) Open rear hatch door.

(1) Apply vehicle protection (blanket) to rear sill and fascia.

(b) Locate and cut out templates (see page 5).

(c) Tape the template to the vehicle as shown (Fig. 1-1).




(d) Ensure the template is positioned towards the plastic trim panel edge.

(e) Use center punch to mark the location of the hole for drilling onto the rear plastic trim panel (Fig. 1-2).



(f) Set the drill stop on a 1/2" drill bit to 5 mm from the end of the drill. (Fig. 1-3).

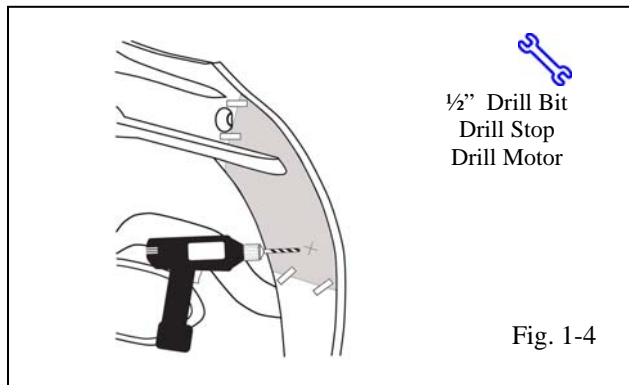


(g) Drill a 1/2" hole in the right rear panel.
Remove drilling template. (Fig. 1-4).

(h) Repeat steps 1 (c) through 1 (g) for the left side panel.

(i) Fasten a T-anchor assembly to each side of trim panel, making sure T-anchor is horizontal (Fig. 1-5 shows the right side).

(j) Vacuum up any debris in cargo area.

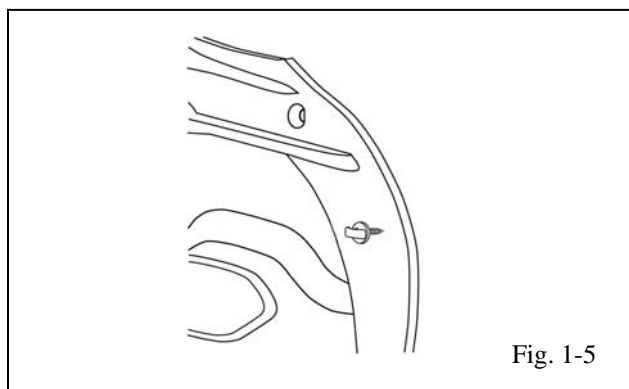

2. Attach Cargo Net.



(a) Attach the cargo net to the T-anchors as shown (Fig. 2-1).




(1) Make sure handle on net faces toward the outside of the vehicle.

(b) Repeat step 2 (a) for the other side of the vehicle.



(c) Confirm completed assembly (Fig. 2-2).

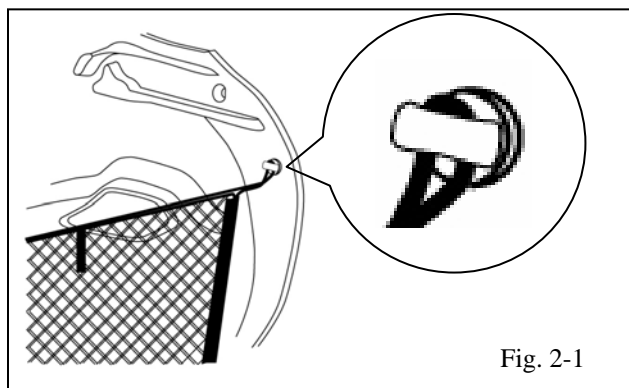

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks


- ☐ Confirm that the net is attached properly to the anchor points in the vehicle.

Make sure loops are attached to the T-anchors.

Dealer Installation Note:


Verify accuracy of printout by matching the dimensions as shown.

Check scale below to ensure it is 1:1. Adjust on photocopier if it is not to scale.

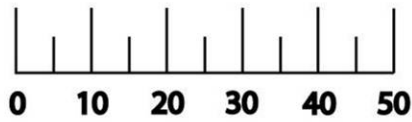

Scale: mm

Cut along the line

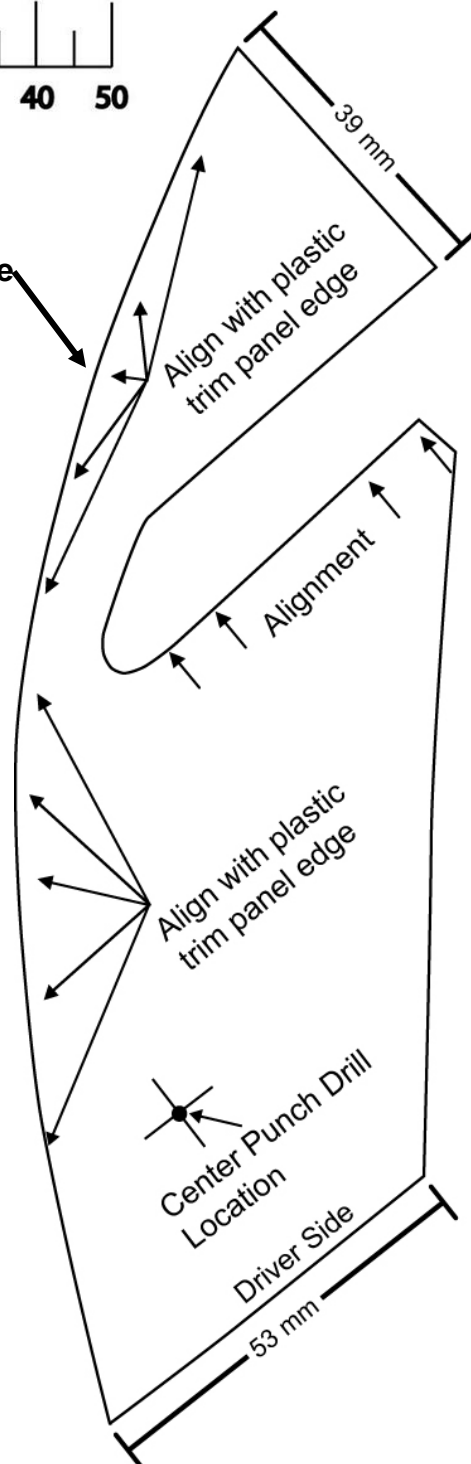

Cut along the line

