**Part Number: PTR43-00085** (MY17+ A/T)

86

PTR03-1C161 (MY17+ M/T) - PTR03-18132 (w/ TRD intake)

- w/ OE airbox

**Kit Contents** 

Item#	Quantity Reqd.	Description
1	1	Air Filter Panel
2	1	Warning Label
3		

**Hardware Bag Contents** 

	- t 2 ug - 0 111 t 11	
Item #	Quantity Reqd.	Description
2		
3		

**Additional Items Required For Installation** 

Item#	Quantity Reqd.	Description
1	As needed	Dealer and TLS approved lint
		free cloth
2		
3		

## Conflicts

None

#### **Recommended Tools**

Personal & Vehicle	Notes
Protection	
Blanket and Lint Free Cloth	
Special Tools	Notes
<b>Installation Tools</b>	Notes
Special Chemicals	Notes
Dealer and VDC approved cleaner	

**General Applicability** 

All 86 models	
---------------	--

**Recommended Sequence of Application** 

Item #	Accessory
1	
2	
3	

\*Mandatory

**Vehicle Service Parts** (may be required for reassembly)

Item#	Quantity Reqd.	Description
1		
2		
3		

### Legend



<u>STOP:</u> Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.



**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

### Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).

86


- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document.

#### 1. Check the Kit Contents.

- (a) Check the filter panel for damage to the wire mesh.
- (b) Ensure a warning sticker is present, see Fig 5-1.



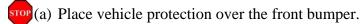

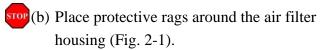


(c) Unlatch the two air filter lid clips (Fig. 2-1).






#### 3. Remove the OE Air Filter.

(a) Remove the OE Filter and discard it (Fig. 3-1).

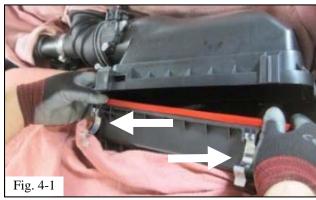

**86** 

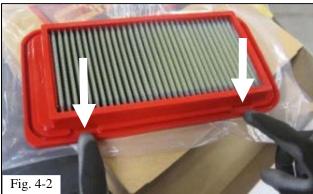



## 4. Install the TRD Air Filter.

- (a) Place the TRD Air Filter in the filter housing (Fig. 4-1). Ensure the notches are inserted into the bottom of the filter housing (Fig. 4-2).
- (b) Replace the filter housing lid (Fig. 4-1).

**NOTE:** Be careful to not damage the wire mesh of the air filter.



(c) Engage the two filter lid clips (Fig. 4-1).

# 5. Install the Warning Label.

- (a) Clean the filter housing lid with a lint free cloth and VDC approved cleaner.
- (b) Wipe the filter housing lid with a waterdampened lint free cloth and dry it with a dry lint free cloth.
- (c) Place the Warning Label on the filter housing lid as shown. Center it with the ribs on the filter housing (Fig. 5-1).
- (d) Remove the vehicle protection.

TOYOTA 86 2017 -

TRD AIR FILTER

Checklist - these points MUS1 be checked to ensure	a quality installation.
Check:	Look For:
Accessory Function Checks	
Air filter	Filter is firmly seated
Vehicle Function Checks	
Malfunction indicator light	Any gaps between the housing & lid
Vehicle Appearance Check	
After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process.  (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)

Issue: B 04/25/2017