# **Part Number: PT347-47110**

# **Kit Contents**

| Item# | Quantity Reqd. | Description     |
|-------|----------------|-----------------|
| 1     | 1              | Convenience Net |
| 2     | 1              | Hardware bag    |
|       |                |                 |
|       |                |                 |

**Hardware Bag Contents** 

| Item# | Quantity Reqd. | Description |
|-------|----------------|-------------|
| 1     | 1              | RH Bracket  |
| 2     | 1              | LH Bracket  |
|       |                |             |
|       |                |             |

**Additional Items Required For Installation** 

| Item# | Quantity Reqd. | Description |
|-------|----------------|-------------|
|       |                |             |
|       |                |             |
|       |                |             |
|       |                |             |

#### **Conflicts**

None

#### **Recommended Tools**

| Personal & Vehicle        | Notes                                   |  |
|---------------------------|---|--|
| Protection                |   |  |
|                           |   |  |
| Special Tools             | Notes                                   |  |
|                           |   |  |
| <b>Installation Tools</b> | Notes                                   |  |
| Socket                    | <sup>1</sup> / <sub>4</sub> drive 10 mm |  |
| Socket Driver             | 1/4 drive                               |  |
| <b>Special Chemicals</b>  | Notes                                   |  |
|                           |   |  |
|                           |   |  |

# **General Applicability**

A 11

#### Recommended Sequence of Application

| Recommended Sequence of Application |           |  |
|-------------------------------------|-----------|--|
| Item #                              | Accessory |  |
|                                     |           |  |
|                                     |           |  |
|                                     |           |  |
|                                     |           |  |

\*Mandatory

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Vehicle Service Parts** (may be required for reassembly)

| Item # | Quantity Reqd. | Description |
|--------|----------------|-------------|
|        |                |             |
|        |                |             |
|        |                |             |
|        |                |             |

## Legend



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



<u>CAUTION:</u> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



<u>TOOLS & EQUIPMENT:</u> Used in Figures calls out the specific tools and equipment recommended for this process.



<u>**REVISION MARK:**</u> This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.













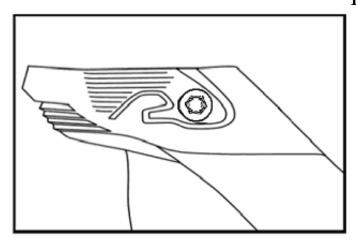

# 1. Installation of brackets


(a) Open the rear cargo door and locate the panel shown on the passenger's side of the vehicle.

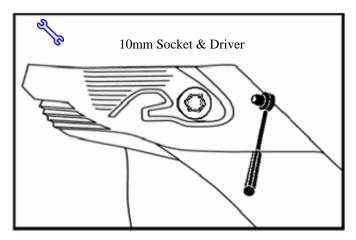

Issue: B 10/07/11

Fig. 1-1

(b) Remove and retain the screw using a 10mm socket and driver.(Fig. 1-1)

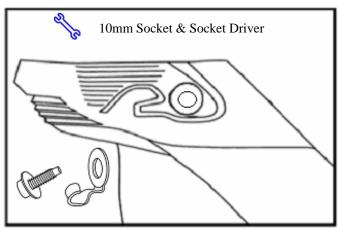

(c) Passenger side.

Select RH bracket. Install RH bracket with the screw removed from step 1(b). (Fig. 1-2)

Fig. 1-2


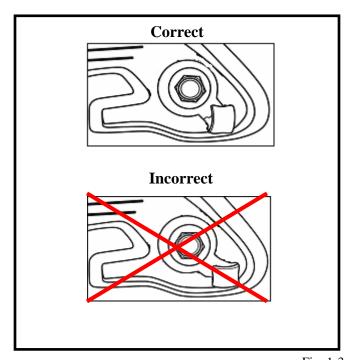


Fig. 1-3

- (d) Ensure the hook is located on the bottom of the opening.
  - (e) Tighten with a 10mm socket with driver. (Fig. 1-3)

# DO NOT OVER-TIGHTEN SCREW

(f) Driver side. Repeat steps 1 (b) through 1(e) to install a LH bracket.

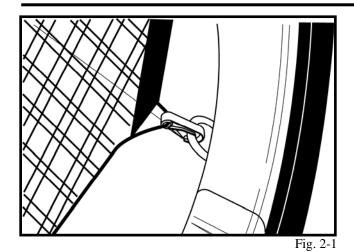

# 2. Installation of Cargo Net

(a) Orient the net so the pull-tab is facing towards the rear of the vehicle and install the bottom hook over the passenger side lower D-ring as shown. (Fig. 2-1)

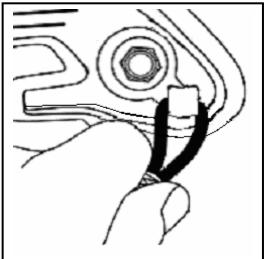


Fig. 2-2

- (b) Install the upper bungee loop over the passenger side hook as shown. (Fig. 2-2)
- (c) Repeat steps 2(a) and 2(b) for the driver side of vehicle.

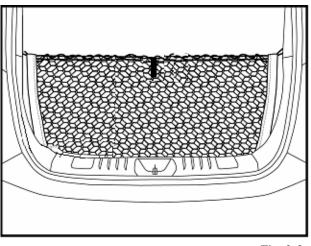


Fig. 2-3

(d) Completed assembly as shown. (Fig. 2-3)

Toyota Prius V 2012 -

Checklist - these points **MUST** be checked to ensure a quality installation. Check: Look For: **Accessory Function Checks** Correct orientation of hooks. Insure hooks are located in the bottom of the recessed opening after the screw is tightened. Confirm the net is attached properly to the Make sure the net hooks are attached to the anchor points in the vehicle. lower D-rings and the loops are attached to the hooks at the top. Pull Tab orientation. Make sure the net's plastic pull tab is facing rearward. **Vehicle Function Checks** Rear cargo door. Rear cargo door should open and close freely without interference from cargo net.

**CARGO NET**