

Part Number: PT912-21110-20

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Cargo Cover
2		
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes

General Applicability

All SCION tC

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	


*Mandatory


NOTE: Part number of this accessory may not be the same as the part number shown.


Vehicle Service Parts (may be required for reassembly)


Item #	Quantity Reqd.	Description
1		
2		
3		


Legend


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.




Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your SCION dealer for a copy of this document.

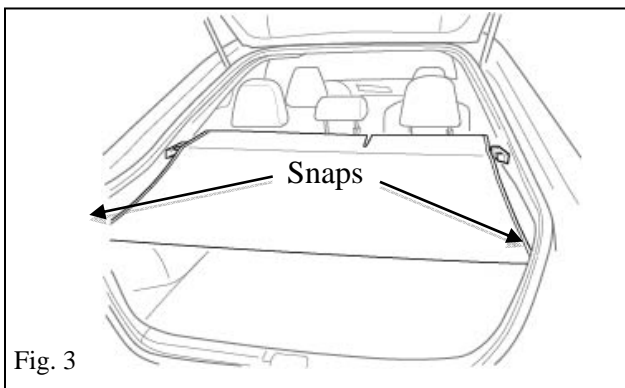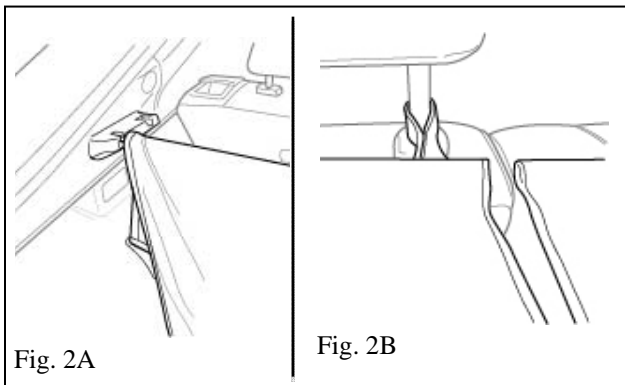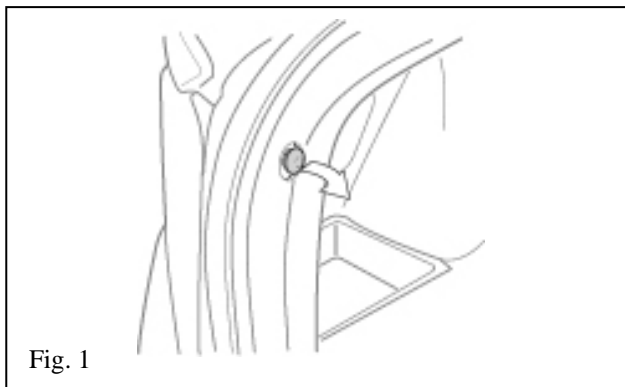

1. Open the vehicle rear hatch door and remove the snap covers located on the rear trim panel (driver and passenger side) (Fig. 1). Discard the snap covers.
2. Connect the two poles inside the cargo cover, as you would tent poles.
3. Place the cargo cover pole ends (driver and passenger side) into the rear slots (Fig 2A) that will hold the pole in place.
4. Wrap the four (4) straps with Velcro around the corresponding headrest posts (Fig 2B). Adjust the fabric of the cover for a good appearance.
5. Snap the cargo cover into place (one snap on each side) (Fig 3).

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Confirm the cover is attached properly to the anchor points in the vehicle.

Velcro straps are attached to the four headrest posts, the two poles are properly seated in their slots and that the two snaps are attached.

Vehicle Function Checks

-