

TOYOTA


GENUINE ACCESSORIES

INSTALLATION INSTRUCTIONS

Carpet Cargo Mat

APPLICABLE MODEL:
2012 Scion IQ Cargo Mat

PART NUMBER:
PT208-74110-10

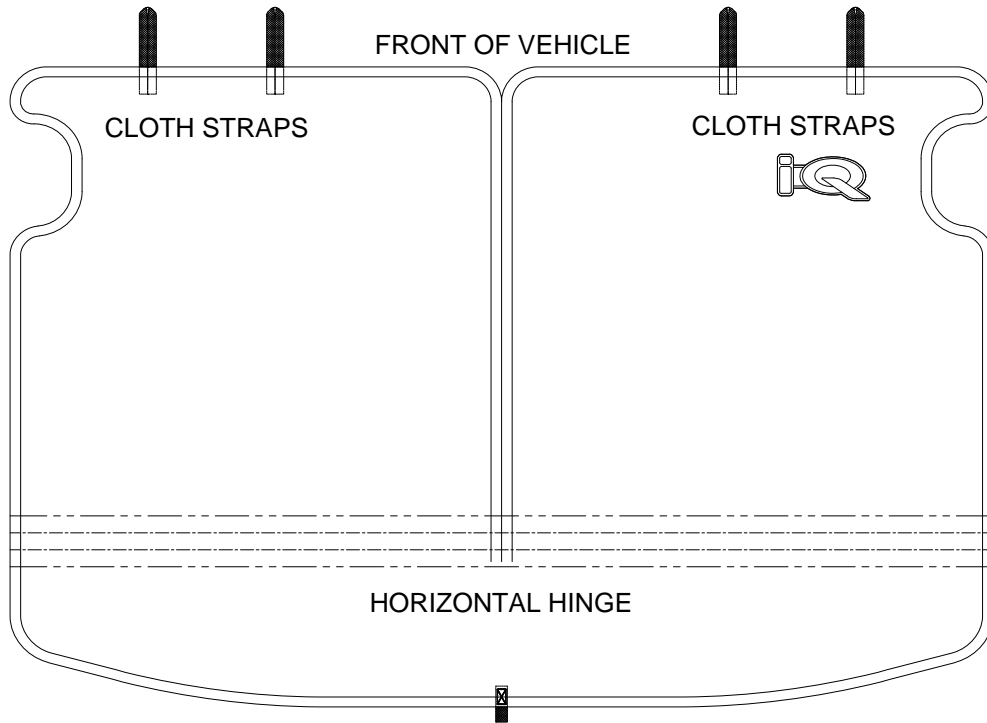

PREPARATION

1. Remove Cargo mat from the packaging bag.

2. Remove headrest from Left and Right side rear seat. Press the release button and pull up on the headrest to remove.



CARGO MAT INSTALLATION

1. Push seats down. Adjust cargo mat so that the forward and rearward edge align with interior trim.



Horizontal Hinge

2. Locate the horizontal hinges on the cargo mat. Raise the rear seats, while tucking only the cargo mat hinge area between the rear seat and storage compartment. Ensure the rear seats are locked by pushing forward.



3. Place the cloth straps over and under headrest retaining mechanism. Take the headrest and insert the posts into headrest retaining mechanism. Adjust headrest height as desired.

