

Part Number: PT420-00130

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Emergency Assistance Kit
2	1	Tether Strap, Heavy Duty P/N: PT420-08040
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	

General Applicability

All Toyota Vehicles







Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.

*Mandatory

TOYOTA ALL VEHICLES 2013 - EMERGENCY ASSISTANCE KIT Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

NOTE: "EAK" denotes Emergency Assistance Kit

1. Install Emergency Assistance Kit

(A) Cars/ SUVs / Van

- (1) Remove EAK from package.
- (2) Place the EAK in the trunk / cargo area of the vehicle. (Fig. 1-1)

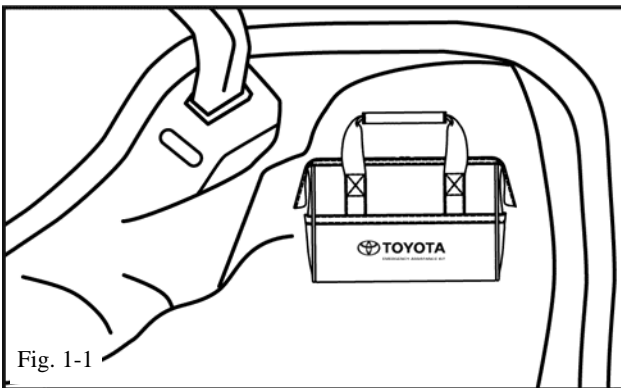


Fig. 1-1

(B) Trucks

- (1) Remove EAK from package.
- (2) Place EAK on the right front floor of vehicle. (Fig. 1-2)

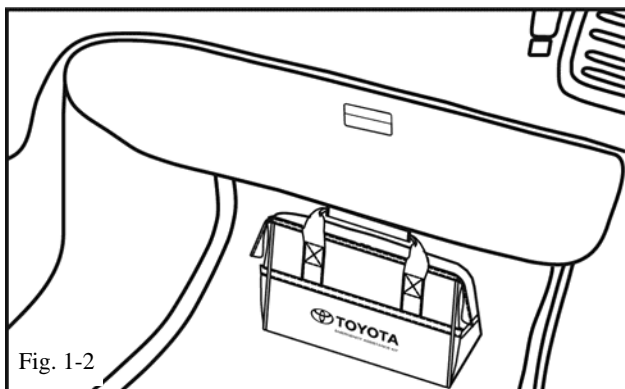


Fig. 1-2

TOYOTA ALL VEHICLES 2013 - EMERGENCY ASSISTANCE KIT
Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <ul style="list-style-type: none"><input type="checkbox"/> Confirm placement of Emergency Assistance Kit.<input type="checkbox"/> Confirm tether strap is tightened and kit is securely in place.<input type="checkbox"/><input type="checkbox"/>	<p>Whenever possible, Toyota name is visible and upright.</p> <p>Loose strap and secure placement</p>
<p><u>Vehicle Function Checks</u></p> <ul style="list-style-type: none"><input type="checkbox"/><input type="checkbox"/>	
<p><u>Vehicle Appearance Check</u></p> <ul style="list-style-type: none"><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)</p>