

Part Number: PU060-47211

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Rear Bumper Protector
2		
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

Ground effects

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
Non-intrusive Infrared Temp Probe/Gun	
Installation Tools	Notes
Clean Cloth Rag	
Special Chemicals	Notes
Cleaner	VDC Approved

General Applicability

All Prius v models

Recommended Sequence of Application


Item #	Accessory
1	
2	
3	


*Mandatory


Vehicle Service Parts (may be required for reassembly)


Item #	Quantity Reqd.	Description
1		
2		
3		


Legend


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

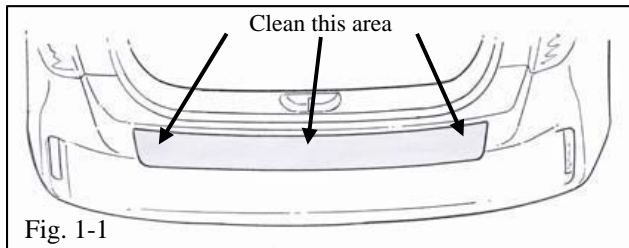


Fig. 1-1

1. Prepare the Vehicle.

- STOP** (a) Clean and degrease the top surface of the rear bumper with a non-scratch cloth and a VDC approved cleaner and cleaning method (Fig. 1-1). Do not allow the cleaner to air dry.
- (b) Wipe the cleaned bumper surface with a clean, dry lint-free cloth.

! NOTE: Once cleaned, do not contaminate this surface by touching it with bare hands.

2. Install the Bumper Protector.

- STOP** (a) The parts and the vehicle temperature must be between 15°C and 43°C (60°F and 109°F).
- !** (b) Use tape tab 1. Lift up and peel back the front tape liner 50mm to 75mm (2 to 3 inches) (Fig. 2-1).
- (c) Mount the bumper protector to the front edge of the bumper. Align the center arrow to the striker latch (Fig. 2-1).
- (d) Ensure no gapping occurs in the corners (Fig. 2-2).
- (e) Pull tape liner strip 1 off while holding the part in position, then press firmly along the tape length (Fig. 2-1).

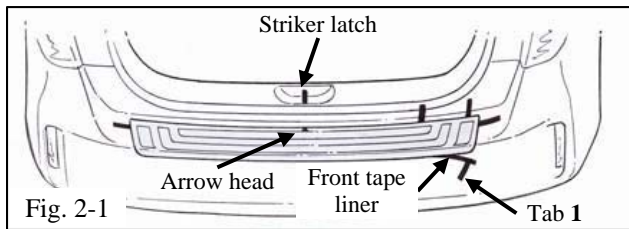


Fig. 2-1


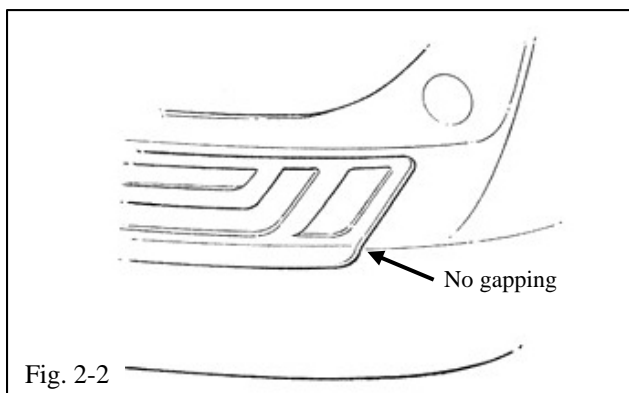


Fig. 2-2

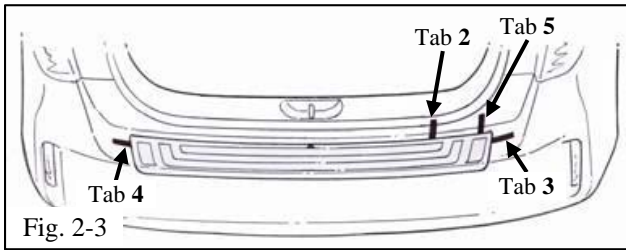

- (f) Pull tape tab and liners **2, 3, 4** and **5** off while holding the protector in position, then press firmly along the tape (Fig. 2-3).
- (g) Press firmly down on the bumper protector along the tape line to ensure complete adhesion to the bumper.

TOYOTA PRIUS v 2016 - REAR BUMPER PROTECTOR

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <ul style="list-style-type: none"><input type="checkbox"/> Proper adhesion<input type="checkbox"/> Proper part alignment<input type="checkbox"/><input type="checkbox"/>	<p>Ensure no gapping occurs in corners</p> <p>Centered to strike latch and front edge of bumper</p>
<p><u>Vehicle Function Checks</u></p> <ul style="list-style-type: none"><input type="checkbox"/><input type="checkbox"/><input type="checkbox"/>	
<p><u>Vehicle Appearance Check</u></p> <ul style="list-style-type: none"><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)</p>