

Part Number: PT347-52120

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Hardware bag

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	2	Cargo Net Bracket

Additional Items Required For Installation

Item #	Quantity Reqd.	Description

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
Special Tools	Notes
Installation Tools	Notes
Phillips Screwdriver	#2
Special Chemicals	Notes

General Applicability

Prius C with Tonneau Cover only

Recommended Sequence of Application

Item #	Accessory

*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description

Legend

 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.


This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document.



1. Installation of brackets

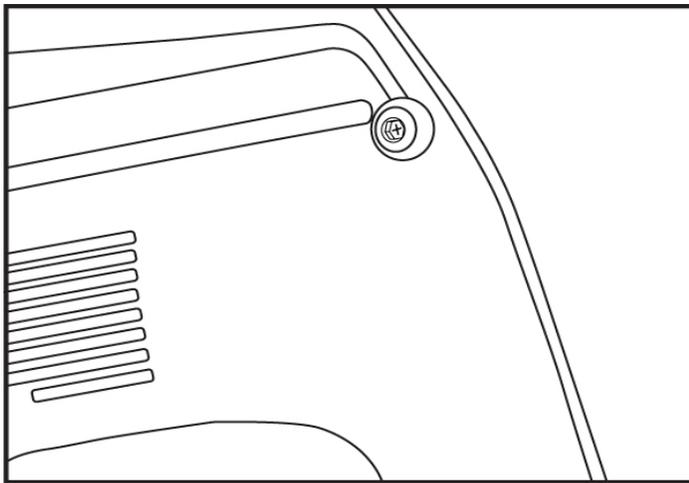

- (a) Open the rear cargo door and locate the panel shown on the passenger's side of the vehicle.

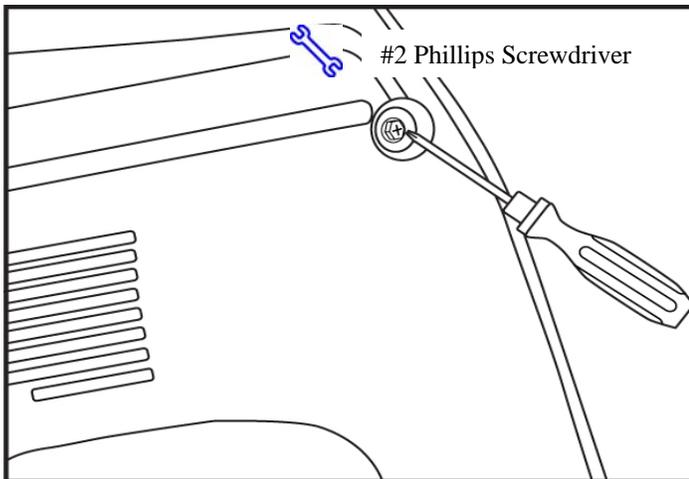

- (b) Remove and retain the screw using a #2 Phillips screwdriver (Fig. 1-1).

Fig. 1-1

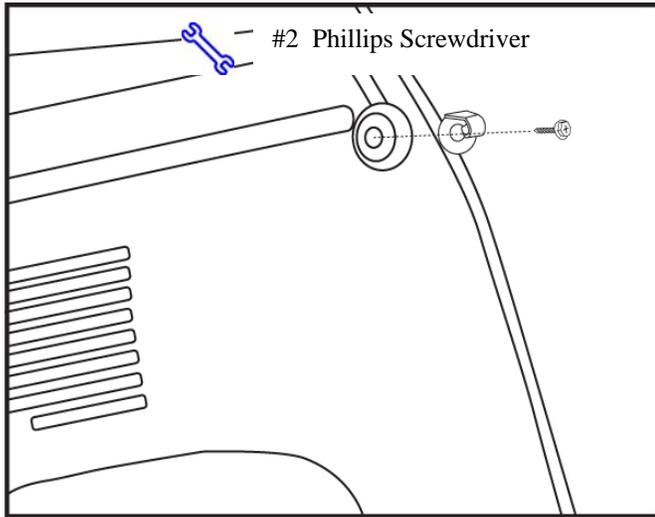


Fig. 1-2

-  (c) Passenger side.
Select a cargo net bracket. Install cargo net bracket with the screw removed from step 1(b) (Fig. 1-2).

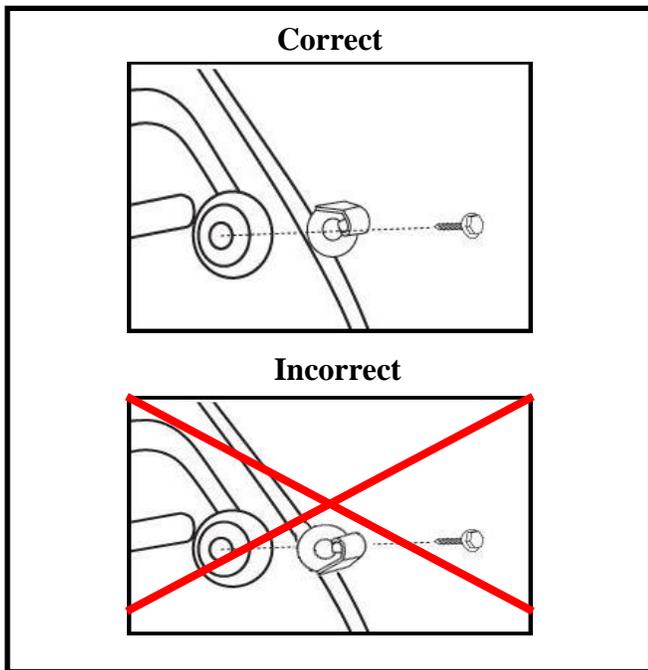


Fig. 1-3

-  (d) Ensure the hook is located on the top of the opening.
- (e) Tighten with a #2 Phillips screwdriver (Fig. 1-3).

DO NOT OVER-TIGHTEN SCREW

- (f) Driver side. Repeat steps 1 (b) through 1(e) to install the other cargo net bracket.

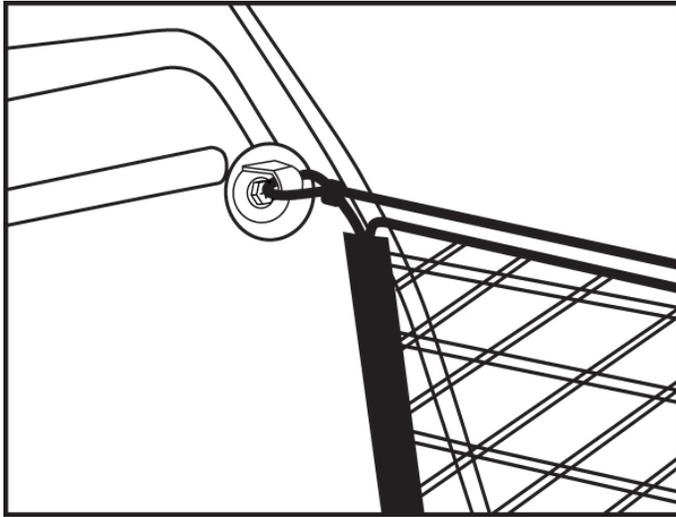


Fig. 2-1

2. Installation of Cargo Net

- (a) Orient the net so the pull-tab is facing towards the rear of the vehicle and install the upper bungee loop over the passenger side hook as shown (Fig. 2-1).

- (b) Repeat step 2(a) for the driver side of vehicle.

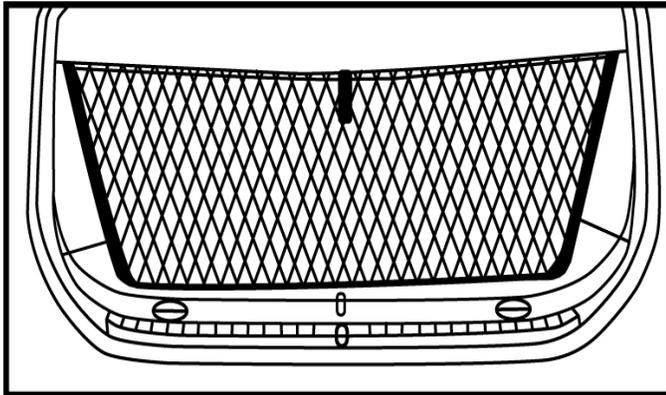


Fig. 2-2

- (c) Completed assembly as shown (Fig. 2-2).

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <p><input type="checkbox"/> Correct orientation of hooks.</p> <p><input type="checkbox"/> Pull Tab orientation.</p>	<p>Insure hooks are located in the top of the recessed opening after the screw is tightened.</p> <p>Make sure the net's plastic pull tab is facing rearward.</p>
<p><u>Vehicle Function Checks</u></p> <p><input type="checkbox"/> Rear cargo door.</p>	<p>Rear cargo door should open and close freely without interference from cargo net.</p>