

Preparation

**Part Number: PT420-03023**  
**PT420-0009T**

**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	First Aid Kit
2		
3		

**Hardware Bag Contents**

Item #	Quantity Reqd.	Description
1		
2		
3		

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description
1		
2		
3		

**Conflicts**

Note: None

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
None	
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**

Note: All Toyota Vehicles

**Recommended Sequence of Application**






Item #	Accessory
1	
2	
3	

\*Mandatory

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

**Legend**

	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury.
	<b>CAUTION:</b> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	<b>TOOLS &amp; EQUIPMENT:</b> Used in Figures calls out the specific tools and equipment recommended for this process.
	<b>REVISION MARK:</b> This mark highlights a change in installation with respect to previous issue.

**Procedure**

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document.

**NOTES:** "FAK" denotes First Aid Kit

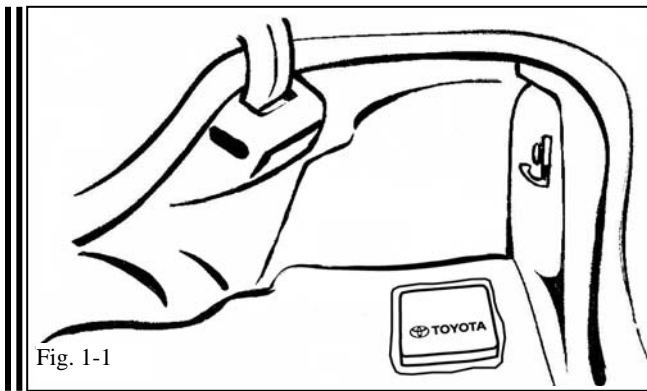

**1. Install First Aid Kit.**

(A) Cars / SUVs / VAN: Place the FAK in the right rear corner of the trunk / cargo area of the vehicle. (Do not remove FAK from package). (Fig 1-1)

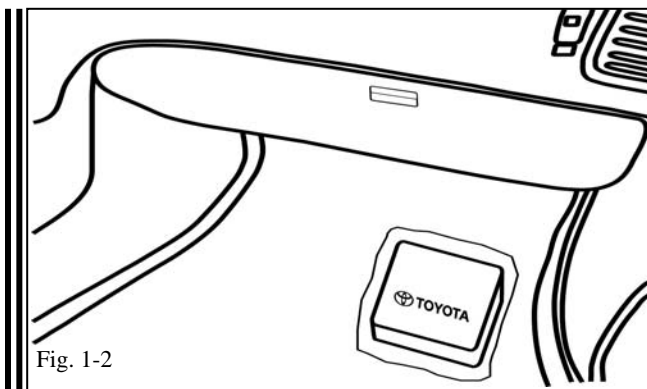

(B) Trucks: Place the FAK on the right / front floor of the vehicle. (Do not remove FAK from package). (Fig 1-2)

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

Confirm proper placement of First Aid Kit.

Whenever possible, "Toyota" name is visible and upright.

Vehicle Function Checks