

**Part Number: PT347-35070**

**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Installation Instructions

**Hardware Bag Contents**

Item #	Quantity Reqd.	Description
1		

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description
1		

**Conflicts**

--

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
None	
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**

--

**Recommended Sequence of Application**

Item #	Accessory
1	
2	
3	

\*Mandatory

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

**Legend**



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.




This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

### 1. Installation of Cargo Net.

- (a) Open hatch, locate anchor locations on the driver's side of the vehicle (Fig 1-1.)
- (b) Attach loop at the top of the net to the vehicle anchor as shown (Fig. 1-2).
- (c) Attach hook at the bottom of the net to the D-ring on the vehicle as shown (Fig. 1-3).

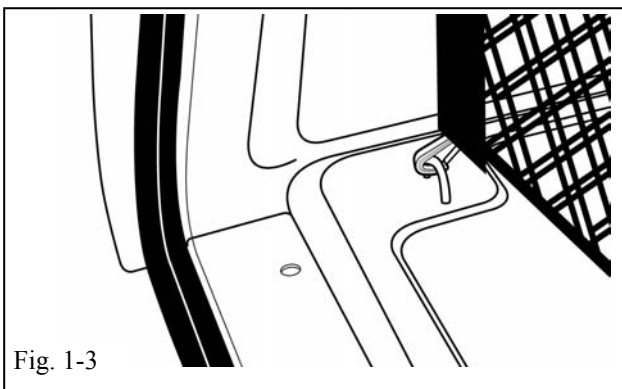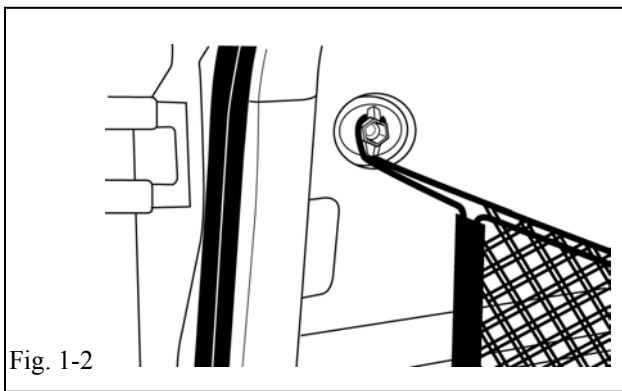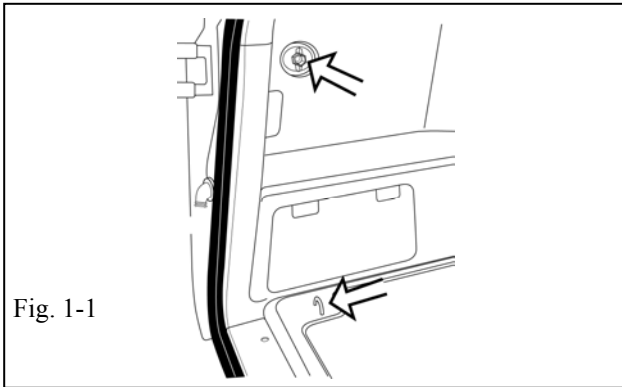

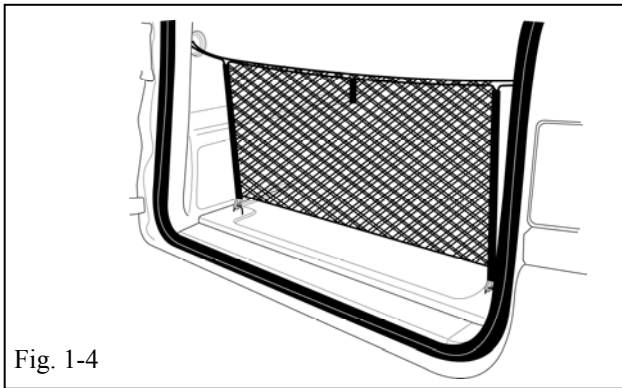



Fig. 1-4

- (d) Review driver's side attachment (Fig. 1-3).
- (e) Repeat steps 1(a) through 1(d) for the passenger side of the vehicle.
-  (f) Confirm completed assembly. Make sure net handle is facing out toward the rear of the vehicle (Fig. 1-4).

Check:

Accessory Function Checks

- Confirm that the net is attached properly to the anchor points in the vehicle.

Look For:

Make sure hooks are attached to floor D-rings and the loops are attached to the vehicle anchors at the top. The net handle should face out toward the rear of the vehicle.