

**Part Number: PT347-0T090  
PT347-0T095**

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Installation Instructions

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Reqd.	Description

**Hardware Bag Contents**

Item #	Quantity Reqd.	Description

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description

**Conflicts**

--

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
None	
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**

All 2009> Venza vehicles
--------------------------

**Recommended Sequence of Application**

Item #	Accessory

\*Mandatory

**Legend**



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

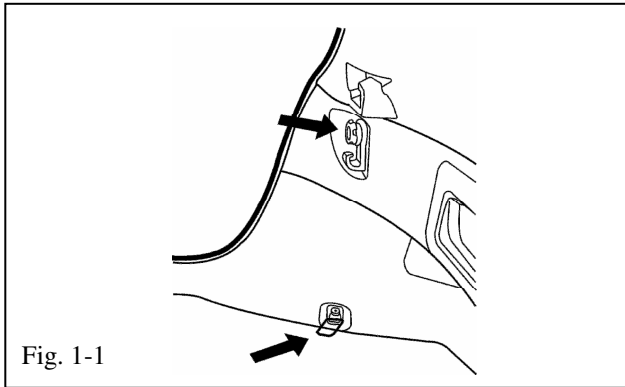



### 1. Installation of Cargo Net


- (a) Starting on the driver's side of the vehicle, locate the anchor points in the cargo area as shown (Fig 1-1).

HINT: Layout the net so that the net handle will be facing the rear of the vehicle.


- (b) Attach the loop at the top of the net to the vehicle anchor as shown (Fig 1-2).


- (c) Attach the hook at the bottom of the net to the vehicle D-ring as shown (Fig. 1-3).

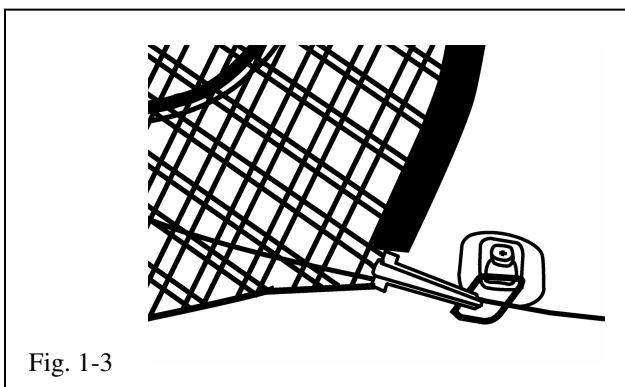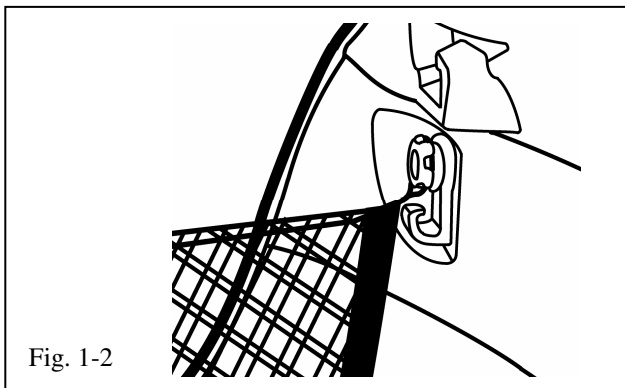

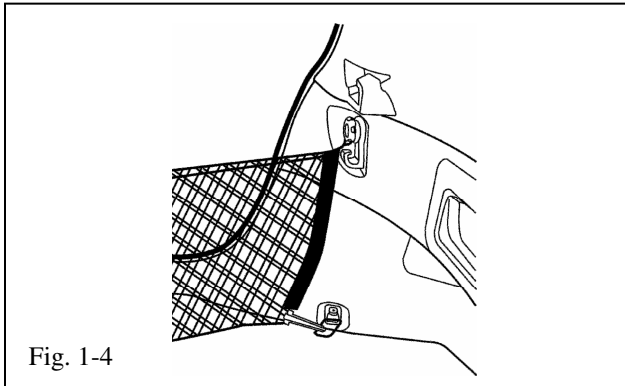

- (d) Attachment complete on the driver's side. Repeat step 1(a) through 1(c) for the passenger's side of the vehicle (Fig. 1-4).

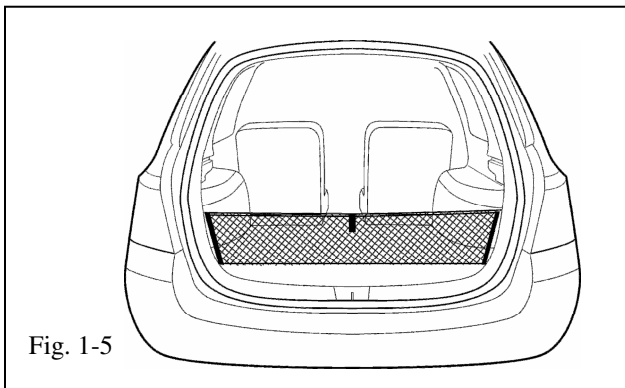

-  (e) Completed assembly. Make sure handle is facing outward toward the rear of the vehicle (Fig 1-5).

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Confirm that the net is attached properly to the anchor points in the vehicle.

- Loops are attached to the anchors at the top.
- Hooks are attached to lower D-rings.