

Part Number:
PT580-35050-SB
PT580-35050-LB

NOTE: Part number of this accessory may not be the same as the part number shown

Kit Contents

Item #	Quantity Req.	Description
1	1	Bed Mat

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req.	Description
1		
2		
3		

Hardware Bag Contents

Item #	Quantity Req.	Description

Additional Items Required For Installation

Item #	Quantity Req.	Description

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes

General Applicability







--

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.
	SAFETY TORQUE: This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

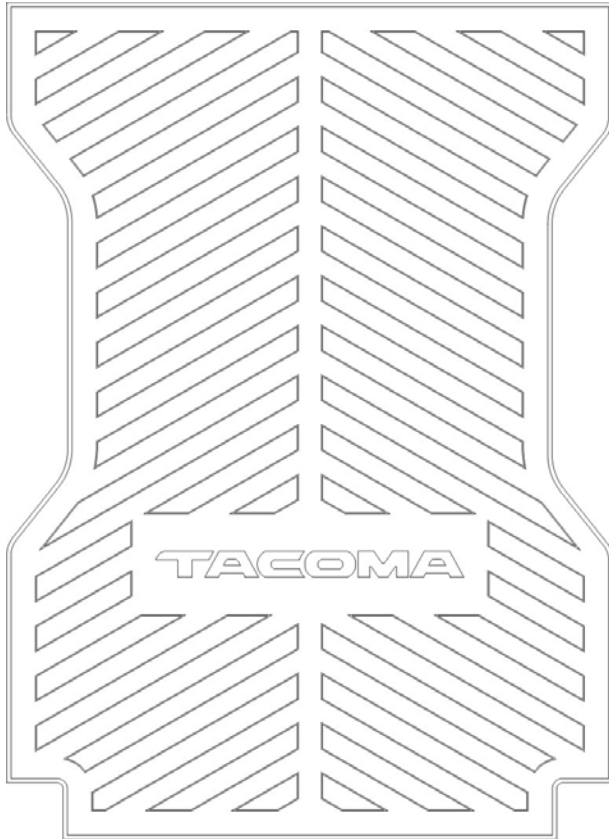


Fig 2-1

1. PREPARATION

- (a) Open package and check part for damage and kit contents.
- (b) Remove all cargo or debris from truck bed.

2. INSTALL THE BED MAT

- (a) Place Bed Mat in truck bed with logo towards the rear of the truck and facing up. (Fig 2-1)
- (b) Position the Bed Mat so it is centered around the trunk wheel.

3. COMPLETE THE INSTALLATION

- (a) Remove the vehicle protection.
- (b) Close Tail gate.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

Correct part number has been installed.

Verify part number on package.

Vehicle Function Checks