

**Part Number: PT908-08130-20**

**NOTE:** Part number of this accessory may not be the same as the part number shown.

**Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Front Driver Mat (with warning tag installed)
2	1	Front Passenger Mat
3	1	2nd Row Driver Side Mat
4	1	2nd Row Passenger Side Mat
5	1	2nd Row Center Mat
6	1	Aisle Mat
7	1	3rd Row Driver Side Mat
8	1	3rd Row Passenger Side Mat

**Hardware Bag Contents**

Item #	Quantity Reqd.	Description

**Additional Items Required For Installation**

Item #	Quantity Reqd.	Description

**Conflicts**

Not intended for Mobility vans

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
None	
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**


**Recommended Sequence of Application**







Item #	Accessory

\*Mandatory

**Vehicle Service Parts** (may be required for reassembly)

Item #	Quantity Reqd.	Description

**Legend**

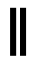
	<b>STOP:</b> Damage to the vehicle may occur. Do not proceed until process has been complied with.
	<b>OPERATOR SAFETY:</b> Use caution to avoid risk of injury.
	<b>CAUTION:</b> A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	<b>TOOLS &amp; EQUIPMENT:</b> Used in Figures calls out the specific tools and equipment recommended for this process.
	<b>REVISION MARK:</b> This mark highlights a change in installation with respect to previous issue.
	<b>SAFETY TORQUE:</b> This mark indicates that torque is related to safety.

# CUSTOMER CARE CARD


TO BE PLACED IN GLOVE BOX FOR FUTURE REFERENCE

Your Sienna All Weather Mats have been designed to fit the ideal 2nd and 3rd row seating positions. In order to move the 2nd row seat forward or rearward, you may need to temporarily adjust or remove the all weather mats.


## All Weather Mat Identification

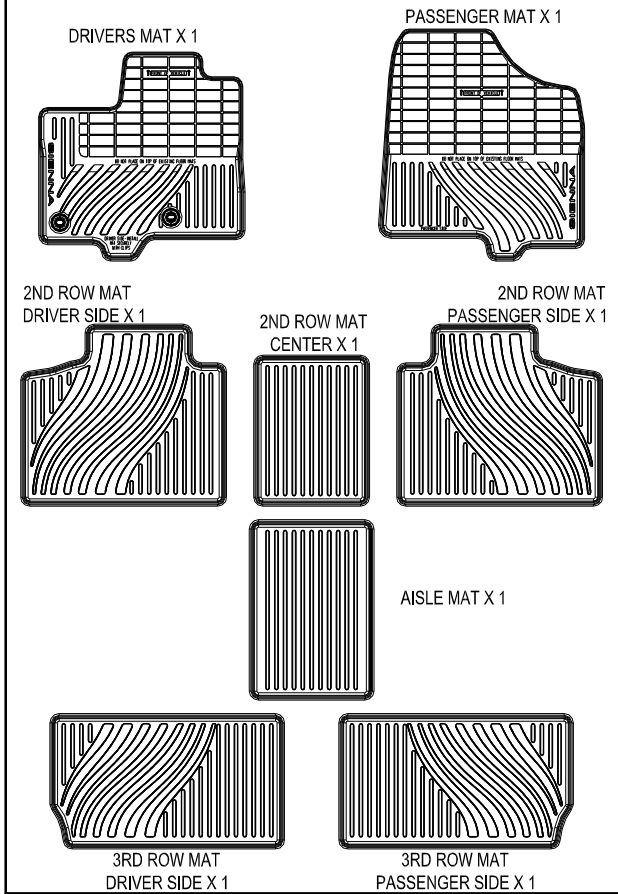


## 8 Passenger - Fixed Console

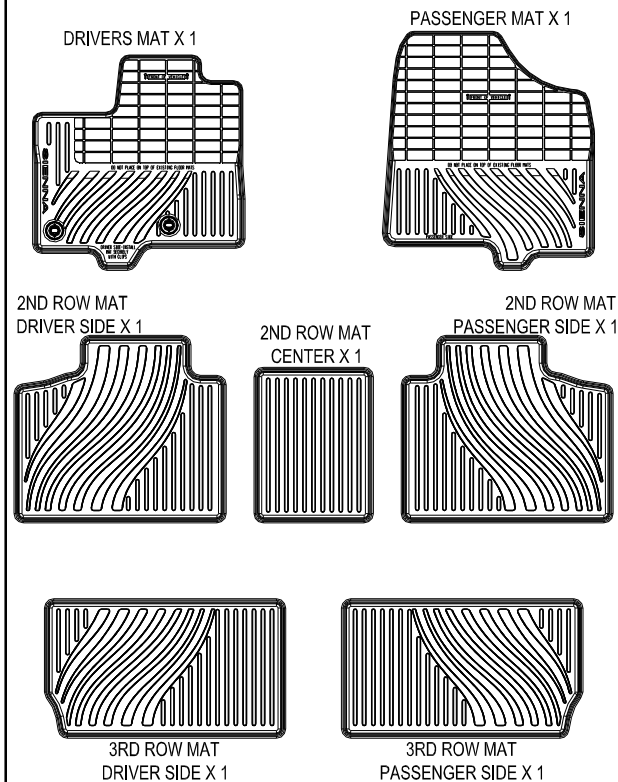

## 7 Passenger - Fixed or No Console

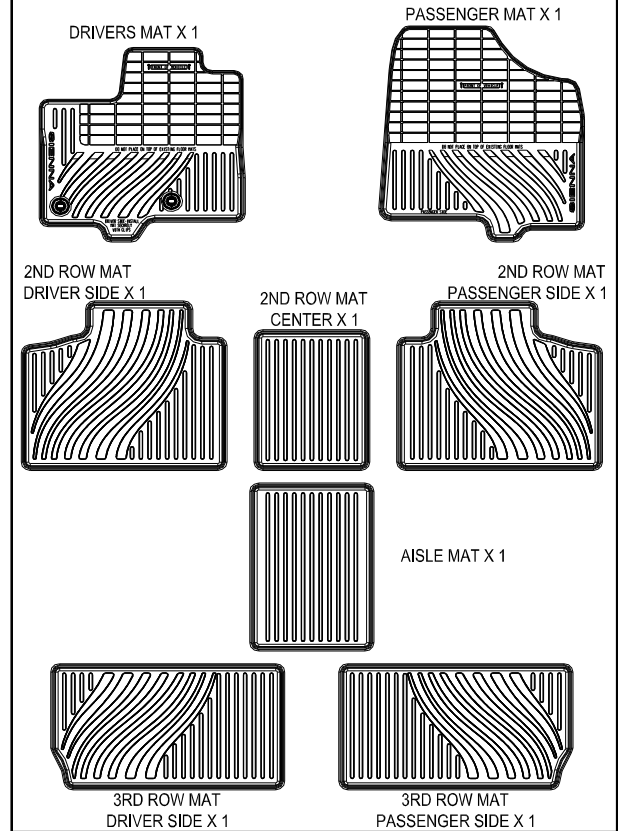

## 7 Passenger - Sliding Console

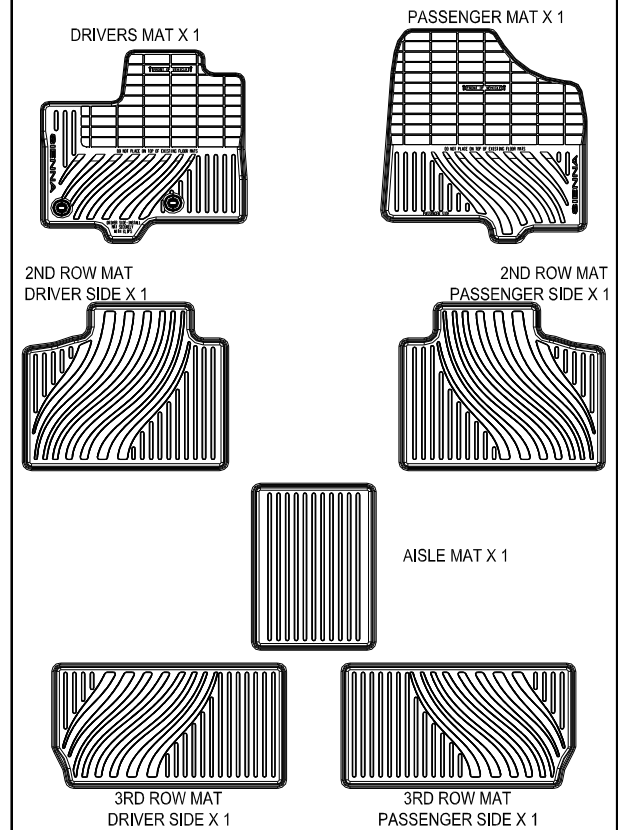

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Removal of all existing floor mats - Visual
- Proper retention of All Weather Floor Mats
- Alignment - Visual

- Rubber or carpet floor mats prior to install.
- Ensure front driver mat grommets are installed on retention posts and the turn lock as been rotated to secure mat
- Mats to fit properly in vehicle

Vehicle Function Checks

- Accelerator Pedal Operation

- Ensure installed mats does not interfere with accelerator pedal operation

**WARNING: Do not stack mats on top of existing mats**

Vehicle Appearance Check

- After accessory installation and removal of protective cover(s), perform a visual inspection.

Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)